

CARE INSTRUCTIONS

Outdoor furniture should be covered when not in use to protect against the elements. Before placing covers on furniture, spray off any debris with a hose and wipe furniture dry with a soft cloth; residue trapped on the surface can create mould. For ongoing care of covers, spray off any dirt or debris with a hose once a month. A more rigorous cleaning will be needed every year; use a soft bristle brush and a cleaning mixture of cold or lukewarm water (under 38°C) and mild, natural soap. Avoid harsh detergents. For stubborn stains, apply a mixture of diluted chlorine bleach and water. Lightly spray mixture on the fabric (non-coated side). Do not soak fabric for more than 2 minutes; prolonged exposure to harsh chemicals can damage the interior lining. Rinse thoroughly.

Air dry only.

HOW TO USE

1. Thoroughly clean all furniture and cushions before storage. Allow furniture to completely dry before storage. For detailed furniture cleaning instructions, please refer to our care documents for each material type.
2. Cushions should be stored in a dry place during winter months and when not in use for extended periods of time. Cushions must be completely clean and dry before storage.
3. If it's not possible to store cushions, lay back cushions down flat on the seat before covering. This will allow the cover to fit properly.
4. Place cover over furniture; the side that has the long strap attached goes in the back. If your cover has a zip, cover the furniture with the zip open, then zip close for a secure fit.
5. For sectionals, arrange the furniture as you normally configure it and place each cover over the appropriate piece; the side with the long strap attached goes in the back. Zip covers together from the back to the front. (See Image B.)
6. Bring straps underneath the furniture from back to front and buckle to keep covers secure.
7. *For tables:*
All covers for dining tables, dining table sets, coffee tables, side tables and console tables should be placed over the tenting devices that are included. These devices provide elevation, allowing water to run off and not puddle. When one tent is included, place it in the centre of the table; when your cover comes with two tents, space them evenly along the length of the table top. (See Image A.)

Custom dining sets:

Dining set covers require all the dining chairs to be pushed under the table as far as possible. Dining set covers are available for most RH collections. If you do not see your specific configuration, please contact your local gallery or call 800.762.1005.

FEATURES OF OUR COVERS

 
To protect your outdoor furniture investment, we strongly recommend covering your frames when not in use for an extended period of time and during winter months. Before covering, furniture must be thoroughly cleaned and completely dried to prevent mildew during storage. For detailed furniture cleaning instructions, please refer to our care documents for each material type.

Custom-fit for our outdoor furniture, our covers offer superior performance and are made of breathable, stain-resistant fabric that's highly resistant to mould, tearing and fading. They're the design industry's choice for protecting furniture from dust and dirt, harsh ultraviolet rays and inclement weather.

- Custom-fit for our outdoor furniture collections
- Durable 100% solution-dyed polyester fabric
- Breathable fabric resists mould and mildew
- Resists shrinkage, fading, UV rays and harsh weather
- Holds its shape without tearing or stretching
- All-weather fabric is water-resistant
- Secures with straps and a self-release buckle

TENTING DEVICE

Tenting device provided to ensure water doesn't puddle on frame.

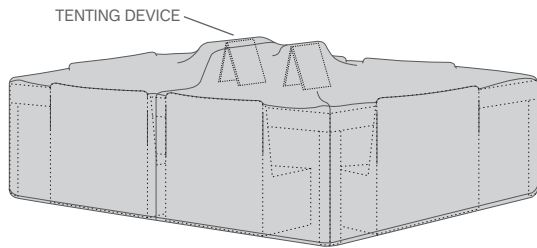


Dining Table Set Cover

Image A


SECTIONAL COVERS

A custom-fit cover is available for each of our sectional components. Components are named by the position of the arm as you face the piece. If your sectional configuration is armless on one or both sides, you will need to purchase either one or two end panels for complete coverage, as shown below.

For a sectional configuration with 2 armless sides, you'll need to purchase a left end panel and a right end panel.

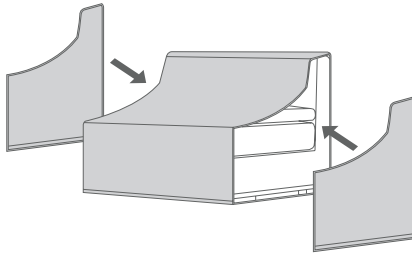

For a sectional configuration with one armless side, you'll need to purchase one (left or right) end panel.

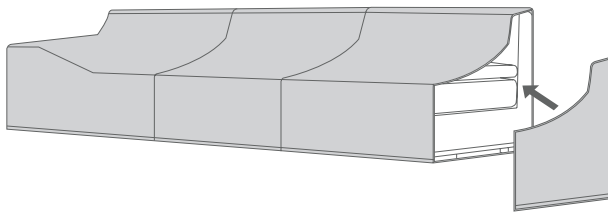

Sectional configurations with arms at both ends do not require separate end panels.



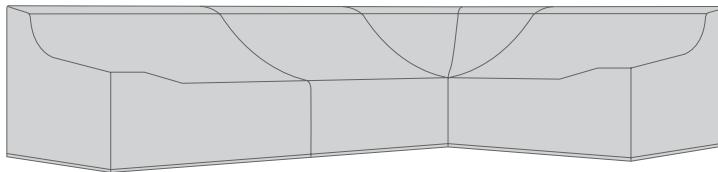 



Image B

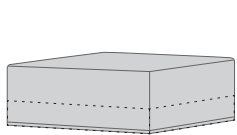 


Ottoman Cover

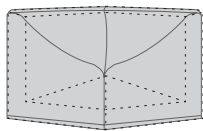 


Corner Chair Cover

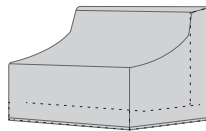 


Armless Chair Cover

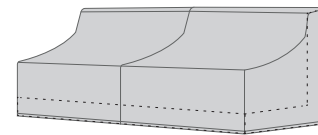 


Armless Sofa Cover

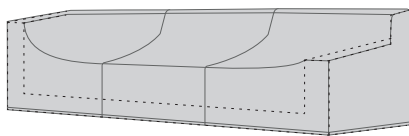 


Return Sofa Cover

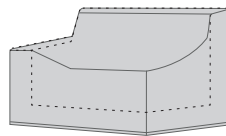 


Left-Arm Chair Cover

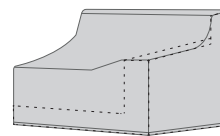 


Right-Arm Chair Cover

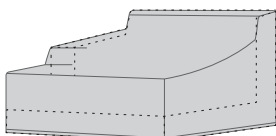 


Left-Arm Chaise Cover

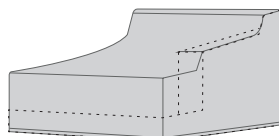 

Right-Arm Chaise Cover

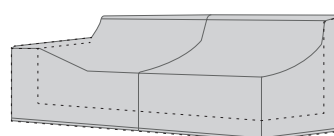 

Left-Arm Sofa Cover

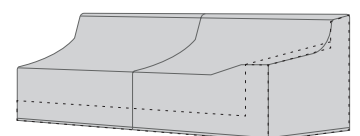 

Right-Arm Sofa Cover

FREQUENTLY ASKED QUESTIONS

WHAT KIND OF FABRIC IS USED TO MAKE RH FURNITURE COVERS?

RH uses breathable, stain-resistant fabric that's highly resistant to water, mould, mildew, tearing and fading. Additionally, it protects furniture from dust and dirt, harsh ultraviolet rays and inclement weather.

HOW DO I USE MY RH FURNITURE COVER?

Furniture frames and cushions must be thoroughly cleaned and dried before covering.

- If possible, cushions should always be removed to protect against mould spores that thrive in damp environments. However, your RH cover was designed for the cushions to be on the frame, with the back cushions laid flat on the seat cushion(s), so if storing cushions is not an option, they will be protected by the breathable, stain-resistant cover if properly cleaned and dried.
- If your furniture has back cushions, lay them down flat on top of the seat cushions before putting the cover on. This will ensure the cover fits properly.
- If your cover is for a dining table set, make sure all chairs are pushed in as far as possible before putting the cover on.
- For dining tables, coffee tables and side tables, place the included tenting device(s) on the flat surface before putting the cover on.

Place the cover(s) over the furniture. Ensure that the long straps are at the back and the short straps are in the front. If your cover has a zip, unzip before placing over the frame, and then zip up once properly placed. Feed the long straps under the furniture to the front, and secure the straps with the attached buckles. Tighten the straps for a secure fit.

WHAT ARE TENTING DEVICES AND HOW DO I USE THEM?

Tenting devices are included with most coffee table, side table, dining table, dining table set and daybed covers. They are designed to help water run off the cover instead of pooling on the large, flat surface. Tenting devices are placed on the flat surface of the furniture frame before the cover is put on. The cover should sit over the tenting devices.

I ORDERED MULTIPLE COVERS. HOW CAN I TELL WHICH COVER IS WHICH?

On the front of the cover near the short strap and buckle, there are two labels; one of the labels has the name of the cover, identifying which frame it fits.

MY COVER DOESN'T FIT. WHAT SHOULD I DO?

- Check the description label at the front of the cover (next to the short strap) to ensure that the cover is being placed on the correct frame.
- If your furniture has back cushions, lay them down flat on top of the seat cushions before putting the cover on. This will ensure the cover fits properly.
- If your cover has a zip, make sure the zip is unzipped. This will help the cover go over the frame more easily.
- If your cover came with tenting devices, make sure they are upright and placed on the flat surface of the frame.

If none of the above steps helps, contact RH customer service at 800.762.1005.

WATER IS POOLING ON MY COVER. WHAT SHOULD I DO?

- Make sure all included tenting devices are upright and placed on the flat surface of the frame.
- Ensure that all back cushions are laid down flat on the seat cushion(s). The covers were designed to help water run off by placing the cushions flat.
- Make sure the cover is pulled as far down as possible on the frame to prevent sagging on top, which could cause water to collect. Secure cover with the attached straps and tighten to ensure the cover stays taut and in place.
- Check the description label at the front of the cover to ensure that the cover matches the furniture frame.

If none of the above steps helps, contact RH customer service at 800.762.1005.