

RH

LEVI TASK WALL LAMP COLLECTION

ASSEMBLY & INSTALLATION INSTRUCTIONS

UNITED STATES ENGLISH


LEVI TASK WALL LAMP

PARTS INCLUDED

- (A) Wall Bracket (1)
- (B) Wall Bracket Screws (2)
- (C) Lamp Body (1)
- (D) Stem (1)
- (E) G9 LED Bulb (3)
- (F) Diffuser (1)
- (G) Disc Finial (1)
- (H) Rotary Dimmer Switch (1)

**TOOLS NEEDED
(IF APPLICABLE)**

- (I) Phillips Head Screwdriver
(not included)

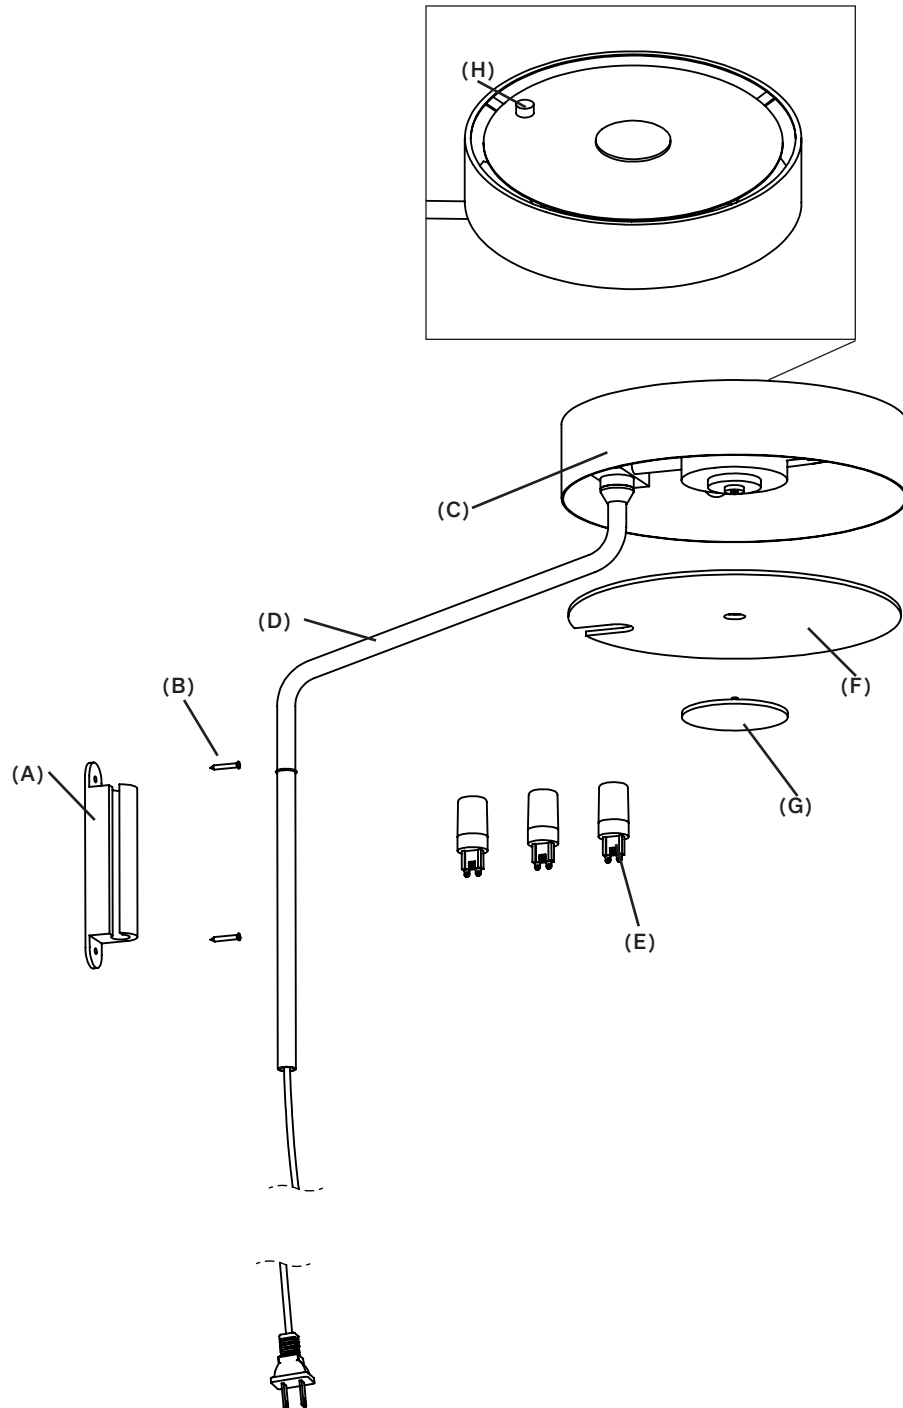

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR YOUR CONVENIENCE AND SHOULD BE USED WITH DISCRETION. ALWAYS USE THE APPROPRIATE HARDWARE FOR THE MOUNTING SURFACE.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for up to three (3) 6-watt maximum LED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

DIMMER-SWITCH COMPATIBILITY

This fixture is not dimmer-switch compatible.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

1. Attach wall bracket (A) to wall with wall bracket screws (B)
2. Insert the power cord through the slot in the side of the wall bracket (A).
3. Feed the cord through the wall bracket (A) until the stem (D) is securely seated in the wall bracket (A).
4. Insert the three G9 LED bulbs (E) into the sockets in the lamp body (C).
5. Align the diffuser (F) with the bottom of the lamp body (C) and attach by screwing in the disc finial (G).
6. This fixture allows rotation at the wall bracket (A) and where the stem (D) enters the lamp body (C). NOTE: This fixture does not allow height adjustment.
7. Insert plug into wall outlet to power the fixture. Rotary dimmer switch (H) is located on the top surface of the lamp body (C). For best dimming performance, turn the switch up to full brightness before dimming down to the desired level.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.