

RIVAGE ROUND FLUSHMOUNT 14"

ASSEMBLY & INSTALLATION INSTALLATIONS UNITED STATES ENGLISH



## **RIVAGE ROUND FLUSHMOUNT 14"**

## PARTS INCLUDED:

(A) Junction Box, 50 lb./22.7 kg MIN. FIXTURE RATED (not included)

(B) Mounting Screws (4 Pcs; not included)

(C) Wire Nuts (3)

(D1) Ceiling Plate (1)

(D2) Canopy (1)

(D3) Bolts (4)

(E) Round Ring (1)

(F) Fixture Body (1)


(G) Set Bolts (4)

(H) Allen Key (1)

#### PRODUCT DESCRIPTION

General material: Glass and iron

Height: 4.75in (12.3cm) Diameter: 14.0in (35.5cm) Weight: 29.10lb (13.2kg) Grounded/hardwired

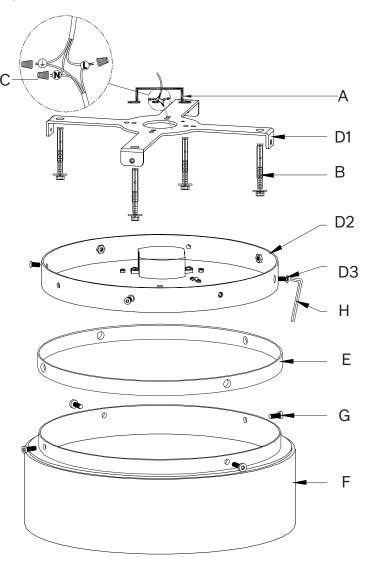



RH.COM

## IMPROTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A WOODEN STRUCTURAL BEAM. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION. INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

#### IMPORTANT SAFETY FEATURES

## **BULBS**

This fixture has been rated for up to 25-watt maximum LED strip. To avoid the risk of fire, do not exceed the recommended wattage.

#### **VAULTED CEILING COMPATIBILITY**

This fixture is not vaulted-ceiling compatible.

#### DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a dimmer switch.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

#### WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



## ASSEMBLY AND INSTALLATION

# SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings.
- Turn OFF power to junction box where the ceiling light will be installed.
- 3. Loosen the bolts (D3) from the canopy (D2) and remove the ceiling plate (D1) from the canopy (D2).
- 4. Attach ceiling plate (D1) to the ceiling with mounting screws (B).
- 5. Carefully inspect the chandelier's two fixture wires. One has very fine ridges molded into the plastic covering – this is the neutral wire. The second wire's covering is smooth – this is the hot wire. The bare wire is the ground wire.
- Connect the ground wire from the fixture with the ground wire (usually bare) from your ceiling box using a wire nut (C). If your housedoes not have a ground wire, then attach the ground wire from the fixture to the green grounding screw inside of the outlet box.IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED
- 7. Connect the neutral wire from your fixture with the neutral wire

- (usually white) from your ceiling box using a wire nut (C).
- Connect the hot wire from your fixture with the hot wire (usuallyblack) from your outlet box using a wire nut (C). DO NOT RE-VERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETYWILL BE COMPROMISED
- Move the canopy (D2) up to the ceiling plate (D1), then fasten the screw bolt (D3).
- Locate the metal ring (E) onto body (F), then attah body (F) to the canopy (D2) with set bolts (G).
- 11. Restore power to the junction box and test ceiling light fixture.
- 12. Assembly is complete.



# **CARE INSTRUCTIONS**

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.