
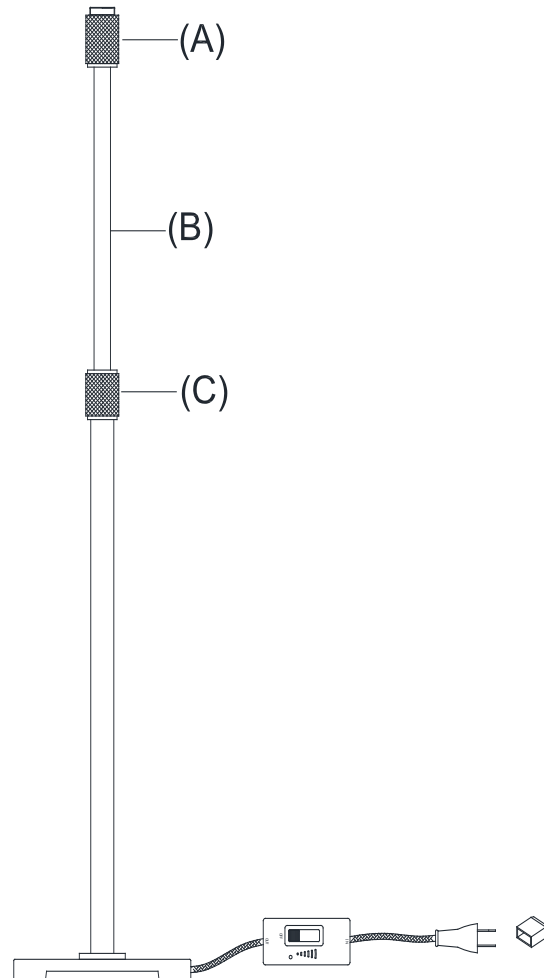
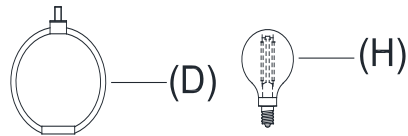


# RH

## UTILITAIRE TABLE LAMP

### PARTS ENCLOSED

- (A) Socket (1)
- (B) Upper Pole (1)
- (C) Threaded Collar (1)
- (D) Harp (1)
- (E) Shade (1)
- (F) Flat Washer (1)
- (G) Finial (1)
- (H) Bulb (1)

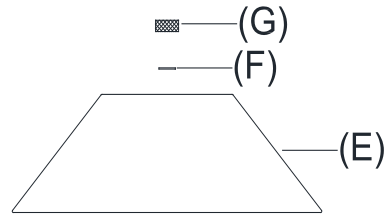

## UTILITAIRE TABLE LAMP

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 40-Watt maximum Type G bulb (not included), one (1) 9-Watt compact fluorescent light (not included) or one (1) 5.5-Watt SBLED lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Finial (G) and Flat Washer (F) from Harp (D).
3. Screw the bottom ring of Harp (D) onto the top of Socket (A).
4. Place Shade (E) onto the bolt on top of Harp (D), then tighten with Flat Washer (F) and Finial (G).
5. Insert Bulb (H) into Socket (A).
6. Plug into proper electrical outlet and test fixture.
7. Assembly is complete.

## TO ADJUST HEIGHT:

1. Loosen Threaded Collar (C) in a counter-clockwise direction.
2. Adjust lamp by pulling or pushing Upper Pole (B) up or down to desired height.
3. Tighten Threaded Collar (C) in a clockwise direction.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the lamp. Wipe clean with a soft, dry cloth.