
RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) Mounting Plate (1)
- (B) Wall Anchors (2)
- (C) Mounting Screws (2)
- (D) Back Plate
- (E) Plate Screws (2)
- (F) Candle Cover
- (G) Bulb
- (H) Cord cover (1)

LIBRARY SCONCE

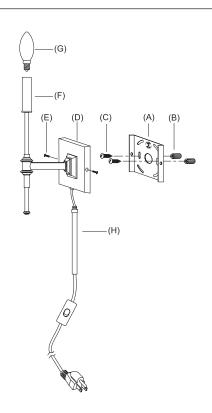

Installation with Cord Cover

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a three-prong grounding plug as a safety feature to reduce the risk of electric shock. This plug will fit in a grounding receptacles only one-way. If the plug does not fit fully in the grounding receptacles, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

This fixture has been rated for up to (1) 40-watt maximum TYPE B bulb.

To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result.

Do not connect electricity until your lamp is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.

Keep flammable materials away from lit bulb.

DO NOT REMOVE THE CARDBOARD INSULATOR SURROUNDING THE SOCKET.

TO ASSEMBLE:

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Place mounting plate (A) against the wall at the desired mounting location.
- 3. Mark the location of the mounting holes on the wall using a pencil.
- 4. Using the marks in the previous step as a guide, drill holes for the wall anchors (B). Insert the wall anchors into the holes, using a hammer to fully insert until flush with the wall.
- Align the holes in the mounting plate (A) with the wall anchors in the wall. Using a screwdriver, secure the mounting plate to the wall with the enclosed mounting screws (C)
- 6. Attach the back plate (D) to the mounting plate, marking sure to align the pre-drilled holes in the back plate with the pre-drilled holes in the mounting plate. Secure using the enclosed plate screws (E). Tighten with a screwdriver.
- 7. Insert a 40 watt Type B bulb (included) into threaded socket.
- 8. Place a clip shade (not included) onto the bulb.
- 9. Plug into proper electrical outlet and test fixture.
- 10. Assembly is complete.

FOR CORD COVER INSTALLATION, REFER TO THE INSTRUCTIONS BELOW:

- 1. Thread the cord cover (H) clockwise onto back plate (D) till tight.
- 2. Cord cover installation is complete.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp. JUST WIPE CLEAN WITH SOFT CLOTH.