

RESTORATION HARDWARE

Our lighting assortment is crafted from high quality materials such as cast brass and solid crystal. Each lamp is clad in one of our signature finish options and the surfaces sealed to eliminate the need for polishing. A full-range dimmer switch housed in a cast socket is included on most styles.

PARTS ENCLOSED:


- (A) FINIAL
- (B) SHADE RISERS
- (C) HARP
- (D) HARP SADDLE
- (E) POLARIZED PLUG
- (F) PLUG COVER

IMPORTANT SAFETY INSTRUCTIONS:

- *These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- *DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.
- *This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.

DO NOT ALTER THE PLUG

FLUTED COLUMN ACCENT LAMP

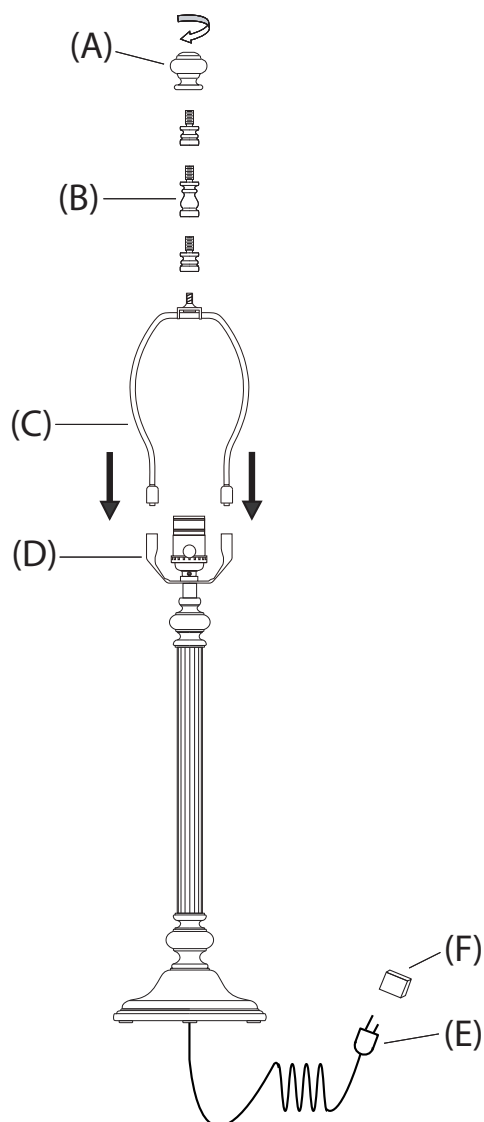

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

TO ASSEMBLE:

1. Remove all parts carefully from the carton. Do not throw away any parts.
2. Remove all packaging material from lamp.
3. Place harp (C) into harp saddle (D) by squeezing harp (C) inward and placing into the openings of saddle (D).
4. Install one (1) Type A, 100 watt maximum bulb into socket.
5. Place center ring of the shade spider (SHADE SOLD SEPARATELY) onto the threaded nipple of harp (C). To change shade height: remove the shade and thread shade riser combinations onto the threaded nipple of harp (C). Continue to add/remove shade risers until desired shade height is reached.
6. Once desired shade height is reached, place center ring of shade spider onto exposed threaded nipple. Thread finial (A) onto exposed threaded nipple to secure shade.
7. Remove plug cover (F) from plug (E).
8. Plug lamp into wall outlet.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.