

RH

CATHEDRAL FLOOR LAMP

PARTS ENCLOSED:

- (A) LAMP BODY (1)
- (B) LAMP BASE (1)
- (C) BASE SCREWS (4)

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug. If the plug does not fit securely into the outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance. This fixture has been rated for up to four (4) 75W medium base bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



Warning: Strangulation Hazard

Keep cord at least 3 ft. away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

TO ASSEMBLE:

INSTRUCTIONS D'INSTALLATION:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Attach lamp body (A) to lamp base (B) using Phillips base screws (C).
3. Screw (4) bulbs (D) into sockets in lamp body (A).
4. Insert plug into wall outlet to power the fixture. Dimmer switch (E) is located on cord (F).

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth. Please note that the Lacquered Burnished Brass finish is a hand-rubbed patina finish, and natural variation will occur with wear.

