

RH

ORBITER II GRAND FLOOR LAMP

PARTS ENCLOSED:

- (A) BASE STEM (1)
- (B) LAMP BASE (1)
- (C) WASHER (1)
- (D) HEX NUT (1)
- (E) LAMP STEM (1)
- (F) ALLEN WRENCH (1)
- (G) STRAIGHT ARM (1)
- (J) CURVED ARM (1)
- (K) LARGE KNURLED KNOB (1)
- (M) COUNTERWEIGHT (1)
- (R) SMALL KNURLED KNOB (1)

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug. If the plug does not fit securely into the outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance. This fixture has been rated for up to one (1) 9W GU24 Base bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



Warning: Strangulation Hazard

Keep cord at least 3 ft. away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

TO ASSEMBLE:

INSTRUCTIONS D'INSTALLATION:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Insert the threaded rod in the base stem (A) through the lamp base (B) and washer (C). Secure by screwing on the hex nut (D).
3. Insert the lamp stem (E) to the base stem, while aligning the flat notches on the lamp stem to the holes in the base stem. Secure with set screws using the Allen wrench (F).
4. Insert straight arm (G) into yoke (H) on curved arm (J) and secure with large knurled knob (K). Yoke can be adjusted by tightening or loosening the set screw on the yoke using the Allen wrench (L).
5. Screw in counterweight (M) onto the straight arm.
6. Slip cord (N) into slot in upper stem holder (P) and lower stem holder (Q). Slide the lamp arm assembly all the way into stem holders.
7. Angle of arms can be locked by tightening the small knurled knob (R) and large knurled knob.
8. Install (1) bulb (S) into the shade (T) by inserting the pins on the bulb into the socket and twisting clockwise to lock.
9. Insert plug into wall outlet to power the fixture. Dimmer switch (U) is located on the shade. For best dimming performance, turn the switch up to full brightness, before dimming down to the desired level.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth. Please note that the Lacquered Burnished Brass finish is a hand-rubbed patina finish, and natural variation will occur with wear.

