

RH

ORBITER II FLOOR LAMP

PARTS ENCLOSED:

- (A) BASE STEM (1)
- (B) LAMP BASE (1)
- (C) STRAIGHT ARM (1)
- (E) CURVED ARM (1)
- (F) LARGE KNURLED KNOB (1)
- (N) ALLEN WRENCH (1)

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug. If the plug does not fit securely into the outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance. This fixture has been rated for up to one (1) 9W GU10 Base MR16 bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



Warning: Strangulation Hazard

Keep cord at least 3 ft. away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

TO ASSEMBLE:

INSTRUCTIONS D'INSTALLATION:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Screw base stem (A) onto lamp base (B).
3. Insert straight arm (C) into yoke (D) on curved arm (E) and secure with large knurled knob (F). Yoke can be adjusted by tightening or loosening the set screw on the yoke using the Allen wrench (N).
4. Slip cord (G) into slot in stem holder (H) and slide lamp arm assembly into stem holder.
5. Angle of arms can be locked by tightening the small knurled knob (J) and large knurled knob.
6. Install (1) bulb (K) into the shade (L) by inserting the pins on the bulb into the socket and twisting clockwise to lock.
7. Insert plug into wall outlet to power the fixture. Dimmer switch (M) is located on the cord.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

