


RH

CHAMPEAUX ROUND CHANDELIER 48"

PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Canopy (1)
- (D) Canopy Screws (3)
- (E) Wrench (1)
- (F) Shades (8)
- (G) LED Bulbs (8)
- (H) Shade Covers (8)

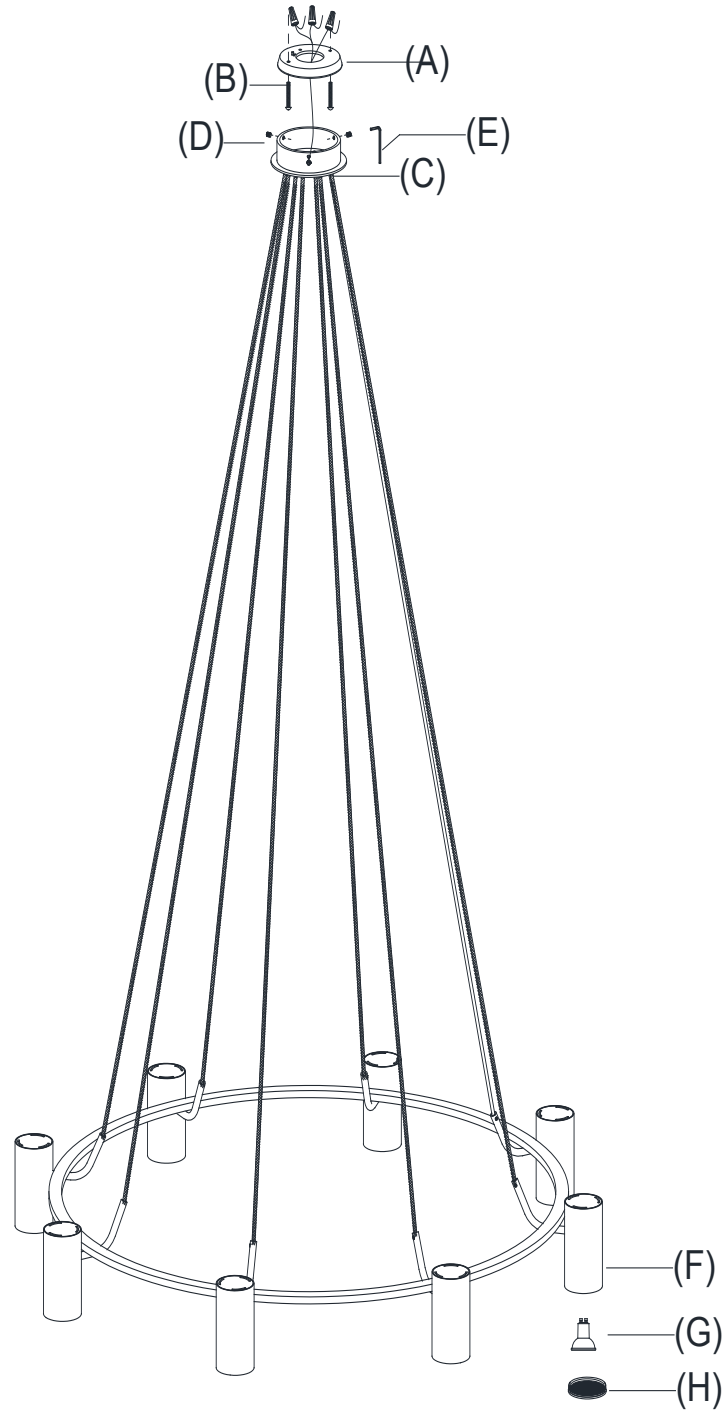

CHAMPEAUX ROUND CHANDELIER 48"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for eight (8) 6-Watt maximum Type PAR16 LED bulbs (G) (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION


SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove Mounting Plate (A) from Canopy (C) by removing Canopy Screws (D) with Wrench (E).
3. To adjust the hanging height for each cord. See Fig. 1, 2, 3, 4, 5, 6, 7, & 8.
4. Attach Mounting Plate (A) to ceiling outlet and secure with Mounting Screws (B).
5. Gently pull the wire from ceiling outlet box and allow the wire to hang. Thread the wire through the center hole in Mounting Plate (A).
6. Connect the safety steel wire from the fixture and the safety cable from ceiling. Refer to the illustration.
7. Attach the fixture ground wire (GREEN) and house ground wire (usually green or bare wire) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. Connect the neutral wire (WHITE) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
9. Connect the hot wire (BLACK) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
10. Attach Canopy (C) to the affixed Mounting Plate (A) and secure with Canopy Screws (D). Tighten with Wrench (E)
11. Insert Bulbs (G) into sockets.
12. Thread Shade Covers (H) to the bottom of Shades (F).
13. Assembly is complete.


CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.


CHAMPEAUX ROUND CHANDELIER 48"

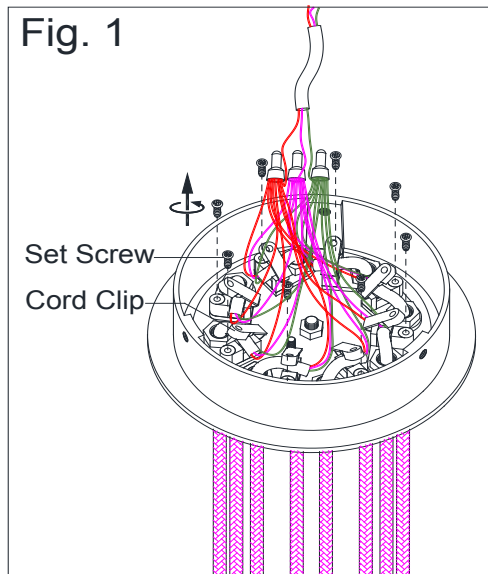


1. Loosen set screws on the top of the cord clips.

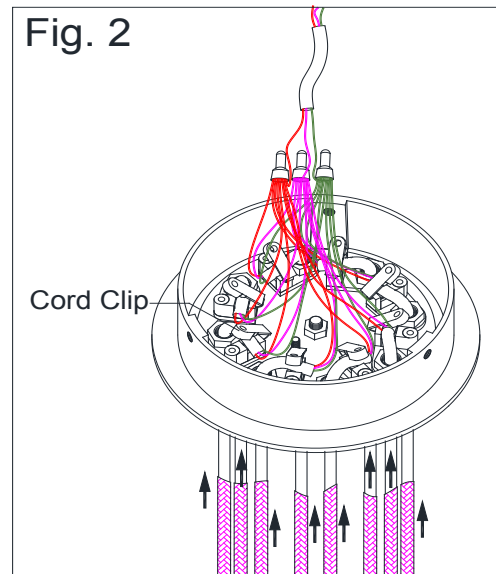

2. Determine the hanging length for light, pull the hanging cords out through the cord clips to desired length.

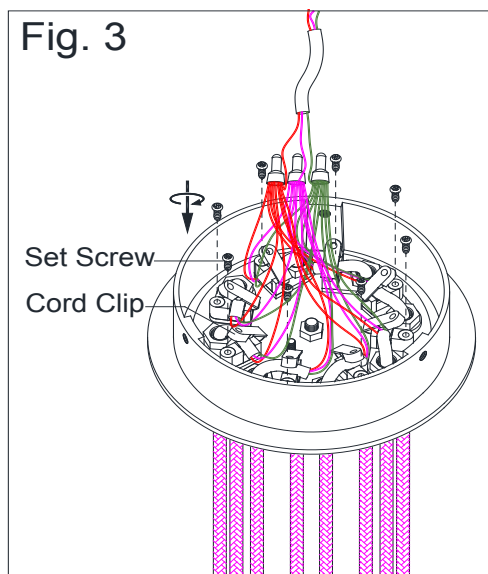


3. Replace the set screws and tighten to lock the hanging cord in place.

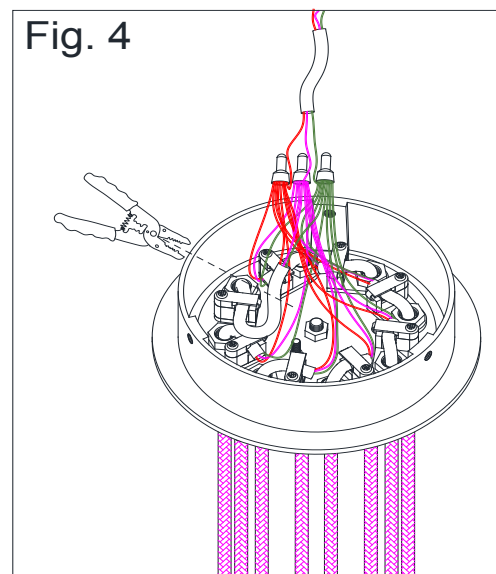

4. Cut off the pulled out cords with the wire cutter provided.


CHAMPEAUX ROUND CHANDELIER 48"

Fig. 5

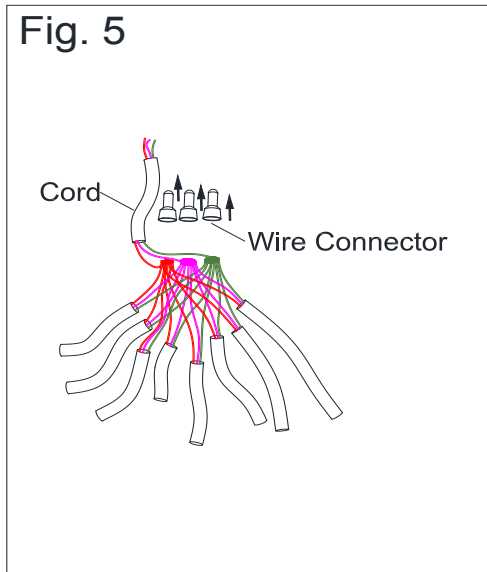


5. Remove the wire connectors using the plier.

Fig. 6

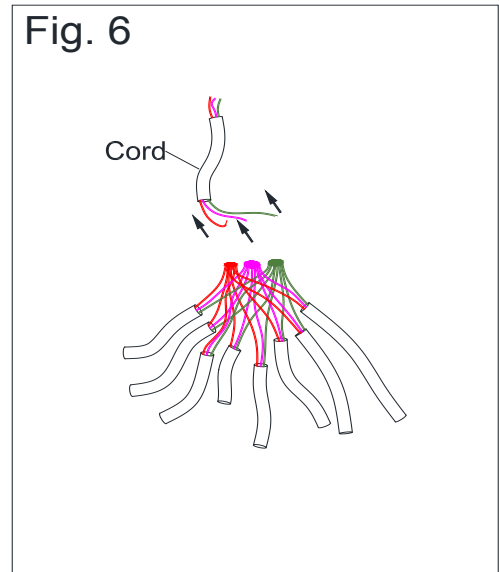


6. Take apart the connection cord and set aside.

Fig. 7

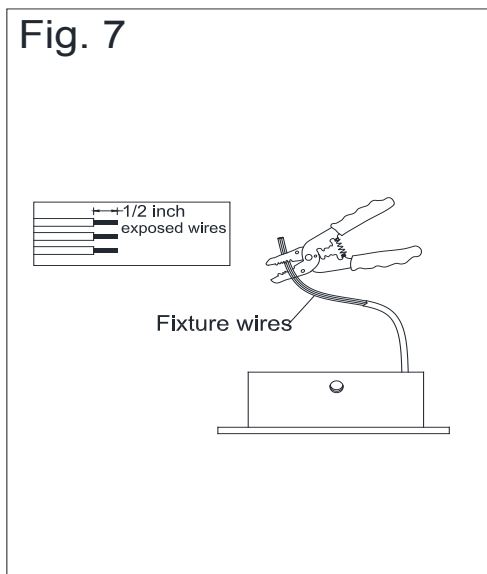

7. Use a pair of wire stripper to remove about 1/2" inch of insulation from each wire.

Fig. 8

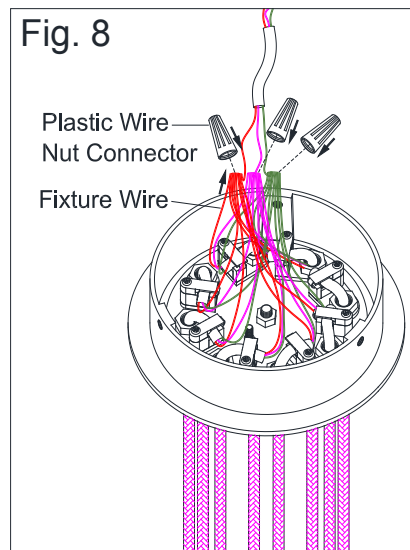

8. Reconnect the wire ends and secure with the plastic nut connectors.