

# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

## PARTS ENCLOSED:

- (A) SMALL COUNTER WEIGHT
- (B) LARGE COUNTER WEIGHT
- (C) GLASS GLOBE
- (D) GLOBE SCREW
- (E) SWING ARM
- (F) SWING ARM
- (G) SWIVEL (X2)
- (H) BASE
- (I) COLUMN
- (J) SCREW DRIVER

## IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into the outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (1) 35W MAX. GY 6.35 BI-PIN bulb.

To avoid risk of fire, do not exceed the recommended wattage.

## WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down.

DO NOT subject the lamp to any shock while lit as shattering of bulb may result.

## TO ASSEMBLE:

1. REMOVE ALL PARTS CAREFULLY FROM THE CARTON.
2. Place base (H) on level surface.
3. Thread large counter weight (B) onto threaded nipple of swing arm (F).
4. Thread small counter weight (A) onto threaded nipple of swing arm (E).

## \*\*BALANCE ADJUSTMENT\*\*

5. Note: If swing arm (E) and (F) are not balanced correctly, adjust counter weights (A) and (B) by slowly unthreading the counter weight until the arm is balanced. When balanced correctly, the lamp will rest at any position.
6. If the lamp will not balance by adjusting counter weights (A) and (B), follow step 7 to fine tune the lamp. If the lamp is balanced, skip to step 8.
7. The lamp has been fine tuned at the factory but a slight adjustment on the amount of resistance at swivels (G) may be needed. To adjust the resistance of the swivel tighten/loosen screws (use screw driver (J) provided) in minor increments. WARNING: Over tightening/loosening the screws can inhibit the rotation and compromise the performance of the lamp. Do not make adjustments to the swivels (G) unless it is absolutely necessary.

## \*\*ASSEMBLY CONTINUED\*\*

8. Plug lamp into wall outlet.
9. When changing the location of the lamp, turn the lamp off at the switch and remove plug from the wall outlet. Give the bulb time to cool off before moving. Hold the lamp at column (I) with both hands and lift the lamp 1-2 inches off the ground. Move the lamp to desired location and gently rest on a level surface.

## \*\*BULB REPLACEMENT\*\*

1. Make sure adequate time has been given for bulb to cool off after turning lamp off at switch.
2. Unplug lamp from wall outlet and remove diffuser (C) from shade by removing diffuser screws (D) with screw driver (J) provided.
3. Remove old bulb by carefully pulling from the base and set aside.
4. Wrap new bulb with soft cloth when installing to refrain from touching bulb as fingerprints will reduce the performance of the bulb.
5. Reattach diffuser (C) by aligning holes in diffuser (C) and holes in light housing and inserting diffuser screws (D).

\*\*This lamp is designed for indoor use only. Very high humidity or extremely high/low temperatures will deteriorate the ballast.

## CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.

## COUNTERPOISE TASK FLOOR LAMP

