GEODE QUARTZ CRYSTAL PENDANT


RH

PARTS ENCLOSED

- (A) Junction Box (Not included.) 22.7 kg/50 lbs. MIN. FIXTURE RATED
- (B) Mounting Screws (Not included. 1 Set.)
- (C) Wire Nut (3)
- (D1) Ceiling Hook (1)
- (D2) Quick link (1)
- (D3) Hang Straight (1)
- (D4) Bolts (2)
- (D5) Canopy (1)
- (E1) Hanging Rod A (1)
- (E2) Hanging Rod B (1)
- (E3) Hanging Rod C (1)
- (F) Body (1)
- (G) Wrench (1)

PRODUCT DESCRIPTION:

General material: Glass & Iron Height: 31.0 cm (12.20 in) Diameter: 31.0 cm (12.20 in) Weight: 14.53 kg (32.03 lbs)

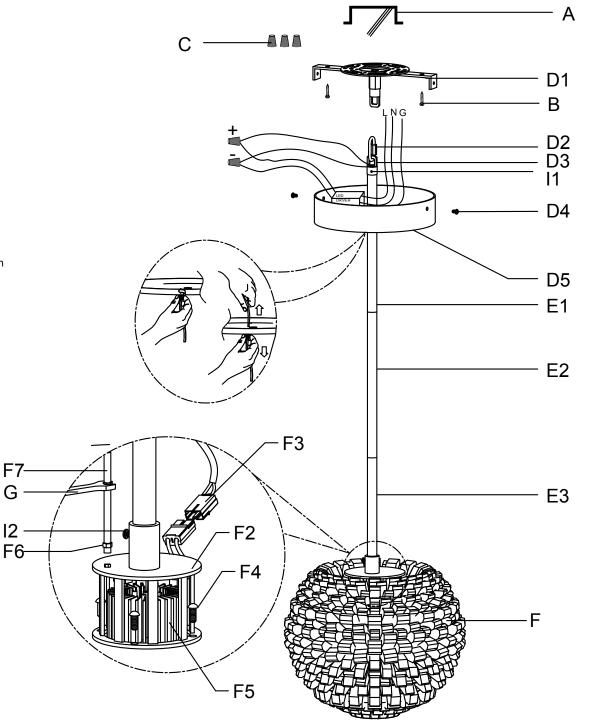

IMPORTANT- PLEASE READ

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

SAFETY INSTRUCTIONS:

- **1.** Use an authorized and certified electrician for consultation and installation.
- **2.** This fixture has been rated for 7-watt maximum replaceable LED module.
- **3.** To avoid the risk of fire, do not exceed the recommended wattage.
- 4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light, at least a ceiling capacity of 72.65 kg (160.16 lbs) is required.
- **5.** The manufacturer and distributor accept no liability for incorrect installation.
- 6. For indoor use only.
- 7. Keep away from children.

WARNINGS:

- Turn off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
- 2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- **3.** To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. DDo not touch or look directly at the bulb when fixture is illuminated.. Keep flammable materials away from lite bulb.
- **4.** Deviation from instructions may result in a risk of fire or electric shock.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

✓ WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION:

- **1.** Carefully remove all parts from the box and remove all plastic covering.
- 2. Turn OFF power to the junction box where the ceiling light will be installed.
- **3.** Loosen the nuts (F6) by wrench (G) and remove the bolts (F7) from body (F).
- **4.** Loosen the bolts (D4) and remove the ceiling hook (D1) from the canopy (D5).
- 5. Attach the ceiling hook (D1) to the ceiling with mounting screws (B).
- 6. Assemble the hanging rod A (E1) or B (E2) to hang straight (D3), and tighten the bolts (I1) on hang straight (D2). Note: The hanging height is adjustable by using hanging rod B (E2) only, or using 1 or 2 hanging rod A (E1) and B (E3) together.
- Insert the main wire into the hanging rods (E1, E2, E3) to thread out from hang straight (D3). Fasten hanging rod C (E3) to body (F), then tighten the bolts (I2) on body (F).
- 8.1 Connect the ground wire from the fixture to the ground junction box wire (usually the green or bare wire) and wrap the connection with electrical tape. Connect the hot wire to the junction box wire (usually black or smooth) with a plastic wire nut (C) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire nut (C) and wrap the connection with electrical tape.
- 8.2 Connect the "+" wire of LED driver and "+" wire of main cable with wire nut (C). Connect the "-" wire of LED driver and "-" wire of main cable with wire nut (C). Refer to drawing.
- **9.** Move the canopy (D5) up to the ceiling, then fasten the bolts (D4). Restore power to the junction box and test ceiling light fixture.

REPLACE LED LIGHTSOURCE STEPS:

- 1. Loosen the bolts (F4) to detach the crystal cover (F).
- 2. Disconnect all quick-link connectors (F3).
- **3.** Take out the lightsource (F5) from the fixture, then replace it.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.

2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.

3. The cable / cord of this ceiling light cannot be replaced; if the cable is damaged, do not use the light.