


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED

- (A) Final (1)
- (B) Risers
 - Risers, 5/8" (2)
 - Risers, 1" (1)
- (C) Harp post (1)
- (D) Harp (1)
- (E) Harp saddle (1)
- (F) Pole (1)
- (G) Adjustment key (1)

LIBRARY TABLE LAMP

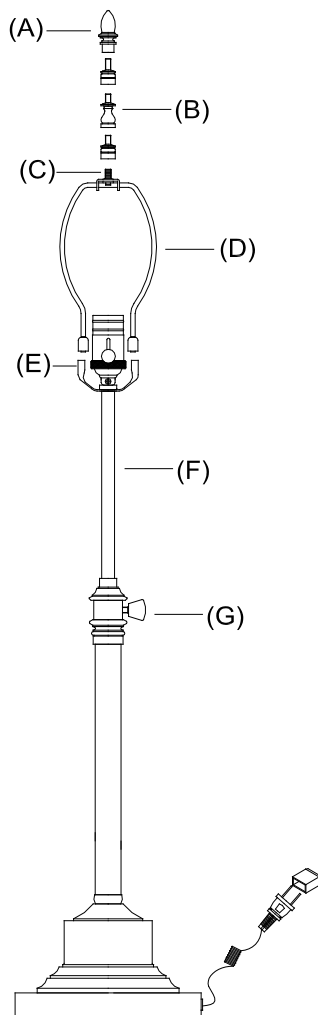

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (1) 100-watt maximum TYPE A standard bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Insert harp (D) into the harp saddle (E).
3. Insert the recommended bulb into threaded socket.
4. Unscrew the finial (A) from the harp post (C) and place the desired shade (sold separately) over the harp.
5. Attach the finial and tighten to secure the shade.
6. Shade risers (B) can be used to increase the height of harp and raise the lampshade for proper fitting. At eye level, the bottom of the shade should sit just below the harp saddle (E) and above the top of the lamp base.
7. Plug into proper electrical outlet and test fixture.
8. Assembly is complete.

TO ADJUST HEIGHT:

1. Loosen adjustment key (G) in the counter-clockwise direction.
2. Adjust lamp by pulling or pushing upper pole (F) up or down to desired height.
3. Tighten the adjustment key (G) in the clockwise direction.

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.