


RH

HARMON 9" FLUSHMOUNT

PARTS ENCLOSED:

- (A) Cross Bar (1)
- (B) Cross Bar Screws (2)
- (C) Mounting Screws (2)
- (D) Canopy (1)
- (E) Thumb Screws (3)
- (F) Decorative Nuts (2)
- (G) Glass Shade (1)
- (H) Wire Nuts (2)

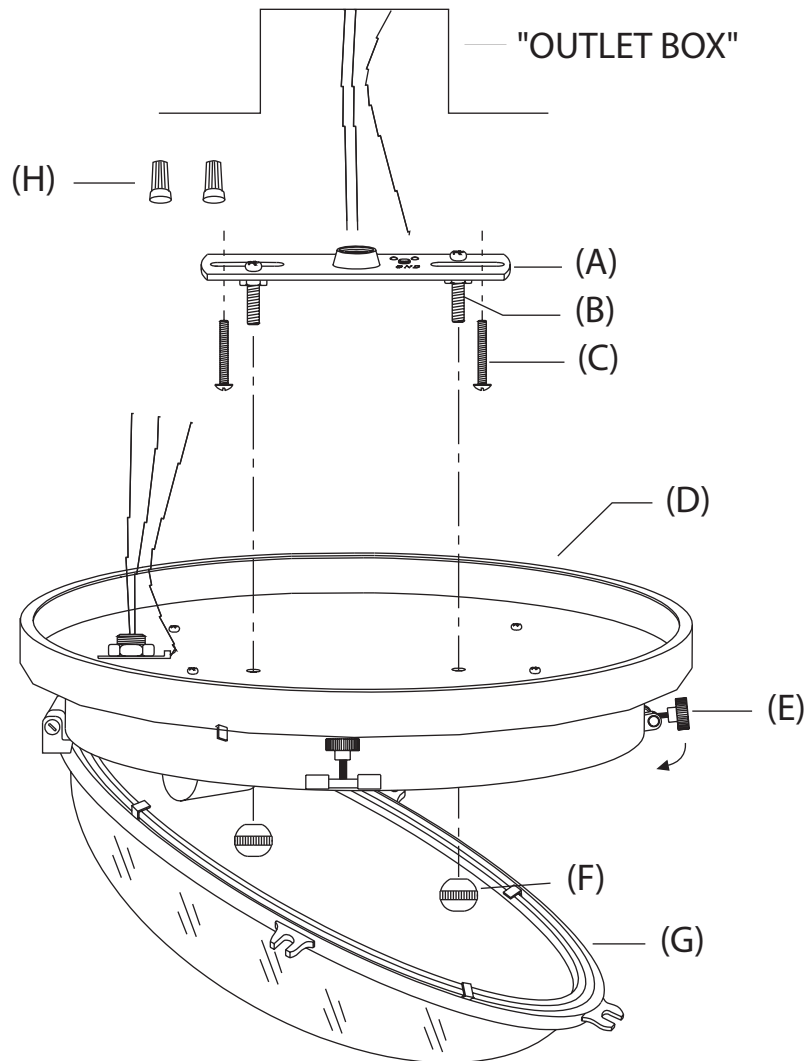

IMPORTANT PLEASE READ**WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.****SAFETY INSTRUCTIONS:**

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

This fixture has been rated for up to one (1) 60-watt maximum Type B candelabra base bulb or one (1) 4.7-watt LED candelabra base bulb. To avoid risk of fire, do not exceed the recommended wattage.

If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from the lit bulb.

This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning, or otherwise touching this light fixture.

 **WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

 **WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Open glass shade (G) by unthreading thumbscrews (E) and rotating into open position. Do not completely unthread thumb screw from threaded nipple.
3. Remove cross bar (A) from canopy (D) by removing decorative nuts (F) from cross bar screws (B). Set decorative nuts (F) aside.
4. Affix cross bar (A) to ceiling outlet box with mounting screws (C). Gently pull wires from ceiling outlet box.
5. Lift canopy (D) to ceiling outlet box; make proper electrical connection.
6. Attach ground wire from fixture (green or copper in color) to ground wire from ceiling outlet box.
7. Attach hot wire from fixture (black in color) to hot wire from ceiling outlet box. Fasten wires together with wire nut (H) and tightly wrap connection with electrical tape.
8. Attach neutral wire from fixture (white in color) to neutral wire from ceiling outlet box. Fasten wires together with wire nut (H) and tightly wrap connection with electrical tape.
9. Gently push wires back into ceiling outlet box.
10. Align crossbar screws (A) with holes in top of canopy (D). Place canopy (D) flush against ceiling, allowing crossbar screws (B) to pass through holes in canopy (D). To secure fixture to ceiling, thread decorative nuts (F) onto exposed threads of crossbar screws (B).
11. Install one (1) 60-watt maximum Type B candelabra base bulb or one (1) 4.7-watt LED candelabra base bulb into socket.
12. Move glass shade (G) into closed position and secure with thumb screws (E).

CARE INSTRUCTIONS:

Wipe clean with a soft, dry cloth or static duster. Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.