
BISTRO SINGLE WALL SCONCE

PARTS ENCLOSED:

- (A) Mounting Plate (1)
- (B) Mounting Screw (2)
- (C) Backplate (1)
- (D) Backplate Screws (4)
- (E) Turn Keys (2)
- (F) Socket Cup (1)
- (G) Shade Screws (3)
- (H) Glass Shade (1)

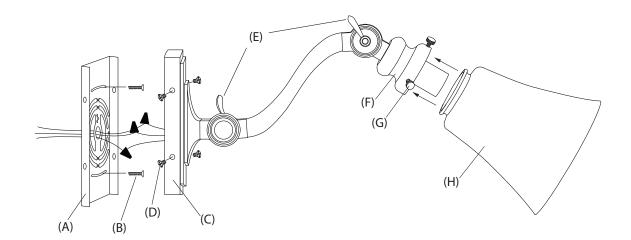



BISTRO SINGLE WALL SCONCE

IMPORTANT PLEASE READ

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

SAFETY INSTRUCTIONS:

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

This fixture has been rated for up to one (1) 60-watt maximum Type A medium base bulb or one (1) 7.5-watt LED medium base bulb. To avoid risk of fire, do not exceed the recommended wattage.

If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from the lit bulb.

This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning, or otherwise touching this light fixture.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

⚠ WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION:

- 1. SHUT OFF MAIN ELECTRICAL SUPPLY AT THE BREAKER ON THE WALL.
- Remove the mounting plate (A) from the base of the lighting fixture (C) by removing the base screws (D).
- Gently pull the wiring from the wall outlet box and allow the wires to hang. Thread the wires through the center hole of the mounting plate (A).

- Affix the mounting plate to the wall outlet box with the mounting plate screws provided (B).
- 5. To connect wires, remove the plastic protector. Connect the ground wire (GREEN) of the fixture to the green ground wire from the outlet box (usually green) and tighten with a screwdriver. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 6. Connect the neutral (WHITE) fixture wire from the lamp fixture base to the neutral (usually white) outlet wire. Fasten the two wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
- 7. Repeat this procedure with the hot (BLACK) wires. Always make sure that no wire strands are left outside the connectors. DO NOT REVERSE THE HOT AND THE NEUTRAL CONNECTIONS OR ELSE SAFETY WILL BE COMPROMISED!
- Attach the lighting fixture base (C) to the affixed mounting plate by aligning the holes and inserting the base screws (D). Tighten with a screwdriver.
- Loosen shade holding screws (G) and insert the neck of the glass shade (H) into socket cup (F). Retighten shade holding screws (G). Make sure that the groove of the glass neck is locked in evenly by the screws.
- 10. Insert one (1) 60-watt maximum Type A medium base bulb or one (1) 7.5-watt LED medium base bulb into the socket.

TO ADJUST:

- 1. Loosen the adjustment keys (E) by turning counterclockwise.
- 2. Adjust height by swinging lamp arm to the desired position.
- 3. Secure by turning adjustment keys (E) clockwise to tighten.

CARE INSTRUCTIONS:

Wipe clean with a soft, dry cloth or static duster. Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.