 


RESTORATION HARDWARE

BENNER

LARGE PENDANT

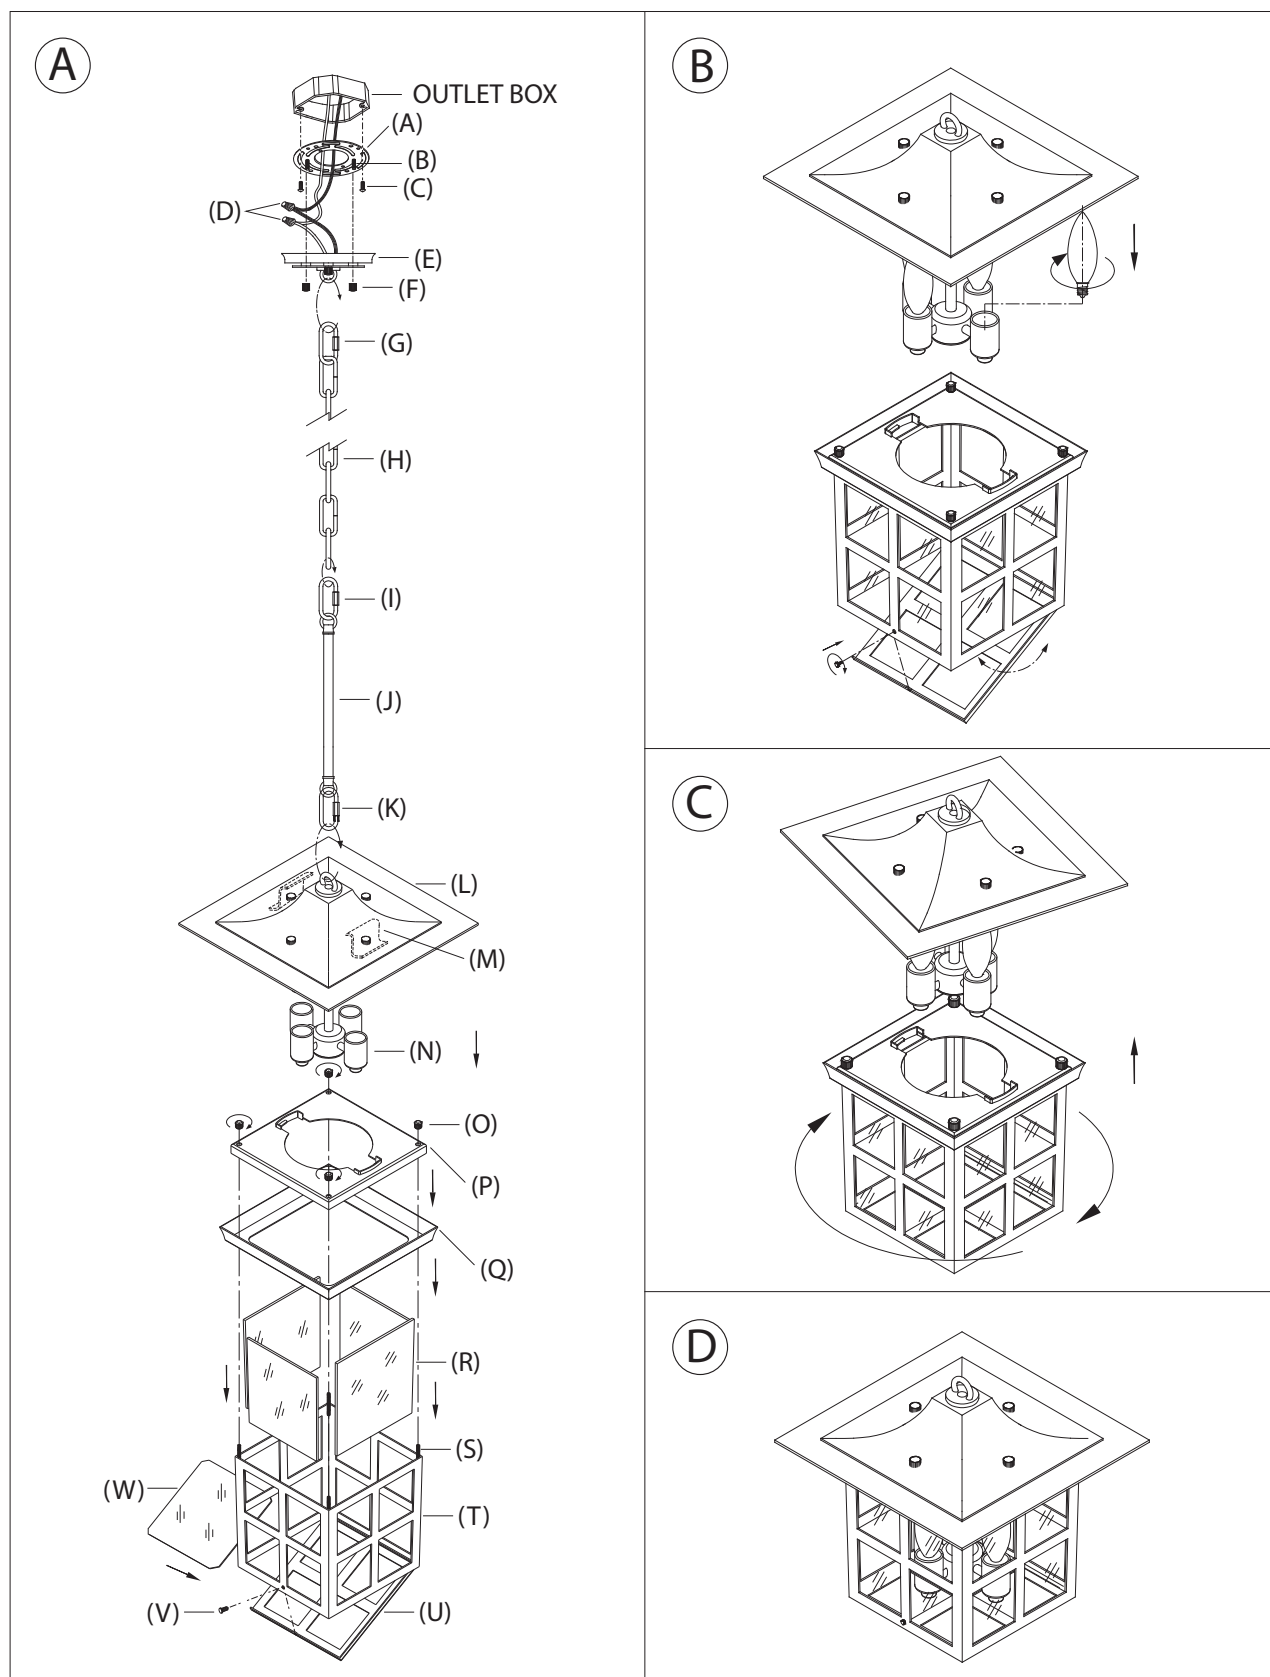

RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind: cast sockets, full range dimmers, and hand applied finishes. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) MOUNTING PLATE
- (B) CANOPY ALIGNMENT SCREWS (X2)
- (C) MOUNTING PLATE SCREWS (X2)
- (D) WIRE NUTS
- (E) CANOPY
- (F) CANOPY NUTS (X2)
- (G) QUICK LINK
- (H) CHAIN
- (I) QUICK LINK
- (J) EXTENSION
- (K) QUICK LINK
- (L) LANTERN CANOPY
- (M) LANTERN TABS
- (N) SOCKET (X4)
- (O) LANTERN NUTS
- (P) ALIGNMENT CAP
- (Q) LANTERN CAP
- (R) SIDE GLASS
- (S) LANTERN ALIGNMENT SCREWS (X4)
- (T) LANTERN
- (U) BOTTOM DOOR
- (V) LANTERN DOOR SCREW
- (W) BOTTOM GLASS

BENNER LARGE PENDANT

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the fixture to any shock while lit as shattering of bulb may result.

ASSEMBLY INSTRUCTIONS

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove canopy nuts (F) from canopy alignment screws (B).
3. Affix mounting plate (A) to the outlet box using mounting plate screws (C).
4. Measure desired drop for fixture to hang and add / remove chain links (H) with chain break tool (not included). NOTE: extension (J) and quick link (K) can be removed to reduce drop of fixture.
5. Once desired drop is determined, attach quick link (G) to top loop of chain (H) and connect to loop on bottom of canopy (E). Attach quick link (I) to bottom loop of chain (H) and connect to top loop of extension (J). Attach quick link (K) to bottom loop of extension (J) and connect to loop on top of lantern canopy (L). NOTE: If extension (J) is not used, attach quick link (I) to the bottom link of chain (H), and loop on top of lantern canopy (L).
6. Guide wires from top of lantern canopy (L) through extension (J) (if used), and chain links (H). Insert wires through hole in canopy (E).
7. Lift canopy (E) to mounting plate (A) and make proper electrical connection.
8. Connect the copper wire from fixture to ground (green) wire from outlet box; Connect white or rough side of wire from fixture to white wire from outlet box, fasten together with plastic wire nuts (D), and tightly wrap with electrical tape. Connect black or smooth side of wire from fixture to black wire from outlet box; fasten together with plastic wire nuts (D), and tightly wrap with electrical tape.
9. Align holes in canopy (E) with canopy alignment screws (B). Slide canopy (E) over canopy alignment screws (B), and mounting plate (A). Canopy (E) should be flush against ceiling. Attach canopy nuts (F) to exposed threads of canopy alignment screws (B) to secure fixture to mounting plate (A).
10. Place lantern (T) on level surface.
11. Unthread lantern nuts (O), and set aside. Remove alignment cap (P), and lantern cap (Q) from lantern alignment screws (S), and set aside.
12. Carefully slide glass panels (R) into channels inside lantern (T), making sure numbers on glass panels (R) go into corresponding sides on lantern (T). CAUTION: UTILITY GLOVES SHOULD BE WORN WHEN HANDLING GLASS PANELS.
13. Align holes in lantern cap (Q) with lantern alignment screws (S). Slide lantern cap (Q) over lantern alignment screws (S).
14. Align holes in alignment cap (P) with lantern alignment screws (S). Make sure alignment cap (P) is positioned as shown in figure A. Slide alignment cap (P) over lantern alignment screws (S).
15. Attach lantern nuts (O) onto exposed threads of lantern alignment screws (S).
16. Install four (4) Type B, 60 watt maximum bulb in to sockets (N).
17. Unthread lantern screw (V) from bottom door (U), and rotate bottom door (U) to open position. Carefully insert bottom glass (W) into channels in bottom door (U). Move door to closed position and re-insert lantern door screw (V) into hole in bottom door (U).
18. Align assembled lantern (T) with tabs (M) on bottom of lantern canopy (L). Slide lantern over tabs (M) on bottom of lantern canopy (L). NOTE: tabs will fit into opening of alignment cap (P). Twist lantern as shown in figure C to lock tabs (M) into place, securing lantern (T) to lantern canopy (L). Completed lantern assembly shown in figure D.
19. NOTE: to re-lamp fixture, unthread lantern screw (V) from bottom door (U), and rotate bottom door (U) to open position. Remove old bulbs, and replace with new bulbs. Move door to closed position and re-insert lantern door screw (V) into hole in bottom door (U).

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.