

# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

## PARTS ENCLOSED:

- |                             |                     |
|-----------------------------|---------------------|
| (A) Mounting Strap (1)      | (E) Canopy (1)      |
| (B) Mounting Screw (2)      | (F) Canopy Ring (1) |
| (C) Nipple (1)              | (G) Chain (1)       |
| (D) Chain Mounting Loop (1) | (H) Top Loop (1)    |
|                             | (I) Lantern Box (1) |

## IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to four (5) 40-watt maximum Type B bulbs (the bulbs are included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS:


All wires are connected. When unpacking, be careful not to pull with wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

## WESTON 17" SQUARE PENDANT

**IMPORTANT: For a safe and secure installation, this fixture must be installed by means of support that is independent of the outlet box.**

## TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the pendant will be installed.
3. Screw top loop (H) with chain (G) on top of lantern box (I).
4. Feed wire through chain (G) and mounting loop (D).
5. Slip canopy ring (F) and canopy (E) over the upper end of the chain. Open the end link of the chain and lift the lantern box to attach to the mounting loop and secure the link.
6. Attach mounting strap (A) to mounting outlet box with mounting screws (B) and insert top thread nipple (C) in mounting strap (A).
7. Attach chain mounting loop (D) to thread nipple (C).
8. Attach the fixture ground wire to the ground wire from the outlet box (usually green or bare wire) with a plastic wire Connector and wrap the connection with electrical tape.
9. Connect the hot wire to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. Connect the neutral wire to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
10. Tuck these wire connections neatly into the ceiling outlet box.
11. Raise the canopy (E) to the ceiling and screw canopy ring (F) onto the mounting loop (D) to secure.
12. Insert the recommended 40-watt Type B bulbs (included) into the threaded sockets.
13. Restore power to the junction box and test the pendant fixture.
14. Assembly is complete.

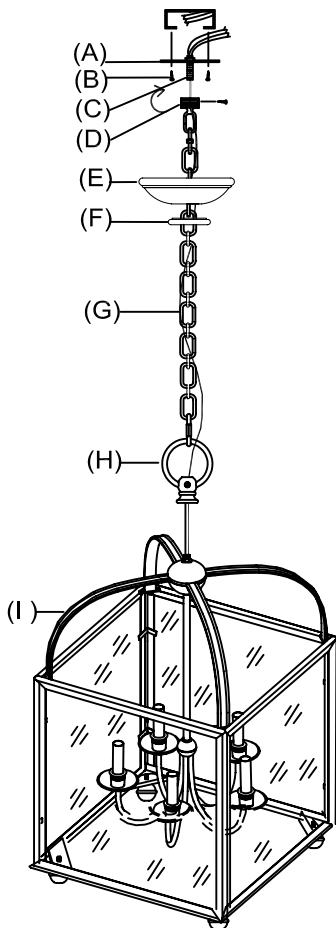

## CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap. Do not use abrasive harsh cleansers or abrasives