


PARTS INCLUDED

- A. HOOK (1)
- B. MOUNTING BRACKET (1)

MOUNTING INSTRUCTIONS

- 1. Position wall mount in desired location on wall.
- 2. After positioning on wall, lightly mark outline of cover plate.
- 3. Center mounting bracket as shown, in outline of post.
- 4. Mark location of drive wall anchor installation. Remove mounting bracket from wall. Position drive wall anchor and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise, pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counterclockwise to remove screw anchor will remain embedded in wall
- 5. Place mounting bracket over anchors and reinsert drive wall anchor screw. Place fixture over mounting bracket and tighten set screw.
- 6. If necessary, loosen wall mounting screws and adjustable mounting bracket to obtain proper alignment on wall. Retighten screws and remount cover plate.

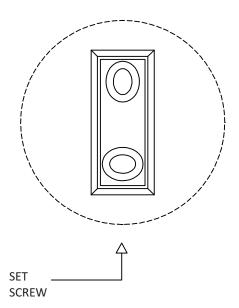

CARE INSTRUCTIONS

- 1. Periodically wipe the hook with a soft clean cloth.
- 2. To avoid damaging the protective lacquer finish, do not use abrasive or chemical cleaners.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Maximum weight capacity 40 lbs.
- 2. Do not allow children to play with installed hardware.