
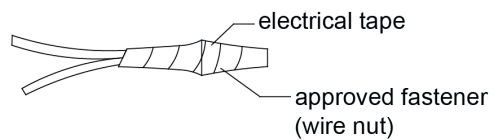


# RH

## DAVENPORT ROUND CHANDELIER 30"

### PARTS ENCLOSED:

- (A) Safety Cable (1)
- (B) Cable Clamp (1)
- (C) Mounting Bracket (1)
- (D) Screw (2)
- (E) Grounding Screw (1)
- (F) Canopy (1)
- (G) Screw Collar Loop (1)
- (H) Ring (1)
- (I) Chain (1)
- (J) Loop (1)
- (K) End Cup (1)
- (L) Rod (4)
- (M) Acrylic Plate (1)
- (N) Screw for LED Board (4)
- (O) LED Board (1)
- (P) Glass Bottom (1)

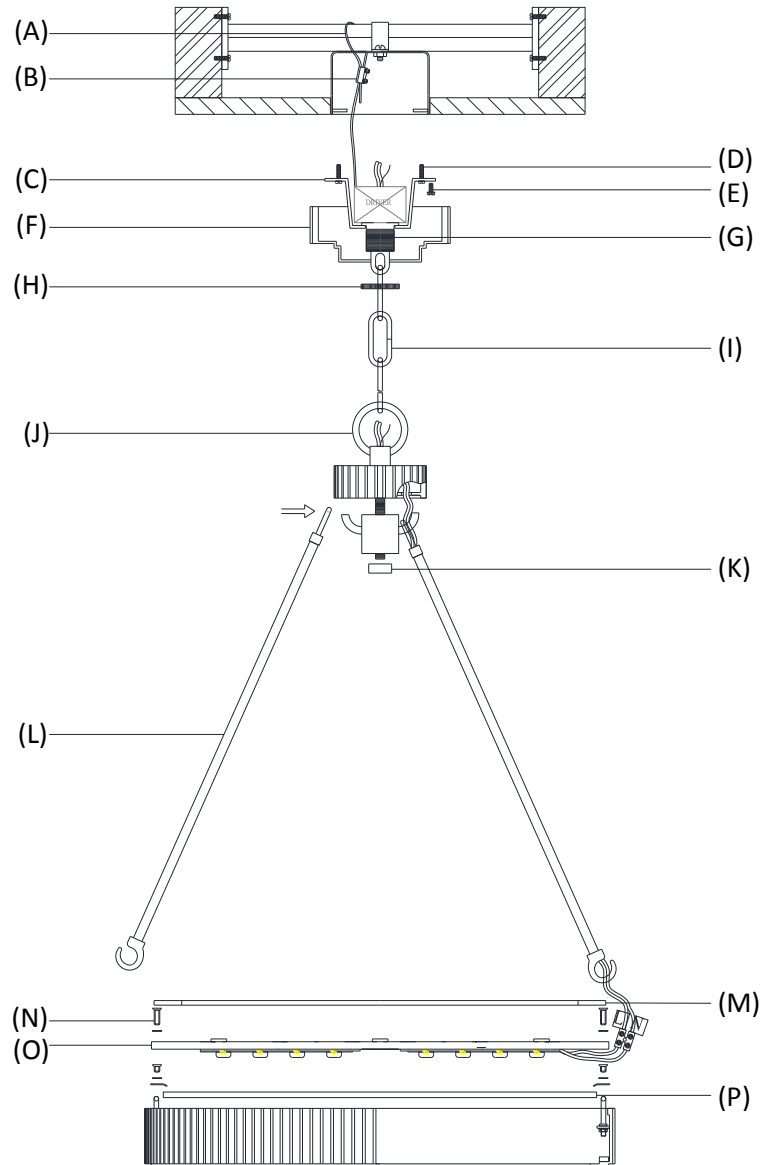

**IMPORTANT PLEASE READ**

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

**SAFETY INSTRUCTIONS:**


This fixture is designed to be mounted to the ceiling on an octagon box. The box must be securely mounted to the structure of the building.

**WARNINGS:**

Turn off the entire electrical circuit to which the lighting fixture is to be attached.

Do not connect to electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the LED bulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects, and other reproductive harm. Wash hands after installing, handling, cleaning, or otherwise, touching this light fixture.

 **WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.**

 **WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

**ASSEMBLY & INSTALLATION:**

1. Carefully remove the fixture and all parts from the carton. Before discarding the carton, double check the packaging to make sure that all parts have been found.
2. Remove the outlet box from the approved support.
3. Slide crimp-type cable clamp onto the safety cable. Feed the SAFETY CABLE down through one of the holes in the top of the outlet box. Loop the SAFETY CABLE over the approved support. Feed the SAFETY CABLE back through the top of the box and the cable clamp. Using the crimping tool, tightly crimp the cable clamp to lock the SAFETY CABLE in position.
4. Reinstall the outlet box to the approved support.
5. Unscrew the LED board from the body, then place the bottom glass to the body and secure it by the screws. Reattach the LED board back to the body.
6. Unscrew the end cup from the box, and install rods to the hook and body Loop. Align the wire hole to the hook for the rod. Screw the end cup back to the box.
7. Connect the LED wire to the connector- make sure black wire is connected to the live wire and the white wire is connected to the neutral wire. It is very important - IF THE WRONG WIRE IS CONNECTED, IT WILL CAUSE THE LED LIGHT TO BURN OUT.
8. Place the acrylic plate on the body.
9. Attach the mounting bracket to the outlet box. Pull the wires out.
10. Measure 6" of lead wire beyond the end of the chain. Cut off excess wire. Strip the insulation off the ends of the leads exposing approx. 1/2" of wire. Twist the strands of wire together. Push the leads and ground wire up through the screw collar loop and nipple and into the outlet box.
11. Fasten the bare ground wire to the green or bare copper wire in the outlet box or the green screw on the crossbar. **NEVER FASTEN THE GROUND WIRE TO THE BLACK OR "HOT" WIRE! FAILURE TO FOLLOW THIS INSTRUCTION COULD RESULT IN SERIOUS INJURY OR DEATH!**
12. Fasten the fixture lead with the ridge(s) to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut) starting about 1" below the

## DAVENPORT ROUND CHANDELIER 30"

---

fastener. Tightly wrap the connection with electrical tape so that the tape seals the end of the fastener. Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

13. Connect the smooth fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 11.

14. Slide the canopy and screw collar ring up the chain and secure the canopy to the ceiling.

15. Open end links of chain and attach the chain to the loop. Close the top link of the chain. Hang the fixture on the chain at the desired height. Remove excess chain. Close the bottom link of chain.

16. Restore power to circuit at breaker or fuse box.

### CARE INSTRUCTIONS:

Wipe all surfaces with a soft, dry cloth. Do not use cleansers.