
RH

PALMEA OUTDOOR PENDANT 31"

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. IF YOU ARE UNSURE ABOUT YOUR CEILING TYPE OR WHAT MOUNTING METHOD YOU SHOULD USE, CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE.

PARTS ENCLOSED:

(A) Plastic wire connector (3)
(B) Mounting plate (1)
(C) Mounting screw (2)
(D) Green ground screw (1)
(E) Canopy screw (2)
(F) Metal canopy (1)
(G) LED bulb (1)
(H) Clear glass cover (1)

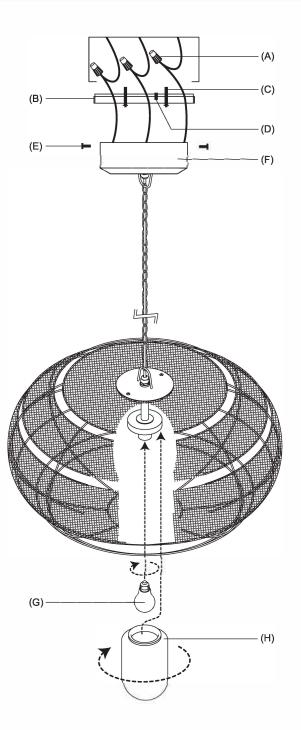

RH

PALMEA OUTDOOR PENDANT 31"

IMPORTANT - PLEASE READ

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

SAFETY INSTRUCTIONS:

This fixture must be mounted to the ceiling independent of an outlet box. Your ceiling may require modification to allow the mounting plate to be secured to a structural member. This fixture MUST NOT be secured using any type of hollow ceiling anchor, such as a toggle bolt. This fixture has been rated for up to one 40-watt maximum Type A standard lightbulb (included) or one 9-watt compact fluorescent lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning, or otherwise, touching this light fixture.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65 Warnings.ca. gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

A WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION:

Carefully remove all parts from the box and remove plastic coverings.
 Turn OFF power to the junction box where the pendant will be installed.

- 3. Connect the hot wire to the hot junction box wire (usually black or smooth) with a plastic wire connector (A) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire connector (A) and wrap the connection with electrical tape.
- 4. Attach the ground wire from the fixture to the ground junction box wire from the outlet box (usually green or bare wire). Or wrap the ground wire around the green ground screw (D).
- 5. Attach mounting plate (B) to the outlet box using the mounting screws (C) and tighten.
- 6. Attach the canopy (F) to the mounting plate (B) using the canopy screw (E) to secure.
- 7. Insert the bulb (G) into the socket and secure tightly.
- 8. Turn the clear glass cover in.
- 9. Restore power to the junction box and test fixture.
- 10. Installation is complete.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft, dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammoniabased products) or abrasives, as they will damage the finish.