



### CRATE STORAGE

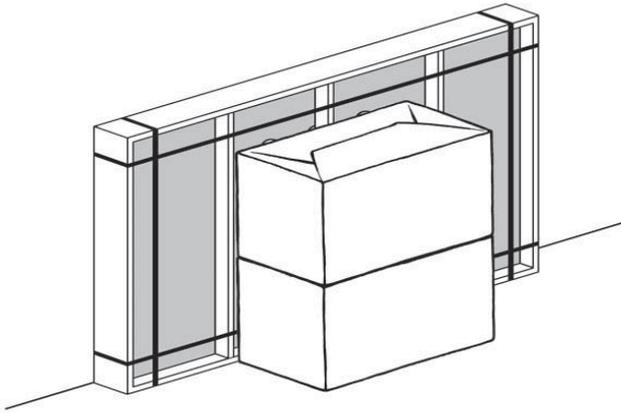

- Keep Stone Top in it's crate until installation.
- Store crate vertically in a safe location.

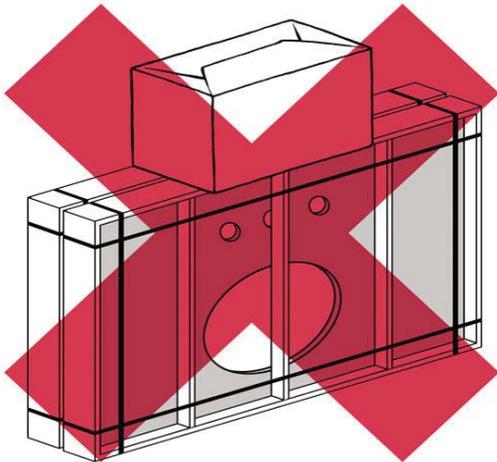


- Do not stack anything on top of crate.

# RH


## HUTTON DOUBLE 90" FLOATING VANITY

### Parts List:


A. Stone top (sold separately)

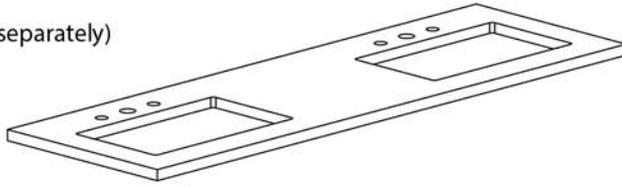


B. Backsplash (sold separately)

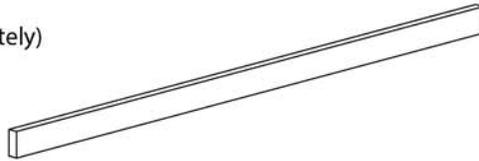


C. Lavatory basin (x2)

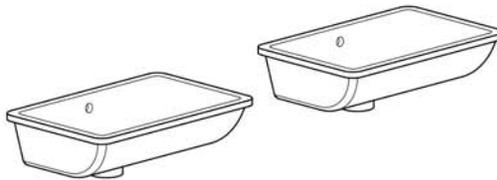

D. Vanity base

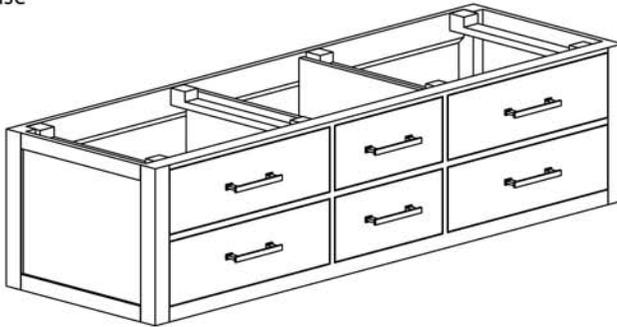


E. Hanger

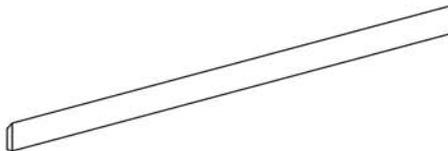

F. Lag screw (x12)



 G. Flat washer (x12)




H. Calk in anchor (x8)



I. Calk in anchor sleeve (x8)



J. "L" Bracket (x8)

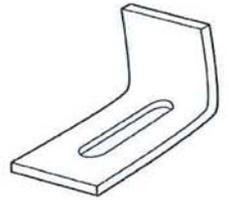


K. Washer (x8)



L. Screw (x8)



 M. Setting Tool



### PRIMARY INSTALLATION REQUIREMENTS:

- Professional two-man crew.
- Water supply and drain piping installed according to local plumbing and building codes (sold separately).
- Wall and floor are square and plumb at installation site.
- Vanity Base [ D ] installed square and plumb with wall and floor. Vanity Base [ D ] also needs to be level.
- Ensure Stone Top [ A ] is the correct size to match the Vanity Base [ D ].

### TOOL AND MATERIAL REQUIREMENTS


- Flat, non-abrasive work surface (blanket or smooth cardboard)
- Sealant
- Phillips-head screwdriver
- Carpenter's level
- Utility blade

### CLEANING AND MAINTENANCE INSTRUCTIONS

- Avoid abrasive and harsh chemical cleaners.
- To maintain and protect luster of vanity sink components, RH bathroom care products are recommended.
- RH Stone Tops [ A ] have a honed finish, hand-polished edges, and are sealed twice with inert silicone sealant.
- Stone Top [ A ] should be re-sealed annually.


### Assembly Instructions:

1. Hold the wood hanger (E) against the wall. Adjust and mark the position using a pencil. The distance from bottom of the wood hanger to the floor is 23.75 inches. The wood hanger must cross four wall studs. The wood hanger must be level.
2. Mark the four screw holes on the wood hanger (E). Make sure the holes are in line with wall studs. Drill guide holes on each mark.
3. Use lag screws (F) and washers (G) to attach the wood hanger to the wall. Make sure the screws are secure in the studs.

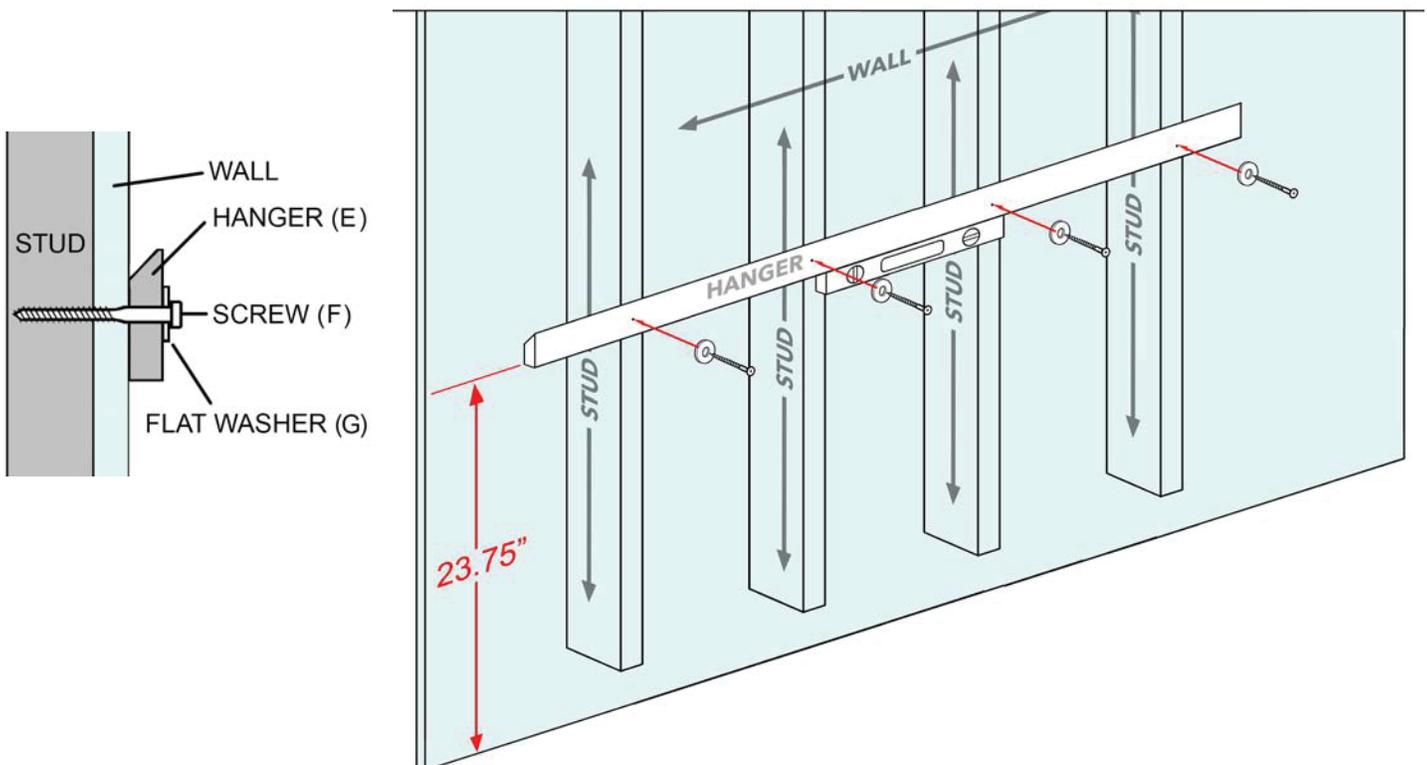


## HUTTON DOUBLE 90" FLOATING VANITY

4. Remove drawers from vanity (D). Hang the vanity base on the wood hanger (E), holding the vanity in place with two people. Do not let the full weight of the vanity base sit on the wall hanger until the vanity base is also screwed into the studs.

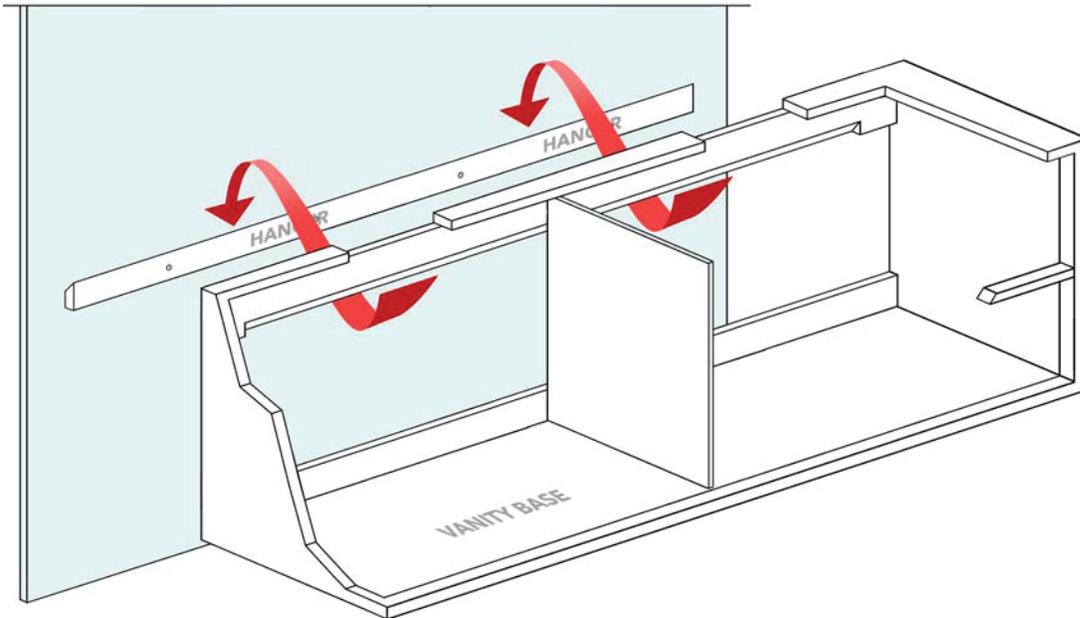


5. While two people hold the vanity base (D) in place, the third person marks screw placement in the top and bottom rails in the back of the vanity, making sure they are in line with the screws in the hanger and aligned with the studs. Then drill guide holes and secure vanity to the wall with lag screws (F) and washers (G).

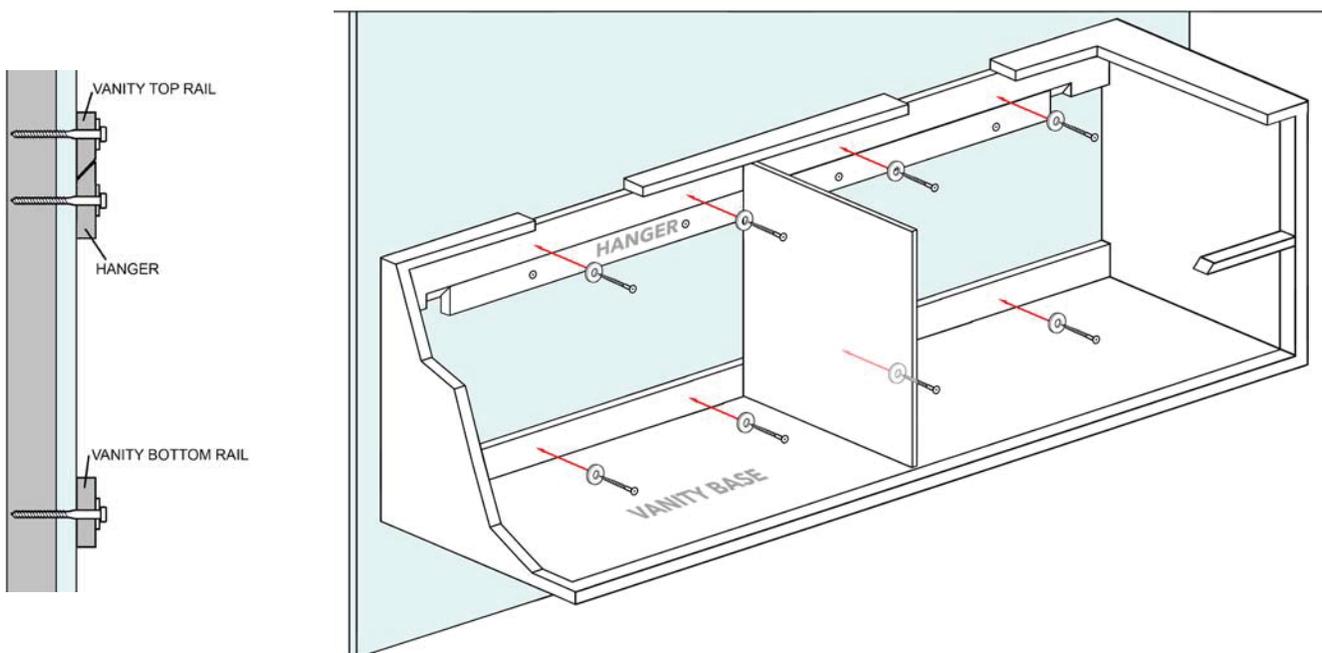


# RH

## HUTTON DOUBLE 90" FLOATING VANITY

- Using two people, carefully place stone top upside down on a flat, non-abrasive surface.
- Using setting tool (M), hammer calk-in anchors (H) straight into pre-drilled holes on underside of stone top. (see illustration)

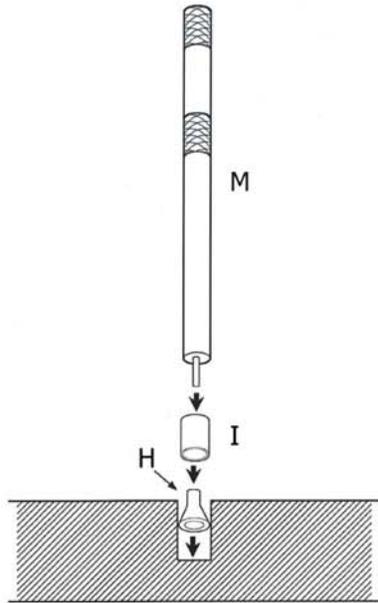


- Apply a continuous bead of sealant to the top surface of rim of lavatory basin (C) where it will contact underside of stone top. Position lavatory basin in its final location, upside down on underside of stone top. Overflow of lavatory basin should be on same side as pre-drilled faucet holes on stone top.
- Place four "L" brackets (J) with long sides over the lavatory basin rim.
- Insert screws (L) through washers (K) and "L" brackets. Screw into calk-in anchors with screwdriver. (See Illustration.) (Do not over-tighten.) Insure that lavatory basin is securely attached to stone top.

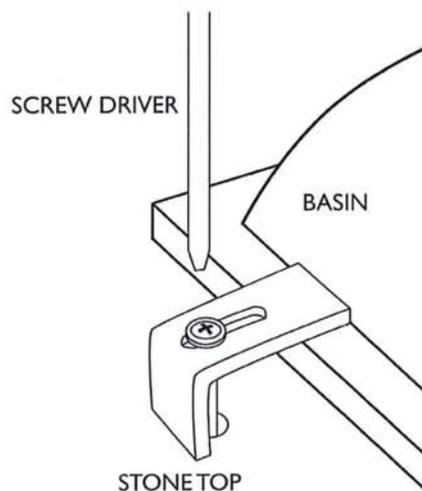


- Using two people, turn stone top with attached basin over and position carefully on top of vanity base.

### STONE TOP UN-PACKING & TRANSPORT


**\*\* WHEN MOVING STONE TOP, ALWAYS USE A TWO-MAN CREW \*\***

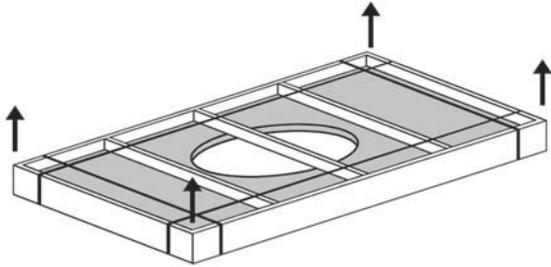

and lift the Stone Top [A] out of the crate.

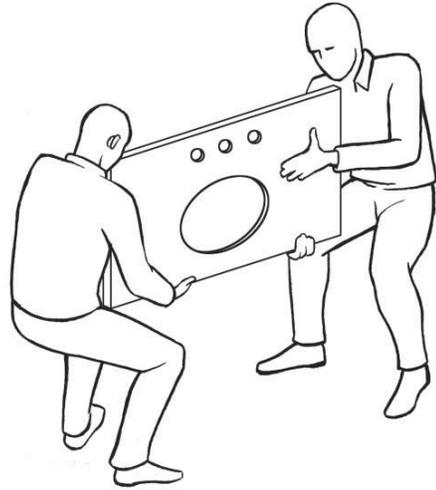

Always carry Stone Top [A] vertically

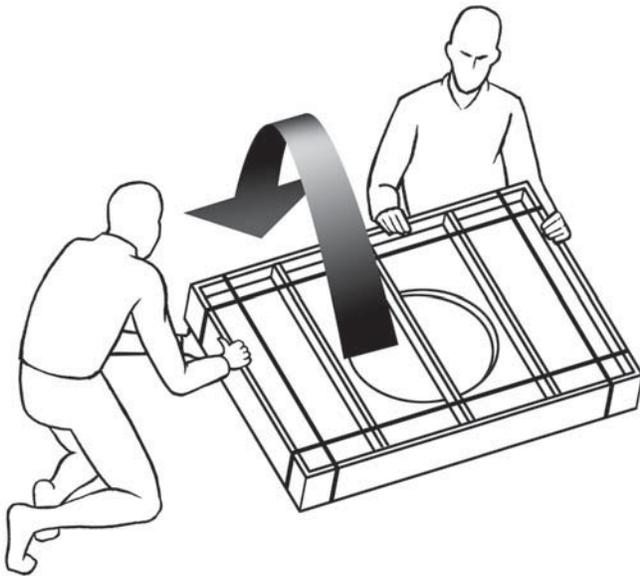


rotate the crate from vertical to flat.



Do not carry Stone Top [A] horizontally as it increases the risk of breakage or cracking.

### STONE TOP INSPECTION

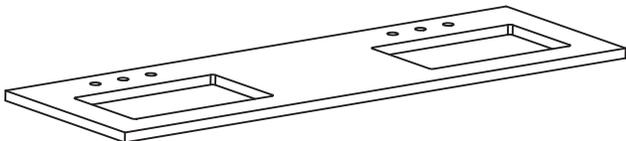

Inspect the Stone Top [A] for cracks or defects.  
If defects are detected, do not install and please call 877-777-7059.  
If no defects are detected; clean Stone Top [A] with a soft cloth.

### STONE TOP INSTALLATION



**Caution!** Installation between two walls requires special care.


- If installing Stone Top [ A ] between two walls, stop here and follow the next set of instructions.

#### Standard Stone Top Installation Guidelines

1. Apply a continuous bead of sealant to the top face of Sink Basin [ C ] rim where the Stone Top [ A ] makes contact with the Sink Basin [ C ].
2. Using a two-man crew, lift Stone Top [ A ] and set it on top of Vanity Base [ D ].
3. Apply silicone sealant at seam where Backsplash [ B ] meets the wall.  
(see illustration below).




#### Stone Top Installation Between Two Walls

1. Apply a continuous bead of sealant to the top face of Sink Basin [ C ] rim (where the Stone Top [ A ] makes contact with the Sink Basin [ C ]).
2. Using a two-man crew, lift Stone Top [ A ] and set it's rear edge on the back of the Vanity Base [ D ] (closest to rear wall) -- see illustration below.
3. Lower front of Stone top onto the Vanity Base [ D ] - make sure both ends are lowered at the same rate.
4. Do not shimmy, twist or turn the Stone Top [ A ] while lowering as this increases the risk of breakage!
5. Apply silicone sealant at seam where Backsplash [ B ] meets the wall.  
(see illustration below).

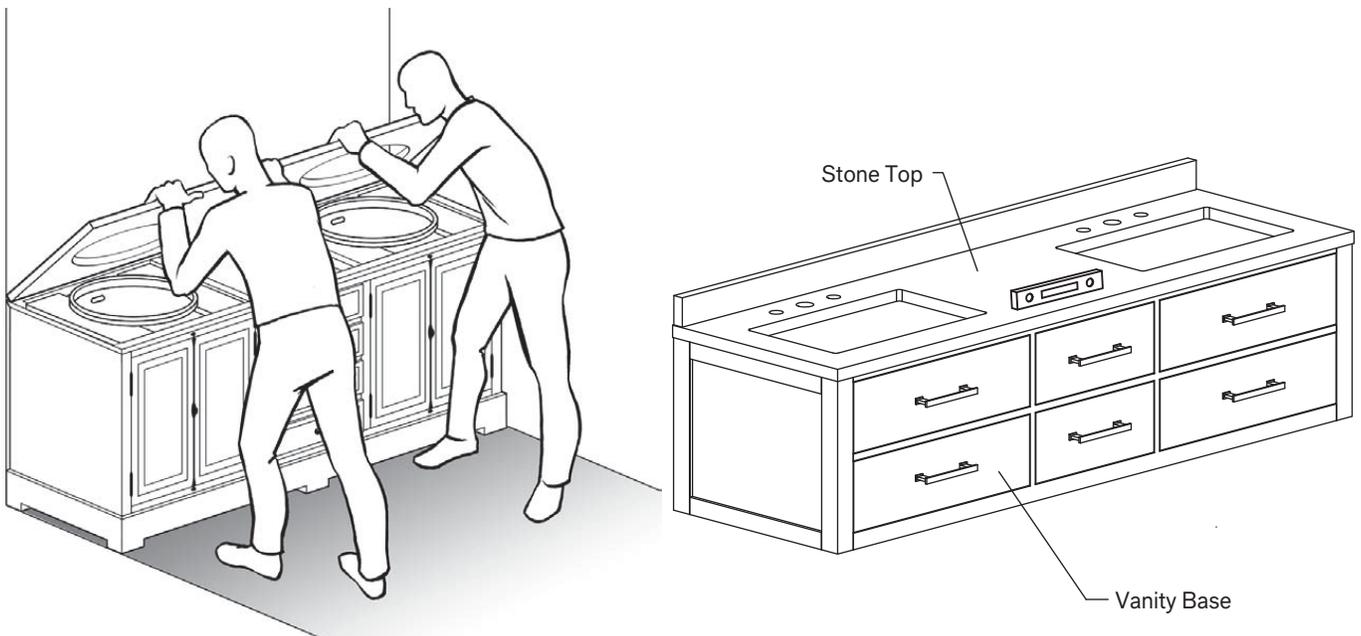


# RH

## HUTTON DOUBLE 90" FLOATING VANITY

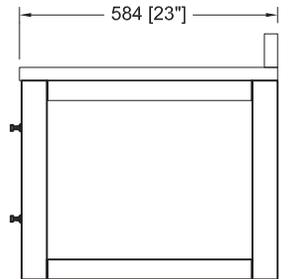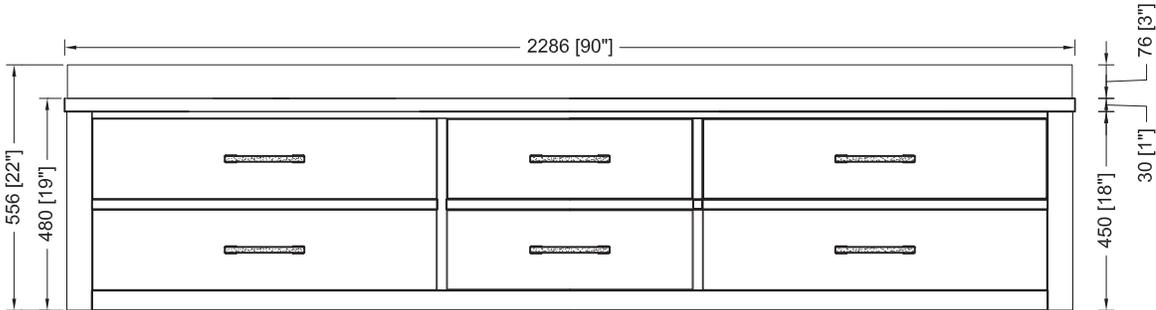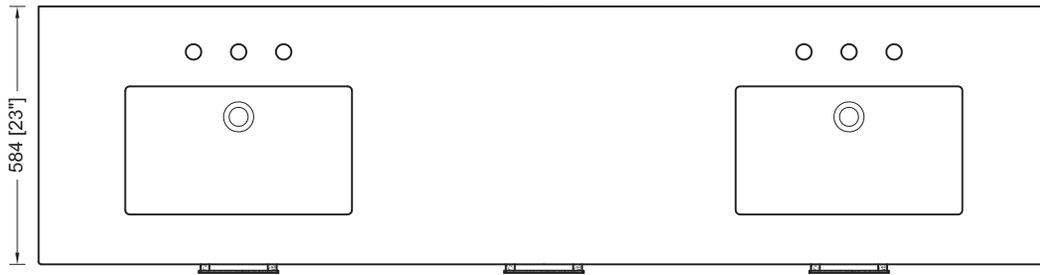

## HUTTON DOUBLE 90" FLOATING VANITY

### STONE TOP

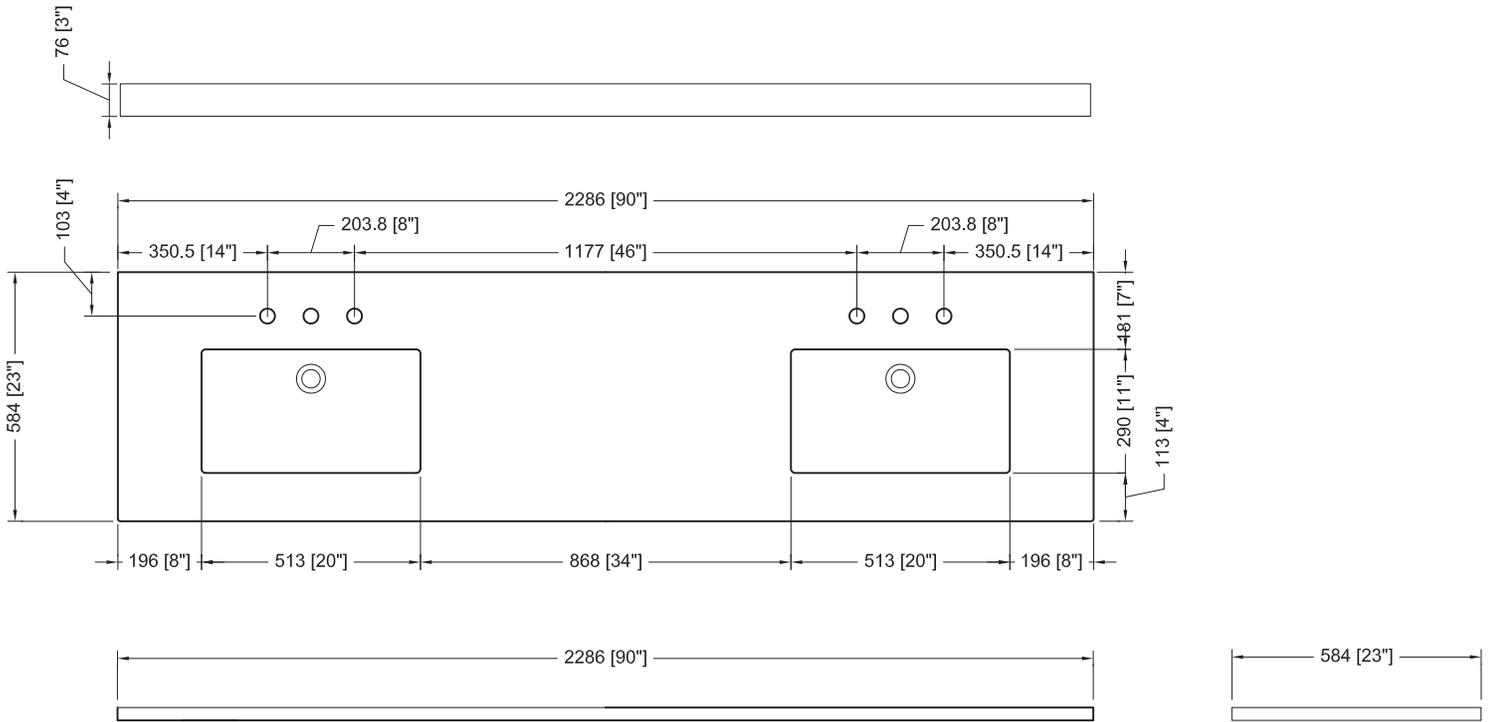

# RH

## HUTTON DOUBLE 90" FLOATING VANITY

### BASIN

