

RH

CRYSTAL HALO 32IN CHANDELIER

PARTS ENCLOSED

- (A) Junction Box (not included) 50lb (22.7kg). MIN. FIXTURE RETED
- (B) Mounting Screws (1 set; not included)
- (C) Wire Nut (3)
- (D1) Ceiling Plate (1)
- (D2) Canopy (1)
- (D3) Bolt (3)
- (D4) Nut (3)
- (D5) Body (1)
- (D6) Wire Locking Device (3)
- (E) Bulb (9+3Extra)


PRODUCT DESCRIPTION

General material: Calcite and Iron

Height: 6.75 in (12.5cm)

Diameter: 31.50in (80.0cm)

Weight: 44.49lbs (20.2kg)

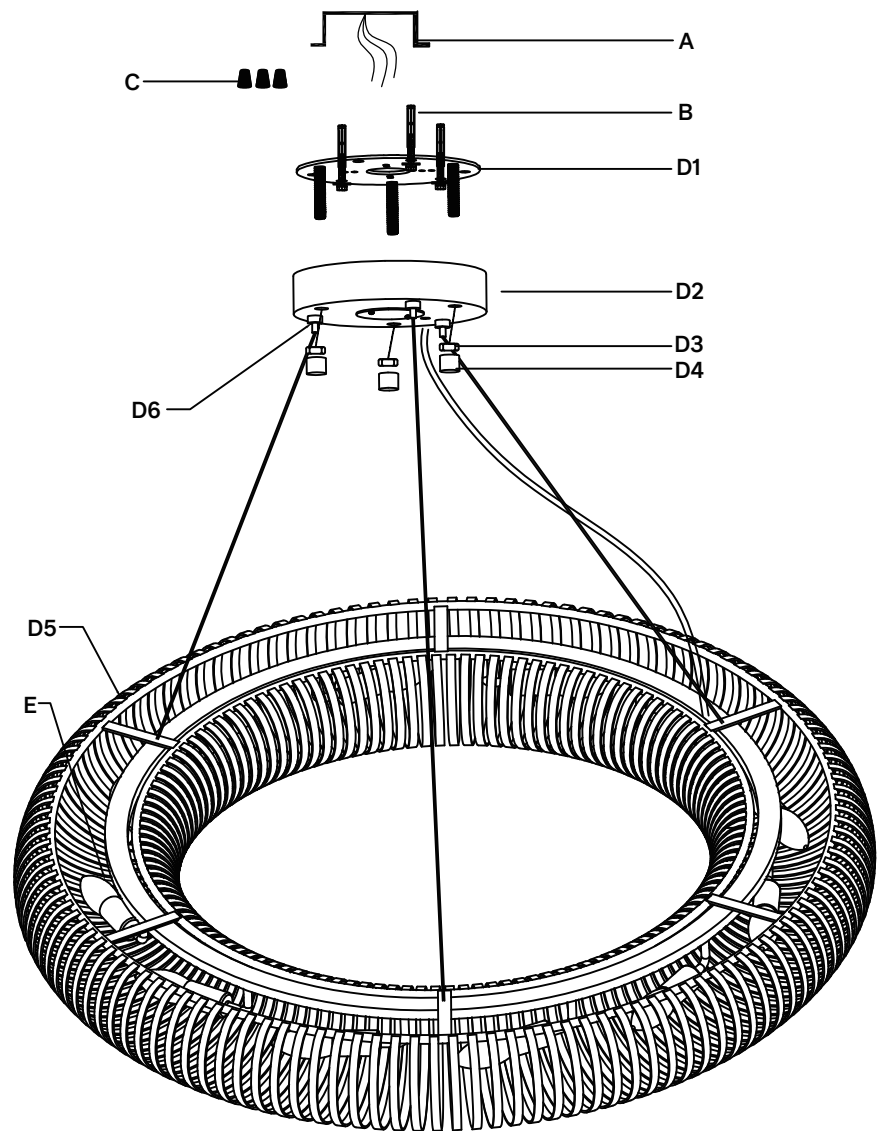


IMPORTANT PLEASE READ**IMPORTANT SAFETY INSTRUCTIONS**

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated (9) 25 Watt maximum E12 replaceable bulbs.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling lighth. For this light, at least a ceiling capacity of 222.47lbs (101.0kg) is required.
5. The manufacturer and distributor accept no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

 **WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE

 **WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds.
Keep out of reach of children under 3 years age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the bolts and nuts (D3 & D4) and remove the ceiling plate (D1) from the canopy (D2)..
4. Attach the ceiling plate (D1) to the ceiling with mounting screws (B).
5. Connect the ground wire from the fixture to the ground junction box wire (usually the green or bare wire) and wrap the connection with electrical tape. Connect the hot wire to the junction box wire (usually black or smooth) with a plastic wire nut (C) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire nut (C) and wrap the connection with electrical tape.
6. Move the canopy (D2) up to the ceiling plate (D1), then fasten the screw bolts and nut (D3 & D4).
7. Adjust the height of the lighting by loosening the screw nut (D6); tighten the nut.
8. Fasten the lightbulbs(E) to the lampholders inside the body (D5)..
9. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

ENVIRONMENT

Special waste handling may be required. Please contact your local authorities for more information.