


# RH

## ANVERS TASK FLOOR LAMP

### PARTS ENCLOSED

- (A) Lamp with Cord (1)
- (B) Dimmer Switch (1)
- (C) Electrical Plug (1)
- (D) Plastic Cover (1)

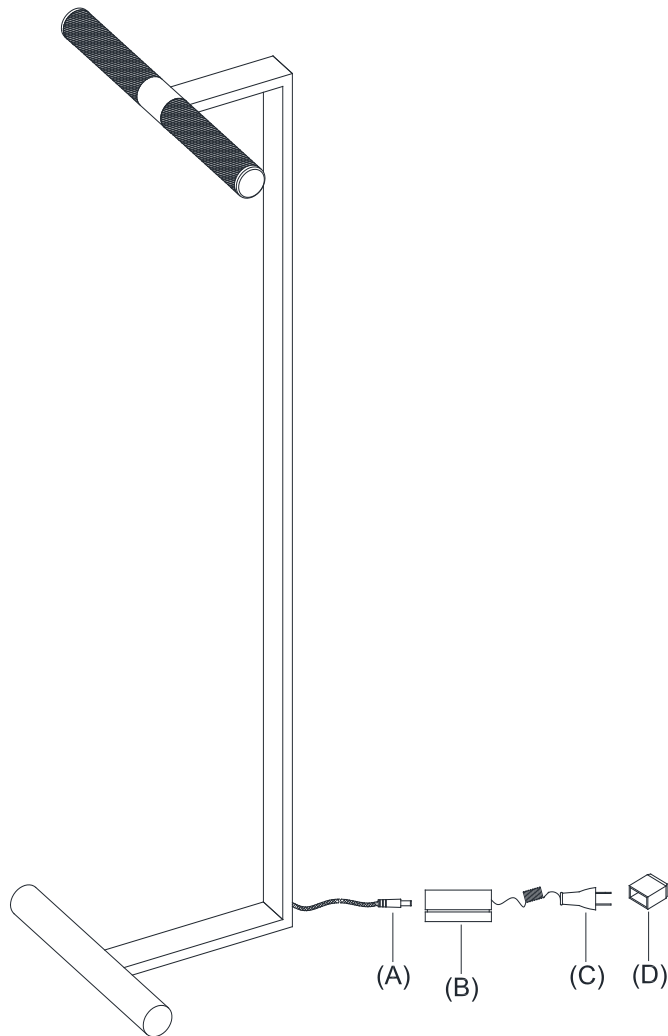

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

1. Do not break or pull out LED panel.
2. Indoor use only.
3. Do not look directly at the lightbulb when lit.
4. Keep lamp away from materials that may burn.
5. If the supply cord or adaptor is damaged, it must be replaced only by a service agent or a qualified-technician.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Connect the plug at end of the cord to the outlet at the side of Dimmer Switch (B).
3. Remove Plastic Cover (D) from Electrical Plug (C).
4. Plug into proper electrical outlet and test fixture.
5. Assembly is complete.

## TO OPERATE THE SWITCH:

1. When the lamp is unlit, simply tap the foot dimmer switch to turn the lamp on.
2. To adjust the brightness, tap and hold your foot on the switch and the light will begin to dim up or down. To dim the opposite way, remove your foot, then tap and hold again until the desired light level is achieved.
3. To turn the lamp off, tap the switch.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the lamp. Wipe clean with a soft, dry cloth.