
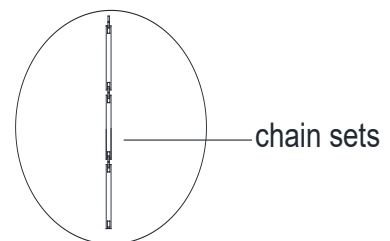
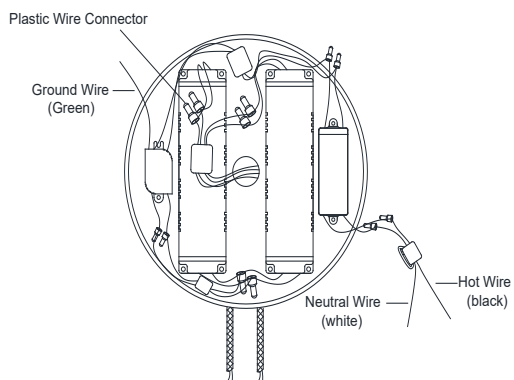


# RH

## MADERA CHANDELIER 72"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Loop (1)
- (C) Mounting Screws (2)
- (D) Canopy (1)
- (E) Canopy Ring (1)
- (F) Chain Sets (1)
- (G) Hanging Loop (1)
- (H) Inner Rod (1)
- (I) Joint (1)
- (J) Bulbs (18)
- (K) Sockets (18)

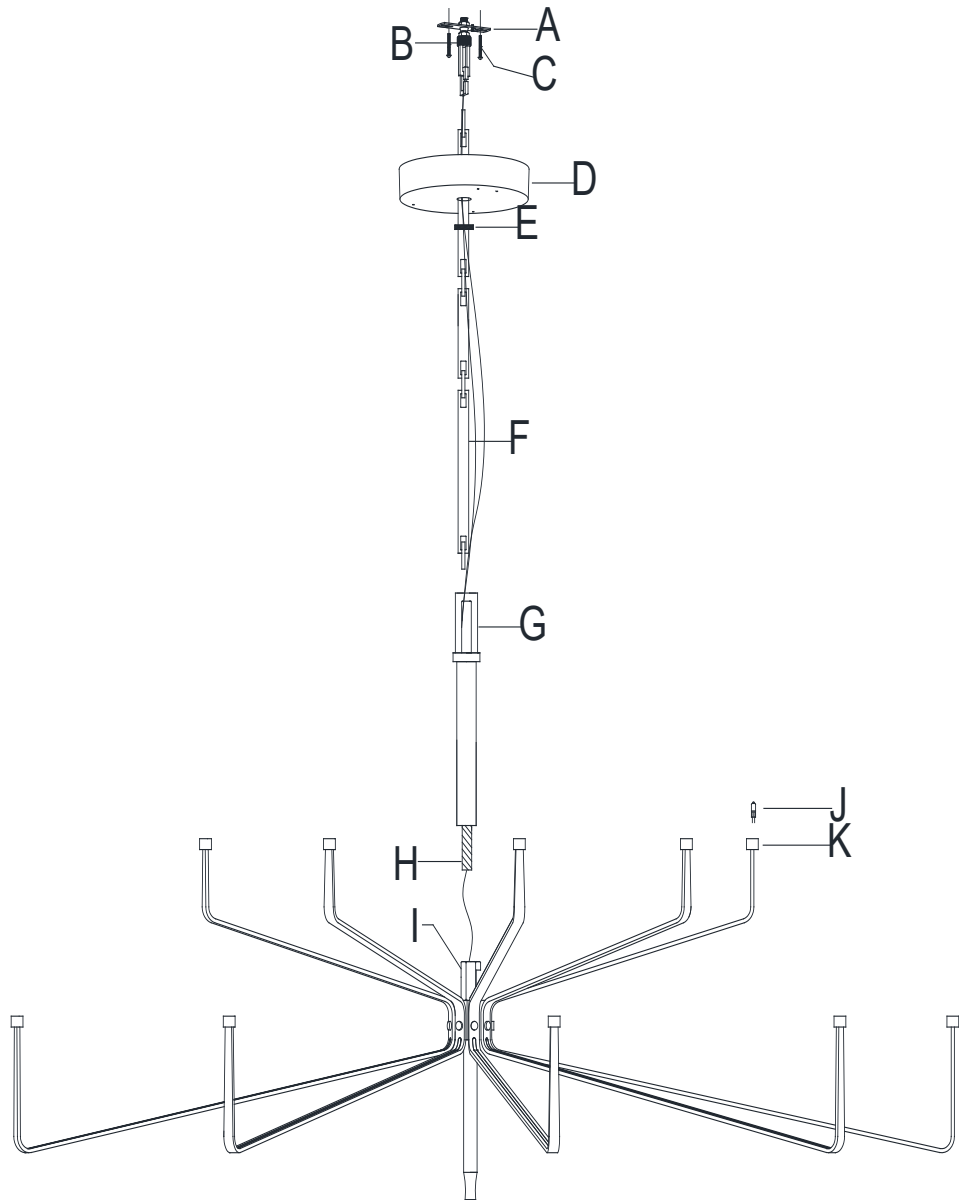

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to eighteen (18) 20-Watt maximum Type G4 lightbulbs (included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Thread Inner Rod (H) into Joint (I) by turning in a clockwise direction until tight.

## ASSEMBLY &amp; INSTALLATION CONT.

3. To determine the hanging height, connect partial or full quantity of Chain Sets (F) to Hanging Loop (G). If there is extra wire needed to be shortened, loosen the wire connections from the fixture wires to both drivers, cut the fixture wires to the desired length, and re-connect to the corresponding drivers.
4. Unscrew Canopy Ring (E). Slide Canopy Ring (E) and Canopy (D) on Chain Sets (F).
5. Affix Mounting Strap (A) to the ceiling outlet box and secure with Mounting Screws (C).
6. Affix Chain Sets (F) with the fixture body to Mounting Loop (B).
7. Gently pull the wire from the ceiling outlet box and allow the wire to hang. Feed the wire through the center hole of Mounting Strap (A).
8. Connect the fixture ground wire (green) to the ground wire (usually bare copper) from the wall outlet box with a wire nut. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the neutral wire (white) from the driver to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
10. Connect the hot wire (black) from the driver to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Carefully tuck the wires back into the outlet box.
12. Slide Canopy (D) to the affixed Mounting Strap (A) and secure with Canopy Ring (E).
13. Insert Bulbs (J) into Sockets (K).
14. Restore power to outlet box and check operation of fixture.
15. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.