

PARTS ENCLOSED

(A) Wire Nuts (3)

(B) Crossbar (1)

(C) Mounting Screws (2)

(D) Connector (1)

(E) Canopy (1)

(F) Lock Collar (1)


(G) Extension Rods (2)
w/ 18" Rods(H) Extension Rods (2)
w/ 12" Rods(I) Extension Rods (2)
w/ 6" Rods

(J) Metal Cap (1)

(K) Bulb (1)

(L) Glass Shade (1)

(M) Outer Frame (1)

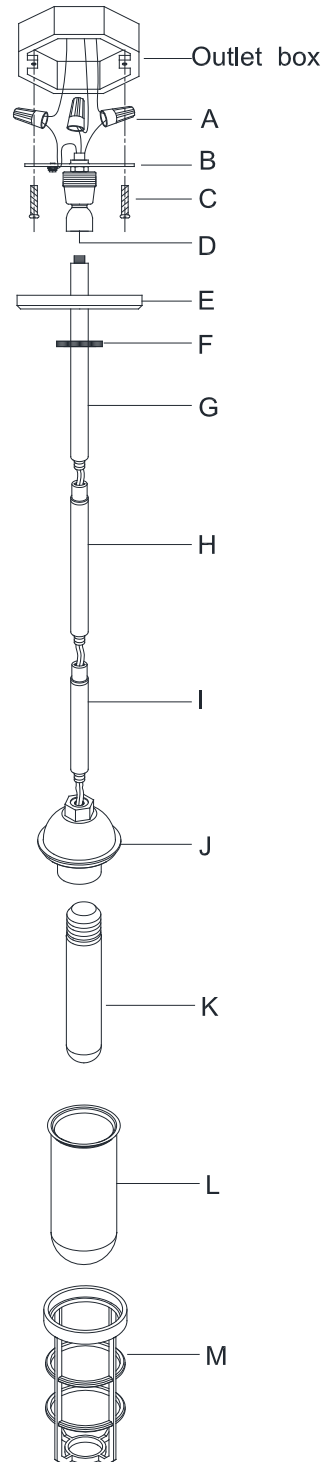

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 40-Watt maximum E26 Type T candelabra lightbulb (included), or one (1) 5-Watt E26 Type T LED lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Loosen Outer Frame (M) on Metal Cap (J), then insert Bulb (K) into the socket.
3. Place Glass Shade (L) in Outer Frame (M). Lock Outer Frame (M) to Glass Shade (L) on Metal Cap (J) of the lamp fixture.

ASSEMBLY & INSTALLATION CONT.

4. Select Extension Rods (G, H, I) with the desired length and pass the cord through Lock Collar (F), Canopy (E) and Extension Rods (G, H, I) in sequence, through Connector (D), and the pipe of the Crossbar (B).
5. Connect Extension Rods (G, H, I) and the lowest extension rod to the nut at the top of Metal Cap (J).
6. Install Crossbar (B) with Connector (D) to the ceiling outlet box and secure with Mounting Screws (C).
7. When you reach Canopy (E) and Connector (D), measure the wires and cut. Be sure to leave enough to connect inside of the outlet box.
8. Strip the insulation back on the two power supply wires about 5/8".
9. Twist the power supply and ground wire together and push through the center hole of Connector (D).
10. Connect the fixture ground wire (bare) to the ground wire from the ceiling outlet box using Wire Nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
11. Connect the fixture neutral wire (ribbed, no markings) with the neutral wire from the outlet box using a Wire Nut (A).
12. Connect the fixture hot wire (smooth edge, markings) with the hot wire from the outlet box using a Wire Nut (A). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. Tuck these wire connections neatly into the outlet box to secure.
14. Affix Canopy (E) to Connector (D) and secure with Lock Collar (F).
15. Installation is complete. Turn on power at fuse or circuit breaker.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.