


## PETRUS SQUARE FLUSHMOUNT

### PARTS ENCLOSED

- (A) Wire Nuts (3)
- (B) Toggle Wings (4)
- (C) Mounting Plate (1)
- (D) Toggle Bolts (4)
- (E) Screws (4)
- (F) Mounting Screws (2)
- (G) Side Screws (4)
- (H) Back Plate (1)
- (I) Hex Wrench (1)
- (J) Metal Rings (2)
- (K) Side Screws (3)
- (L) Inner Glass Shade (1)
- (M) Bulb (1)
- (N) Outer Glass Shade (1)
- (O) Outer Frame (1)
- (P) Cable Lock Nut (1)
- (Q) Safety Cable (1)

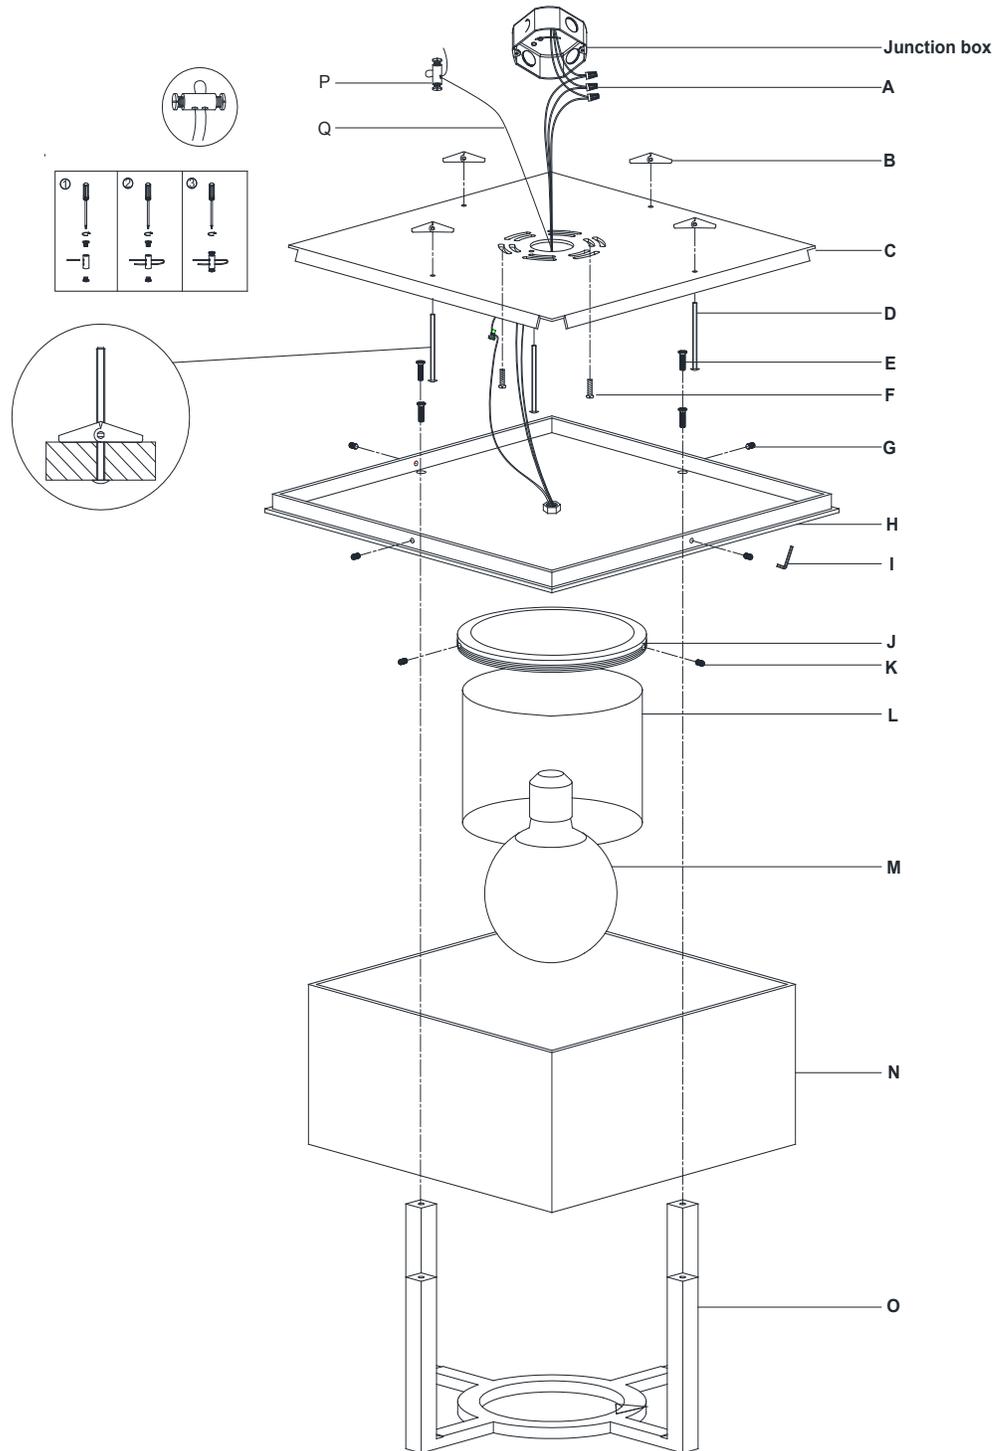

## PETRUS SQUARE FLUSHMOUNT

**IMPORTANT SAFETY INSTRUCTIONS**

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 40-Watt maximum E26 Type G standard incandescent lightbulb (included) or one (1) 5-Watt E26 Type G LED lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

**ASSEMBLY & INSTALLATION**

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Mounting Plate (C) from Canopy (H) by loosening Side Screws (G) using Hex Wrench (I).
3. Remove Outer Frame (O) by loosening Mounting Screws (F) using Hex Wrench (I).

**ASSEMBLY & INSTALLATION CONT.**

4. Place Mounting Plate (C) onto the ceiling, then draw 4 dots to match the holes in Mounting Plate (C). Drill a hole on each mark on the ceiling and insert Toggle Wings (B).
5. Affix Mounting Plate (C) to the wire box and fasten Screws (E), then fasten Toggle Bolts (D) to Toggle Wings (B).
6. Remove Side Screws (K) from Metal Ring (J), then attach Metal Ring (J) onto Inner Glass Shade (L) and secure using Hex Wrench (I). Rotate Inner Glass Shade (L) to Canopy (H).
7. Insert Bulb (M) into the socket.
8. Carefully place Outer Glass Shade (N) into Outer Frame (O), then secure it to Back Plate (H) using Screws (E).
9. Join the fixture safety cable with Safety Cable (Q) from the ceiling.
10. Wrap both safety cables around Cable Lock Nut (P).
11. Insert the screws into both holes onto Cable Lock Nut (P) and secure in place with screwdriver.
12. Push Cable Lock Nut (P) into the ceiling outlet box.
13. Connect the hot wire (black) from the fixture to the hot wire from the outlet box (usually black). Fasten them together with a Wire Nut (A) and wrap the connection with electrical tape.
14. Connect the neutral wire (white) from the fixture to the neutral wire from the outlet box (usually white). **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
15. Connect the ground wire (bare copper) from the fixture to the ground wire from the outlet box (usually green or copper in color). **IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.**
16. Attach Back Plate (H) to Mounting Plate (C), then secure with both Side Screws (G) using Hex Wrench (I).
17. Installation is complete. Turn on power at fuse or circuit breaker.

**CARE INSTRUCTIONS**

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.