RH SIRENE OVAL CHANDELIER 65"



IMPORTANT PLEASE READ

IMPORTANT SAFETY INSTRUCTIONS

Use an authorized and certified electrician for consultation and installation. Electrician must be familiar with commercial-type applications of very heavy chandeliers.

The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this fixture, a ceiling capacity of at least 935 kg (2057 lb.) is required.

This fixture has been rated for up to fifteen (15) 60-Watt maximum Type A bulbs or 9-Watt maximum LED bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until lamp is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing bulbs. Do not touch bulbs or look directly at lit bulbs when fixture is turned on. Keep flammable materials away from lit bulbs.

This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects, and other reproductive harm. Wash hands after installing, handling, cleaning, or otherwise touching this light fixture.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY & INSTRUCTION

- 1. Carefully remove all parts from the box and remove all plastic coverings.
- 2. Shut off electrical supply at main fuse box / circuit breaker.
- Put the lower rods (H) into the frame (I) and turn clockwise until the rods fully screw into the frame. Connect upper rods (G) and lower rods (H) and fully tighten them.

ASSEMBLY & INSTRUCTION, CONT.

- If needed, you can locate the extension rods (M) and check the actual suspension length compared to the incremental fixture suspension length per number of extensions desired.
- Install strength screw (A) to ceiling beam through outlet box. Have a professional contractor reinforce ceiling.
- Mark the location of the mounting holes on the ceiling using a pencil. Using the marks as a guide, drill holes for the toggles (b). Insert the toggles into the holes, using a screwdriver to fully tighten until flush with the ceiling.
- 7. Connect the mounting plate loops and the upper rod loops using the link (D). Fully tighten with the link nuts.
- Connect the safety cables (d) of the fixture and the safety cables from ceiling with the lock (e) and fully tighten with the lock screws.
- Attach the ground wire from the fixture to the ground junction box wire from the outlet box (usually green or bare wire) with a plastic wire connector (a) and wrap the connection with electrical tape.
- 10. Connect the hot wire to the hot junction box wire (usually black or smooth) with a plastic wire connector (a) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire connector (a) and wrap the connection with electrical tape.
- Fasten mounting plate (B) onto the ceiling using toggle screws

 (c). Screw the toggle screws into the toggles (b). Tighten with a screwdriver. Screw the strength nut (C) onto the strength screw (A) and fully tighten it.
- Attach the canopy (E) to the mounting plate (B) using the rings (F); fully tighten them.
- 13. Insert the bulbs (L) into the sockets. Hang the glass (K) onto the hooks (J) from lower tier to upper tier.
- 14. Restore power to the junction box and test fixture. Installation is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. WIPE CLEAN WITH A SOFT, DRY CLOTH.

CEILING SAFETY CABLE ASSEMBLY

1. Remove the nut locker A & B by loosening the set screw from the ceiling safety cable before installation.

- 2. Insert the ceiling safety cable through the nut lockers as the drawing shows.
- 3. Fasten the nut locker A with set screw by small allen key.
- 4. Fasten the nut locker B with set screw by small allen key.

