

RH


RIVETED MESH ROUND CHANDELIER 40"

PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Canopy (1)
- (C) Lock Ring (1)
- (D) Tube (1)
- (E) Base (1)
- (F) Mounting Plate Loop (1)
- (G) Chain Links (2)
- (H) Bulbs (8) (included)

HARDWARE INCLUDED

- (a) Plastic Wire Connectors (2)
- (b) Green Ground Screw (1)
- (c) Mounting Screws (2)
- (d) Allen Key (1)

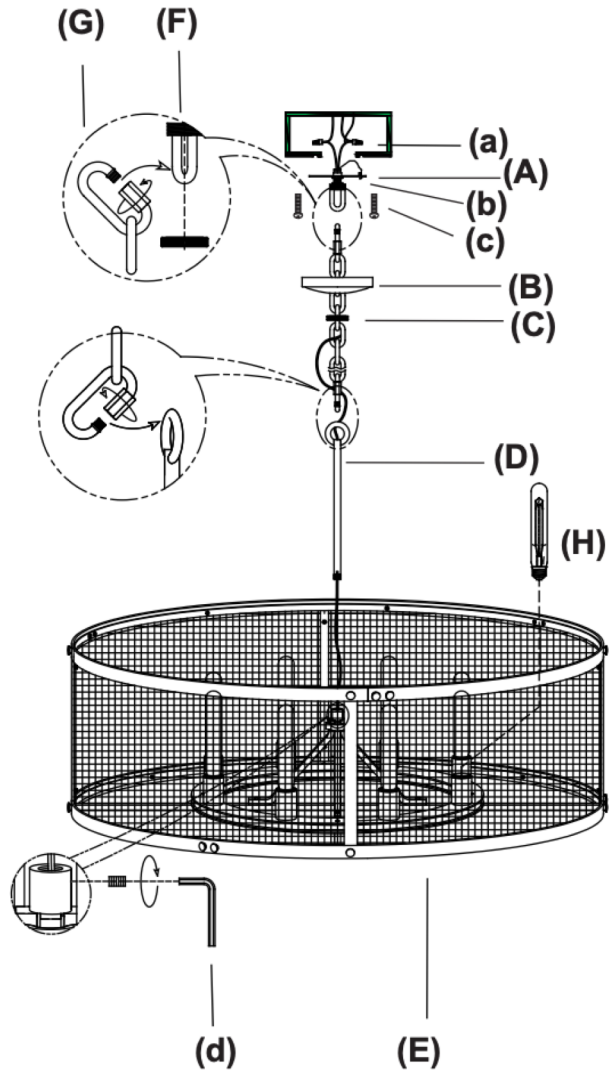



RIVETED MESH ROUND CHANDELIER 40"

IMPORTANT PLEASE READ

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

SAFETY INSTRUCTIONS

This fixture must be mounted to the ceiling independent of an outlet box. Your ceiling may require modification to allow the mounting plate to be secured to a structural member. This fixture **MUST NOT** be secured using any type of hollow ceiling anchor, such as a toggle bolt. This fixture has been rated for up to eight (8) 60-Watt maximum Type T9 bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb. Wash hands after installing, handling, cleaning, or otherwise touching this light fixture.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn off power to the junction box where the lamp will be installed.
3. Put the tube (D) onto the base (E), and secure the base (E) by using Allen key (d) provided.
4. Connect the tube (D) and the lower chain link (G). Connect the mounting plate loop (F) and the upper chain link (G).

ASSEMBLY & INSTALLATION, CONT.

5. Attach the ground wire from the fixture to the ground junction box wire from the outlet box (usually green or bare wire). Or wrap the fixture's ground wire around the green ground screw (b), and then fix the green ground screw into the mounting plate (A).
6. Connect the hot wire to the hot junction box wire (usually black or smooth) with a plastic wire connector (a) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire connector (a) and wrap the connection with electrical tape.
7. Fasten mounting plate (A) onto the ceiling outlet box using two mounting screws (c).
8. Attach the canopy (B) to the mounting plate (A) using the lock ring (C) and tighten it.
9. Insert the 60-Watt Type T9 bulbs (included) into threaded sockets.
10. Restore power to the junction box and test lamp fixture.
11. Installation is complete.

CARE INSTRUCTIONS

Wipe clean with a soft, dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.