


RESTORATION HARDWARE

MESH FLOOR LAMP

PARTS ENCLOSED:

- (A) Base (1)
- (B) Tube 1 (1)
- (C) Tube 2 (1)
- (D) Center box (1)
- (E) Metal shade (1)
- (F) Finial (1)
- (G) Bulb (4)

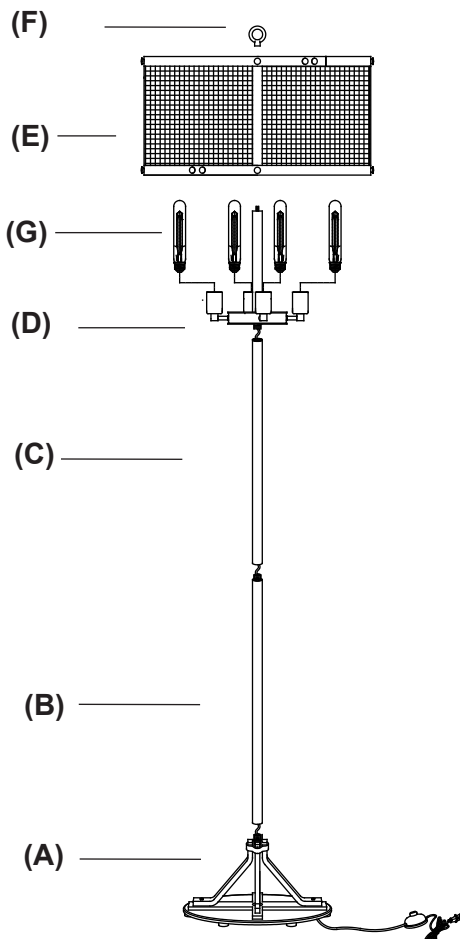

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (4) 60-watt maximum TYPE T9 bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Put the Tube 1 (B) onto the Base (A) and tighten it.
3. Put the Tube 2 (C) onto the Tube 1 (B) and tighten it.
4. Put the Center box (D) onto the Tube 2 (C) and tighten it.
5. Unscrew the Finial (F) from the Center box (D) and place the Metal shade (E).
5. Attach the finial and tighten to secure the shade.
9. Insert the 60-watt Type T9 bulbs (included) into threaded sockets.
7. Plug into proper electrical outlet and test fixture.
8. Assembly is complete.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp. JUST WIPE CLEAN WITH SOFT CLOTH.