

 
# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

## PARTS ENCLOSED

- (A) Mounting strap (1)
- (B) Nipple (1)
- (C) Mounting screws (2)
- (D) Canopy (1)
- (E) Mounting loop (1)
- (F) Canopy ring (1)
- (G) (H) (J) (K) (L) Cord cover (5)
- (M) Lamp shade (1)

## 10 INCH VINTAGE BARN PENDANT

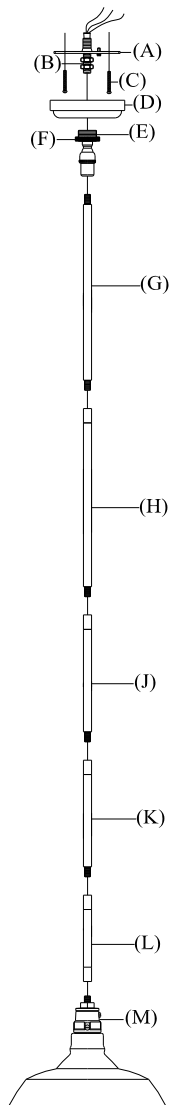

## IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 60-watt maximum Type A bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS:

1. For a safe and secure installation, please ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.
2. All wires are connected. When unpacking, be careful not to pull with wires as a bad connection may result.
3. Do not connect electricity until your fixture is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

## TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the pendant will be installed.
3. Attach cord cover (L) onto threaded nipple on top of lamp shade (M) by turning (L) in counter-clockwise direction.
4. Attach cord cover (K) into top opening of (L) by turning (K) in counter-clockwise direction, attach cord cover (H) into top opening of (J) by turning (H) in counter-clockwise direction, and attach cord cover (G) into top opening of (H) by turning (G) in counter-clockwise direction.
5. Attach cord cover (G) with whole assembly base into bottom of mounting loop (E)
6. Unscrew canopy ring (F), slip canopy ring (F) and canopy (D) onto cord cover.
7. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
8. Attach mounting loop (E) to thread nipple (B) and tighten the set screw.
9. Attach fixture grounding (green) and house grounding wire with to back plate the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
11. Repeat the procedure with the hot (black) wire to hot (usually black) outlet wire. Always make sure that no wire strands are left outside of the connections. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
12. Tuck these wire connections neatly into the ceiling outlet box.
13. Raise the canopy (D) to the ceiling and screw canopy ring (F) onto the mounting loop (E) to secure.
14. Insert the recommended bulb into the socket.
15. Restore power to the junction box and test the pendant fixture.
16. Assembly is complete.

## CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.

 
# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

## PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Nipple (1)
- (C) Mounting Screws (2)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Canopy ring (1)
- (G) (H) (J) (K) (L) Cord Cover (5)
- (M) Shade holder (1)
- (N) Lamp shade (1)
- (O) Socket ring (1)

## 14 INCH VINTAGE BARN PENDANT

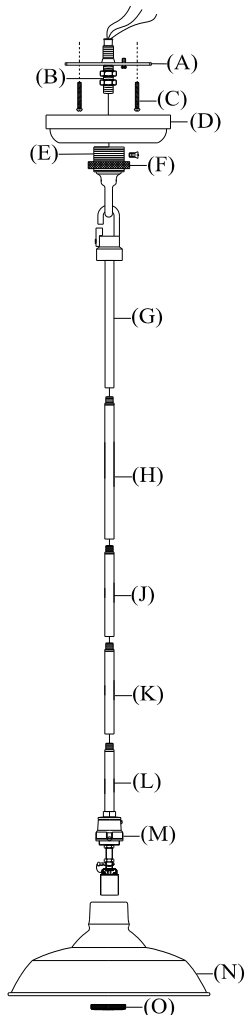

## IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 60-watt maximum Type A bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS:

1. For a safe and secure installation, please ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.
2. All wires are connected. When unpacking, be careful not to pull with wires as a bad connection may result.
3. Do not connect electricity until your fixture is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

## TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Attach cord cover (K) onto top opening of (L) by turning (K) in counter-clockwise direction, attach cord cover (J) onto top opening of (K) by turning (J) in counter-clockwise direction, attach cord cover (H) onto top opening of (J) by turning (H) in counter-clockwise direction, and attach cord cover (G) onto top opening of (H) by turning (G) in counter-clockwise direction.
4. Hook cord cover (G) to mounting loop (E).
5. Unscrew canopy ring (F), slip canopy ring (F) and canopy (D) to cord cover.
6. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
7. Attach mounting loop (E) to thread nipple (B) and tighten the set screw.
8. Attach fixture grounding (green) and house grounding wire with to back plate the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
10. Repeat the procedure with the hot (black) wire to hot (usually black) outlet wire. Always make sure that no wire strands are left outside of the connections. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
11. Tuck these wire connections neatly into the ceiling outlet box.
12. Remove socket ring (O) from shade holder (M).
13. Attach lamp shade (N) to the shade holder (M), secure with socket ring (O).
14. Raise the canopy (D) to the ceiling and screw canopy ring (F) onto the mounting loop (E) to secure.
15. Insert the recommended bulb into the socket.
16. Restore power to the junction box and test the pendant fixture.
17. Assembly is complete.

## CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.

 
# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

## PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Nipple (1)
- (C) Mounting Screws (2)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Canopy ring (1)
- (G) (H) (J) (K) (L) Cord Cover (5)
- (M) Shade holder (1)
- (N) Lamp shade (1)
- (O) Socket ring (1)

## 18 INCH VINTAGE BARN PENDANT

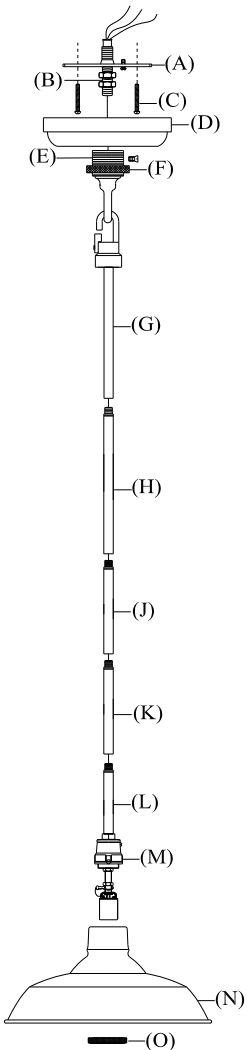

## IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 75-watt maximum Type A bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS:

1. For a safe and secure installation, please ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.
2. All wires are connected. When unpacking, be careful not to pull with wires as a bad connection may result.
3. Do not connect electricity until your fixture is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

## TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Attach cord cover (K) onto top opening of (L) by turning (K) in counter-clockwise direction, attach cord cover (J) onto top opening of (K) by turning (J) in counter-clockwise direction, attach cord cover (H) onto top opening of (J) by turning (H) in counter-clockwise direction, and attach cord cover (G) onto top opening of (H) by turning (G) in counter-clockwise direction.
4. Hook cord cover (G) to mounting loop (E).
5. Unscrew canopy ring (F), slip canopy ring (F) and canopy (D) onto cord cover.
6. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
7. Attach mounting loop (E) to thread nipple (B) and tighten the set screw.
8. Attach fixture grounding (green) and house grounding wire with to back plate the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
10. Repeat the procedure with the hot (black) wire to hot (usually black) outlet wire. Always make sure that no wire strands are left outside of the connections. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
11. Tuck these wire connections neatly into the ceiling outlet box.
12. Remove socket ring (O) form shade holder (M).
13. Attach lamp shade (N) to the shade holder (M), and tighten with socket ring (O).
14. Raise the canopy (D) to the ceiling and screw canopy ring (F) onto the mounting loop (E) to secure.
15. Insert the recommended bulb into the socket.
16. Restore power to the junction box and test the pendant fixture.
17. Assembly is complete.

## CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.

 
# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

## PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Nipple (1)
- (C) Mounting Screws (2)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Canopy ring (1)
- (G) (H) (J) (K) (L) Cord Cover (5)
- (M) Shade holder (1)
- (N) Lamp shade (1)
- (O) Socket ring (1)

## 22 INCH VINTAGE BARN PENDANT

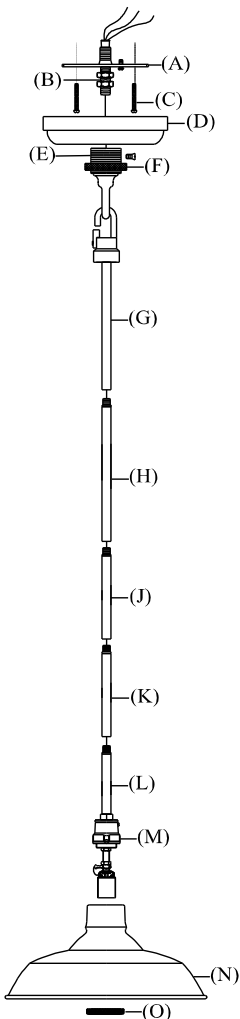

## IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 100-watt maximum Type A bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS:

1. For a safe and secure installation, please ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.
2. All wires are connected. When unpacking, be careful not to pull with wires as a bad connection may result.
3. Do not connect electricity until your fixture is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

## TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Attach cord cover (K) onto top opening of (L) by turning (K) in counter-clockwise direction, attach cord cover (J) onto top opening of (K) by turning (J) in counter-clockwise direction, attach cord cover (H) onto top opening of (J) by turning (H) in counter-clockwise direction, and attach cord cover (G) onto top opening of (H) by turning (G) in counter-clockwise direction.
4. Hook cord cover (G) to mounting loop (E).
5. Unscrew canopy ring (F), slip canopy ring (F) and canopy (D) onto cord cover.
6. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
7. Attach mounting loop (E) to thread nipple (B) and tighten the set screw.
8. Attach fixture grounding (green) and house grounding wire with to back plate the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
10. Repeat the procedure with the hot (black) wire to hot (usually black) outlet wire. Always make sure that no wire strands are left outside of the connections. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
11. Tuck these wire connections neatly into the ceiling outlet box.
12. Remove socket ring (O) from shade holder (M).
13. Attach lamp shade (N) to the shade holder (M), and tighten with socket ring (O).
14. Raise the canopy (D) to the ceiling and screw canopy ring (F) onto the mounting loop (E) to secure.
15. Insert the recommended bulb into the socket.
16. Restore power to the junction box and test the pendant fixture.
17. Assembly is complete.

## CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.

 
# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

## PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screw (2)
- (C) Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Canopy Ring (1)
- (G) (H) (J) (K) Cord Cover (4)
- (L) Fixture Base (1)

## 24" VINTAGE BARN PENDANT

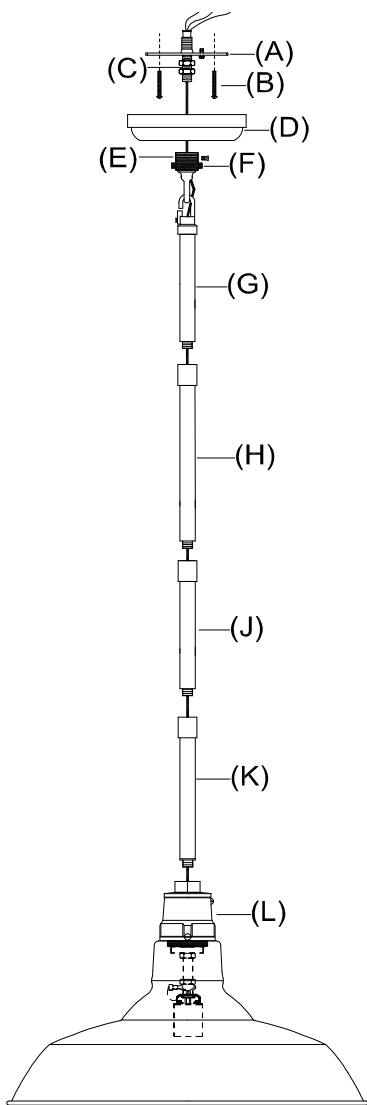

## IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 100-watt maximum Type A bulb. To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS:

1. For a safe and secure installation, please ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.
2. All wires are connected. When unpacking, be careful not to pull with wires as a bad connection may result.
3. Do not connect electricity until your fixture is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture."

## TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the pendant will be installed.
3. Attach cord cover (K) to fixture base (L) by inserting threaded rod inside of (K) into threaded opening on top of fixture base (L).
4. Attach cord cover (J) to top opening of (K) by turning (J) in counter-clockwise direction, attach cord cover (H) to top opening of (J) by turning (H) in counter-clockwise direction, and attach cord cover (G) to top opening of (H) by turning (G) in counter-clockwise direction.
5. Slip canopy ring (F) and canopy (D) over the threaded section of mounting loop (E). Open the end link of the mounting loop of cover (G) and lift the fixture base to attach to the mounting loop (E) and secure the link.
6. Attach mounting strap (A) to mounting outlet box with mounting screws (B) and insert top thread nipple (C) in mounting strap (A).
7. Attach mounting loop (E) to thread nipple (C) and tighten the set screw.
8. Attach fixture grounding (green) and house grounding wire with to back plate the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
10. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
11. Tuck these wire connections neatly into the ceiling outlet box.
12. Raise the canopy (D) to the ceiling and screw canopy ring (F) onto the mounting loop (E) to secure.
13. Insert the recommended bulb into the socket.
14. Restore power to the junction box and test the pendant fixture.
15. Assembly is complete.

## CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.

 
# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

## PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Nipple (1)
- (C) Mounting Screws (2)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Canopy ring (1)
- (G) (H) (J) (K) (L) Cord Cover (5)
- (M) Shade holder (1)
- (N) Lamp shade (1)
- (O) Socket ring (1)

## 26 INCH VINTAGE BARN PENDANT

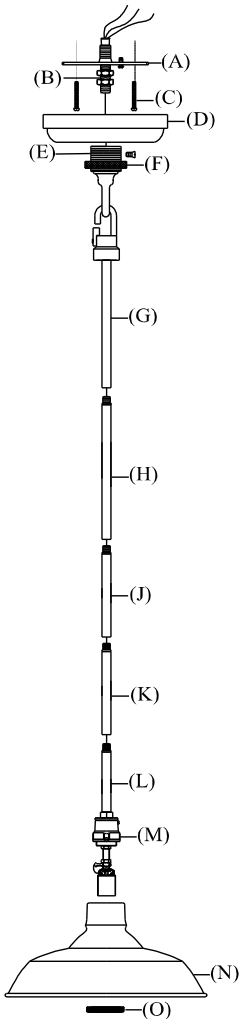

## IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 100-watt maximum Type A bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS:

1. For a safe and secure installation, please ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.
2. All wires are connected. When unpacking, be careful not to pull with wires as a bad connection may result.
3. Do not connect electricity until your fixture is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

## TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Attach cord cover (K) onto top opening of (L) by turning (K) in counter-clockwise direction, attach cord cover (J) onto top opening of (K) by turning (J) in counter-clockwise direction, attach cord cover (H) onto top opening of (J) by turning (H) in counter-clockwise direction, and attach cord cover (G) onto top opening of (H) by turning (G) in counter-clockwise direction.
4. Hook cord cover (G) to mounting loop (E).
5. Unscrew canopy ring (F), slip canopy ring (F) and canopy (D) onto cord cover.
6. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
7. Attach mounting loop (E) to thread nipple (B) and tighten the set screw.
8. Attach fixture grounding (green) and house grounding wire with to back plate the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
10. Repeat the procedure with the hot (black) wire to hot (usually black) outlet wire. Always make sure that no wire strands are left outside of the connections. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
11. Tuck these wire connections neatly into the ceiling outlet box.
12. Remove socket ring (O) from shade holder (M).
13. Attach lamp shade (N) to the shade holder (M), and tighten with socket ring (O).
14. Raise the canopy (D) to the ceiling and screw canopy ring (F) onto the mounting loop (E) to secure.
15. Insert the recommended bulb into the socket.
16. Restore power to the junction box and test the pendant fixture.
17. Assembly is complete.

## CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.