


RESTORATION HARDWARE

METRO RAILWAY DOUBLE PENDANT

PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Fixture Base (1)
- (D) Base Screws (4)
- (E) Nut (1)
- (F) Mounting loop (1)
- (G) Canopy Base (1)
- (H) Set Screws (4)
- (J) (L) (O) Square Tubes (3)
- (K) (M) (P) Inner Pipes (3)
- (Q) Lamp Pole (1)
- (R) Screws (4)
- (S) Cage Shades (2)
- (T) Light Bulbs (2)

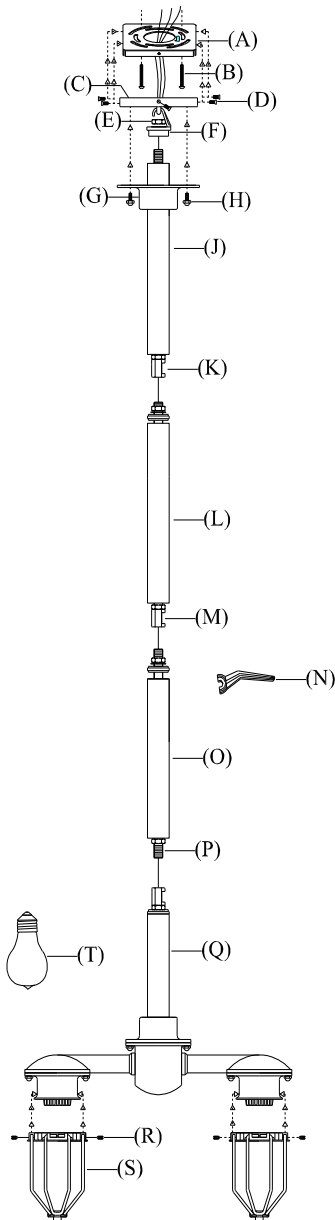

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to two (2) 60-Watt maximum Type A light bulbs (H) (40W Expo Quad Loop Filament Bulbs included) –OR– 13W Compact Fluorescent bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Thread inner pipe (P) into top of (Q) until it touched the inner pipe of (Q), tighten the nut to keep the inner pipe (P) from turning. Tighten with wrench (N) provided.
3. Slide Square tube (O) on top of (Q), tighten the hex nut on top and follow with hex connector (M). Tighten with wrench (N) provided.
4. Repeat the same procedures for the parts (L), (K), (J).
5. Tighten the hex nut (E) on top of inner pipe of (J), make sure the inner pipe not protruded from (E), adjust the thread-in length on the other end if needed.
6. Loosen set screws (H) from canopy base (G) and slide canopy base (G) on (J).
7. Hook the fixture base (C) to the (F) and slide canopy base (G) to fixture base (C) secure with set screws (H).
8. Remove mounting plate (A) from fixture base (C) by unscrewing base screws (D) in counter-clockwise direction.
9. Place mounting plate (A) to ceiling outlet box by aligning the holes and secure with mounting screws (B).
10. Attach the fixture ground wire and house ground wire (bare wire) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
11. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (smooth wire) to the outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
13. Place the fixture base (C) to mounting plate (A) by aligning the holes and secure with base screws (D).
14. Insert the recommended bulbs into sockets.
15. Remove screws (R) from cage shades (S).
16. Attach cage shades (S) to shade holder and secure with screws (R).
17. Assembly is complete.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.