


# RESTORATION HARDWARE

## CLASSIC CANDLESTICK FLOOR LAMP

### PARTS ENCLOSED

- (A) Finial (1)
- (B) Harp (1)
- (C) Harp saddle (1)
- (D) Upper pole (1)
- (E) Threaded collar (1)
- (F) Lower pole (1)
- (G) Lamp base (1)
- (H) Base weight (1)
- (J) Washer (1)
- (K) Nut (1)
- (L) Wrench (1)
- (M) LED light bulb (1)

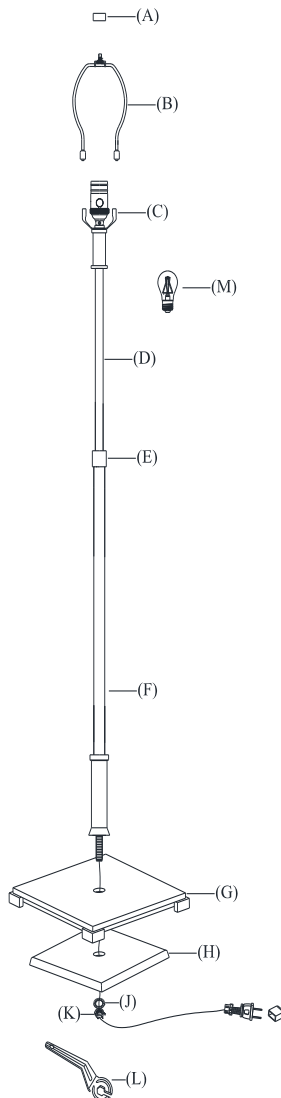

### IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 100-watt maximum TYPE A standard bulb (not included) OR 23W Compact Fluorescent bulb (not included) or one (1) 4.5-watt SLBED light bulb (M) (included). To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.

### TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove white plastic bushing from inside bottom opening of pole (F) and top of base (G) before assembling.
3. Join parts (F), (G) and (H) together, slide washer (J) over the threaded nipple which protruded to bottom of base weight (H), screw nut (K) on the threaded nipple to secure lamp base to pole. Tighten with wrench (L) provided.
4. Pull the wire until tight.
5. Insert harp (B) into the harp saddle (C).
6. Unscrew the finial (A) from the harp (B) and place the desired shade (not included) over the harp.
7. Attach the finial (A) and tighten to secure the shade.
8. Insert the recommended bulb into threaded socket.
9. Plug into proper electrical outlet and test fixture.
10. Assembly is complete.

### TO ADJUST HEIGHT:

1. Loosen threaded collar (E) in the counter-clockwise direction.
2. Adjust lamp by pulling or pushing upper pole (D) up or down to desired height.
3. Tighten threaded collar (E) in the clockwise direction.

### CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.