


RH

CAPIZ SHELL PENDANT 36"

PARTS ENCLOSED

- (A) Green Ground Screw (1)
- (B) Crossbar (1)
- (C) J-Box Mounting Screws (2)
- (D) Plastic Wire Connectors (3)
- (E) Canopy (1)
- (F) Canopy Crown Washers (2)
- (G) Canopy Screws (2)
- (H) Fixture (1)
- (I) Sockets (3)
- (J) Bulbs (not included) (3)

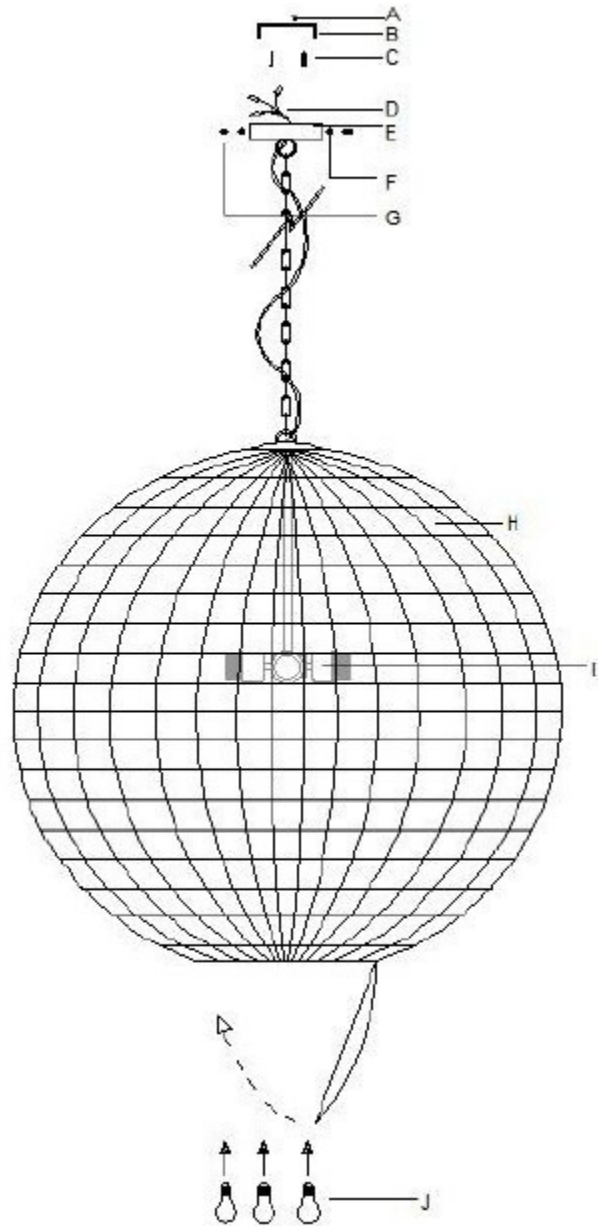



CAPIZ SHELL PENDANT 36"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.

We strongly recommend that a professional electrician install all direct-wire fixtures.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with ground wire or equivalent protection system).

For your safety, it is strongly recommended that two people install and hang the lighting fixture.

This fixture has been rated for up to three (3) 60-watt maximum Type A standard incandescent lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

The lighting fixture is meant for indoor use, damp or dry location.

Save these instructions.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

2. Carefully unpack all fixture parts and hardware and lay out on a clear workspace.

3. Separate Crossbar (B) from Canopy (E) by removing the two Canopy Screws (G) and two Canopy Crown Washers (F). Do not discard Canopy Screws (G) and Canopy Crown Washers (F), as these will be used later.

4. Gently pull existing wire down from the ceiling junction box and allow it to hang.

5. Carefully inspect the fixture's wires. The NEUTRAL FIXTURE WIRE is white. The HOT FIXTURE WIRE is black, and the GROUND WIRE is yellow-green.

6. Attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the outlet junction box (J-Box) (usually green insulation or bare wire). Fasten each together with a Plastic Wire Connector (D) by twisting the connector clockwise; wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet junction box DOES NOT have a GROUND WIRE, be sure to insert the Green Ground Screw (A) into the Crossbar (B) marked as "GND" and wrap the fixture's bare ground wire around the Green Ground Screw (A).

IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME BE PROPERLY GROUNDED!

7. Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white insulation). Fasten each together with a Plastic Wire Connector (D) by twisting the connector clockwise; wrap the connection with electrical tape. Be sure that no wire strands are exposed.

8. Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black insulation). Fasten each together with a Plastic Wire Connector (D) by twisting the connector clockwise; wrap the connection with electrical tape. Be sure that no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

9. Gently tuck the wire connections neatly into the ceiling junction box.

10. Attach the Crossbar (B) to the ceiling outlet box using the J-Box Mounting Screws (C). Tighten screws with a screwdriver.

11. Pull Canopy (E) up over the Crossbar (B) aligning the holes in the Crossbar (B) with the two holes on the side of the Canopy (E).

12. Insert the two (2) Canopy Screws (G) with Canopy Crown Washers (F) and tighten with a screwdriver.

13. Insert three (3) 60-watt maximum Type A standard incandescent lightbulbs (J) (not included) into the Sockets (I). DO NOT EXCEED SPECIFIED WATTAGE.

14. Restore power to junction box and test fixture.

15. Installation and assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.

Wipe clean with a soft, dry cloth.