


## PETITE CANDLESTICK LINEN SHADE SWING-ARM SCONCE

### PARTS ENCLOSED

- (A) Socket Ring (1)
- (B) Threaded Socket (1)
- (C) Lamp Arm (1)
- (D) Fixture Base (1)
- (E) Set Screws (4)
- (F) Mounting Screws (2)
- (G) Mounting Plate (1)
- (H) Allen Wrench (1)
- (I) Shade (1)

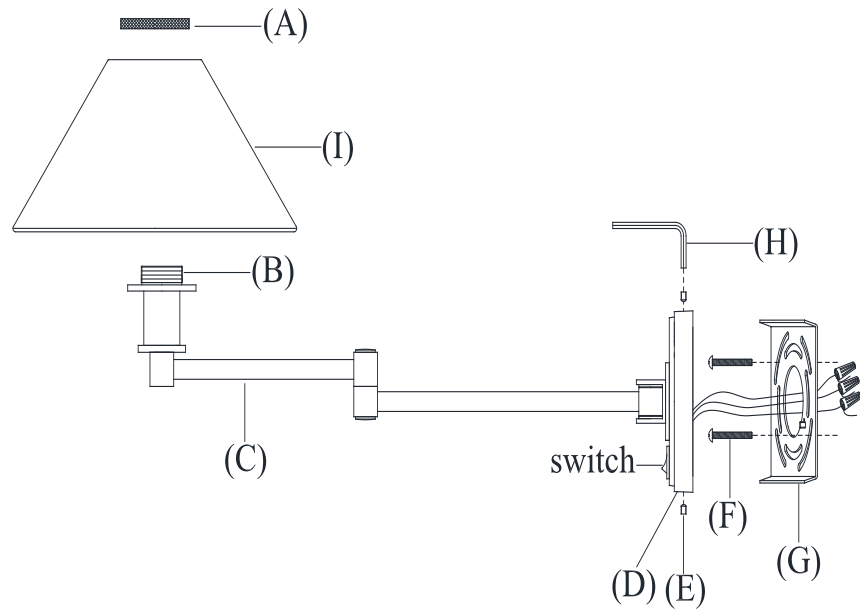

## PETITE CANDLESTICK LINEN SHADE SWING-ARM SCONCE

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for one (1) 60-Watt maximum Type B standard lightbulb (not included) or 13-Watt compact fluorescent lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Mounting Plate (G) from Fixture Base (D) by unscrewing Set Screws (E) in a counter-clockwise direction using Allen Wrench (H).
3. Attach Mounting Plate (G) to the wall outlet box by aligning the holes and secure with Mounting Screws (F).

## ASSEMBLY &amp; INSTALLATION CONT.

4. Gently pull the wire from wall outlet box and allow the wire to hang. Thread the wire through the center hole in Mounting Plate (G).
5. Attach the fixture ground wire (green) to house ground wire (usually green or bare wire) with a wire nut. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
6. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
7. Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
8. Carefully tuck the wires back into the outlet box.
9. Attach Fixture Base (D) to Mounting Plate (G) and tighten with Set Screws (E) using Allen Wrench (H).
10. Remove Socket Ring (A) from Threaded Socket (B). Attach Shade (I) over the top of Threaded Socket (B), then secure with Socket Ring (A).
11. Insert the bulb (not included) into Threaded Socket (B).
12. Restore power to outlet box and check operation of fixture.
13. Assembly is complete.

## TO ADJUST:

1. Adjust the position of Shade (I) by swinging Lamp Arm (C) if needed.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.