


RESTORATION HARDWARE

FILAMENT ROUND 3-LIGHT CLUSTER

PARTS ENCLOSED

- (A) Mounting plate (1)
- (B) Mounting screws (2)
- (C) Base screws (3)
- (D) Fixture base (1)
- (E) Shade holders (3)
- (F) Thumbscrews (9)
- (G) Socket rings (3)
- (H) Light bulbs (3)

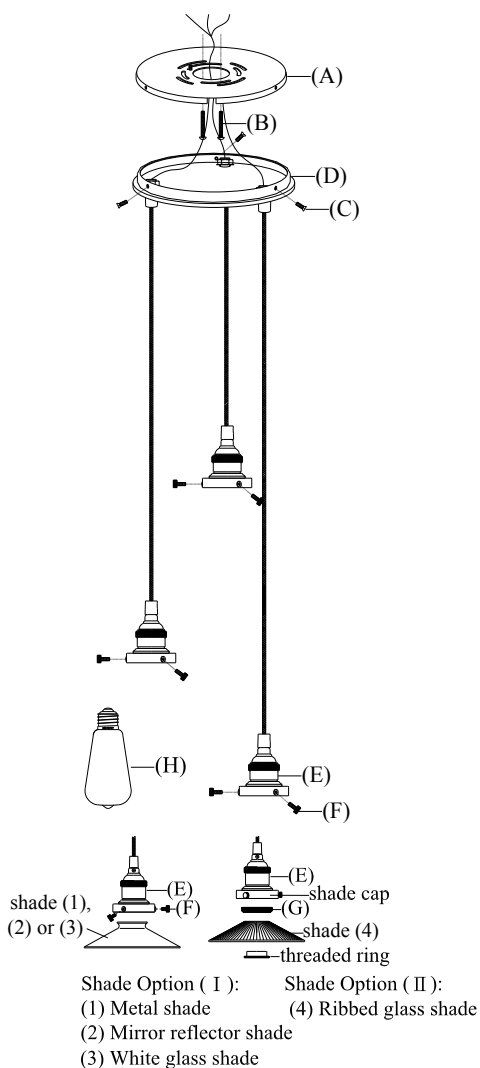

NOTE: you may shorten the hanging length of each cord by loosening the set screw on the fitting where the cord meets the canopy. Once you have set the desired length, retighten the set screw to lock the cord in place.

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to three (3) 40-watt maximum Type A light bulbs (included) or three (3) 13W Compact Fluorescent bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. **SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!**
2. Carefully remove all parts from the box and remove all plastic covering.
3. Remove mounting plate (A) from fixture base (D) by removing base screws (C).
4. Affix mounting plate (A) to ceiling outlet box with mounting screws (B) provided.
5. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting plate (A).
6. Attach the fixture ground wire and house ground wire (usually green wire) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
7. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
8. Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
9. Attach fixture base (D) to mounting plate (A), tighten with base screws (C).
10. **You can install without any shade or install shades following.**
11. **SHADE ASSEMBLY: (All shades are not included)**
Shade Option (I): When you using the shade (1), (2) or (3), loosen thumbscrews (F) from shade holder (E), place metal shade (1), (2) or (3) onto shade holder (E) and secure with thumbscrews (F).
Shade Option (II): If you want to use the shade (4), remove socket ring (G), place shade cap and shade (4) onto shade holder (E) and secure with threaded ring provided. (Keep the socket ring (G) in case of changing back to Option (I) to use the other shades).
12. Insert recommended light bulbs (included) into sockets.
13. Restore power to outlet box and check operation of fixture.
14. Assembly is complete.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.