


RESTORATION HARDWARE

CIRCA 1900 TRAIN STATION SCONCE

PARTS ENCLOSED

- | | |
|------------------------|---------------------|
| (A) Toggle bolt (2) | (H) Glass shade (1) |
| (B) Fixture base (1) | (J) Socket ring (1) |
| (C) Mounting screw (2) | (K) Light bulb (1) |
| (D) Adjustment key (1) | (L) CFL bulb (1) |
| (E) Lamp pole (1) | |
| (F) Socket housing (1) | |
| (G) Thumbscrew (3) | |

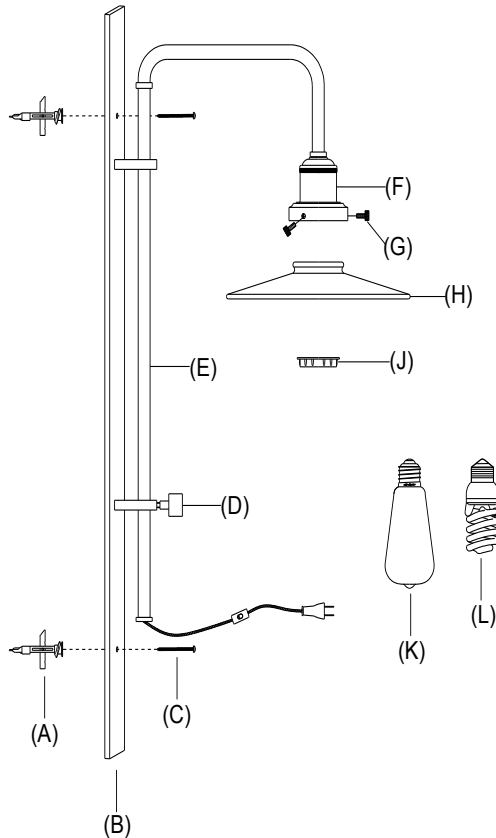

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN. This fixture has been rated for up to one (1) 40-Watt maximum Type A standard bulb (K) (included) or 13-Watt compact fluorescent light bulb (L) (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Place fixture base (B) at desired location on wall. Use it as a template, mark center points for both mounting holes with a pencil. Remove fixture base (B).
4. Drill small holes on each point location on the wall, each hole should be big enough to accommodate the toggle bolts (A). Push toggle bolts (A) into the holes on the wall.
5. Attach fixture base (B) to the wall by aligning the holes with toggle bolts (A) and secure by inserting mounting screws (C) to the toggle bolts (A).
6. Remove socket ring (J) and loosen the thumbscrews (G) from socket housing (F), carefully place the glass shade (H) over the socket housing (F) and secure with thumbscrews (G) and socket ring (J). **DO NOT OVER-TIGHTEN; OTHERWISE THE SHADE WILL BE DAMAGED.**
7. Insert the recommended bulb into threaded socket.
8. Restore power to outlet box and check operation of fixture.
9. Assembly is complete.

To Adjust lamp height:

1. Loosen the adjustment key (D), adjust lamp by moving lamp pole (E) up or down to desired height.
2. Tighten the adjustment key (D).

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.