


# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Furniture. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options.

## PARTS ENCLOSED:

- (A) Wooden Beam ( Not included )
- (B) Ceiling Mounting Hardware Assembly
  - (B1) - Ceiling Mounting Plate
  - (B2) - Mounting Bolts & Nuts
  - (B3) - Quick Link
- (C) Ceiling Rose
- (D) Retaining Nut
- (E) Ceiling Loop
- (F) Hook (attached to Metal Chain)
- (G) Metal Chain
- (H) Power Cord
- (I) Ground Wire
- (J) Hook (attached to metal Chain)
- (K) Loop in the Pendant
- (L) Pendant
- (M) Spanners-02 pcs. ( Not shown in the drawing )

## 19TH C. VICTORIAN GLOBE PENDANT 25"

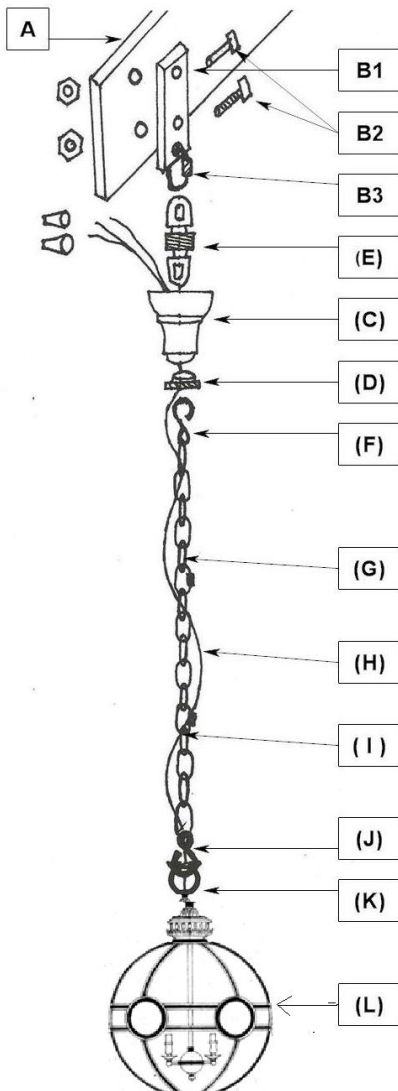

## IMPORTANT SAFETY INSTRUCTIONS:

1. **Use an authorized and certified electrician for consultation and installation. Electrician must be familiar with commercial-type applications of very heavy chandeliers and hazards involved. Electrician should install it as per applicable installation code.**
2. This fixture has been rated for 8 x 40-watt maximum E12, Type CA bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. **The ceiling must have at least the load bearing capacity of 5 times of the weight of the ceiling light. For this light, ceiling should have load bearing capacity of 555 lbs, at least.**
5. The manufacturer and distributor accept no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

## WARNINGS :

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

## TO ASSEMBLE :

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX / CIRCUIT BREAKER TO THE JUNCTION BOX ( not shown in the adjoining drawing ) WHERE THE CEILING LIGHT WILL BE INSTALLED.
2. Remove all parts from carton. Do not throw away any parts.
3. Check if the grommets have been inserted in Ceiling Loop (E). If not then insert this yourself.
4. Take the Ceiling Mounted Hardware Assembly (B) and loosen the Mounting Nuts and Bolts ( B2) from the Ceiling Mounting Plate (B1) and attach the Ceiling Plate ( B1) to the Wooden Beam (A) with Mounting Nuts and Bolts (B2) and tight them ( with the spanners provided and not shown in the adjoining drawing ). Attach the Quick Link (B3) to the Ceiling Mounting Plate (B1). Now Hang the two sided Ceiling Loop (E) on the Quick Link ( B3) and insert the Ceiling Loop ( E ) in the Ceiling Rose (C) .
5. On the Pendant (L), open the window market with round red sticker 'OPEN HERE'. Assemble three Type CA Lamps into the sockets of the **Pendant (L)**
6. Open the wire coil- Power Cord (H) and the Ground Wire (I) coming out from the Pendant (L) and lay them together and parallel to each other.
7. Attach the Hook (J) on one side of the chain to the Pendant Loop (K) in the Pendant (L)
8. Weave the wires Power Cord (H) and the Ground Wire (I) through the Metal Chain (G) – taking the wires through alternate links of the Metal Chain (G).
9. Lift carefully the Pendant (L) with one end of the Metal Chain (G) attached to it and place it in one elevated position (eg on a step ladder) in such a way that the wire cords can freely reach the ceiling Junction Box.
10. Guide the wires- coming out from the Pendant (L) and running woven through the Metal Chain (G) - through the Ceiling Loop (E). Retaining Nut (D) and the Ceiling Rose (C) in the order mentioned.
11. **MAKE PROPER ELECTRICAL CONNECTIONS. THIS INSTALLATION SHOULD BE DONE BY A QUALIFIED LICENSED ELECTRICIAN.**
12. **Fasten wires together with a plastic Wire Connector (not provided) as follows:-**
  - (a). Connect the Grounding Wire (silver colour un-laminated wire) from the Pendant (L) to the Ground Wire in the Junction Box through Wire Connector. Tightly wrap the Wire Connector with the electrical insulation tape.
  - (b). Connect the Neutral Wire of the Pendant (L) to the Neutral Wire in the Junction Box through the Wire Connector. Connect the Live Wire of the Pendant (L) to the Live Wire in the Junction Box through the Wire Connector. Tightly wrap Wire Connector with the electrical insulation tape.
13. Slide the Ceiling Rose (C) and place it over the Ceiling Mounting Plate (B1) and Two-Sided Ceiling Loop (E) and screw the Retaining Nut (D) to the threads of Two Sided Ceiling Loop (E). Screw the Retaining Nut (D) upwards so that the Ceiling Rose (C) is in contact with the ceiling.
14. **The Outlet Box / Junction Box should be covered with the suitable cover ( Not provided ).**
15. Attach the Hook (F) of the Metal Chain (G) to the Ceiling Loop (E)
16. Check whether the connection is sufficiently strong by manually loading the Metal Chain (G).
17. Carefully lower the Pendant (L) along with the Metal Chain (G) until the Metal Chain (G) is taut. Straighten the Metal Chain (G) links.
18. Restore power to the Junction Box and test the ceiling light fixture.

## CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.