

RESTORATION HARDWARE

MASON GLASS FILAMENT PENDANT CONE

PARTS ENCLOSED:

- | | |
|---------------------|-----------------|
| (A) EXPANSION WEDGE | (F) NUTS |
| (B) MOUNTING PLATE | (G) METAL CHAIN |
| (C) WASHERS | (H) SHADE |
| (D) NUTS (E) CANOPY | (I) BULB |

IMPORTANT SAFETY INSTRUCTIONS:

This fixture has been rated for one (1) 40-watt maximum TYPE A standard bulb, 30-watt bulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result. Do not connect electricity until your lamp is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

TO ASSEMBLE:

PLEASE CUT OFF POWER BEFORE CONNECT THE HARD WIRE

(Professional Installation Recommended)

1. Remove shade and canopy from box, carefully unwrap.
2. Measure the distance of the holes on mounting plate then drill holes on the ceiling to insert the expansion wedge.
3. Take out the mounting plate from Canopy. Assemble the mounting plate on the expansion wedge by washers and nuts.
4. Use hooks at both ends of the metal chain to hang on the shade on Canopy.
5. Adjust the length of wire to make sure the metal chain is tight and the wire is loose. Use screw driver to fasten the wire inside the canopy.
6. Connect hard wire. Then assemble the Canopy on the mounting plate with nuts.
7. Insert Bulb (E26/Max. 40W) in the shade to finish assembling.

CARE INSTRUCTIONS:

JUST WIPE CLEAN WITH A SOFT, DRY CLOTH.

