 


# RH

## VINTAGE FRENCH FARMHOUSE PENDANT 10"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Rod (1)
- (F) Canopy Ring (1)
- (G) Cord Cover (1)  
w/ Inner Connection Rod
- (H) Cord Cover (1)  
w/ Inner Connection Rod
- (J) Cord Cover (1)  
w/ Inner Connection Rod
- (K) Cord Cover (1)  
w/ Inner Connection Rod
- (L) Cord Cover (1)  
w/ Inner Connection Rod
- (M) Shade Assembly (1)

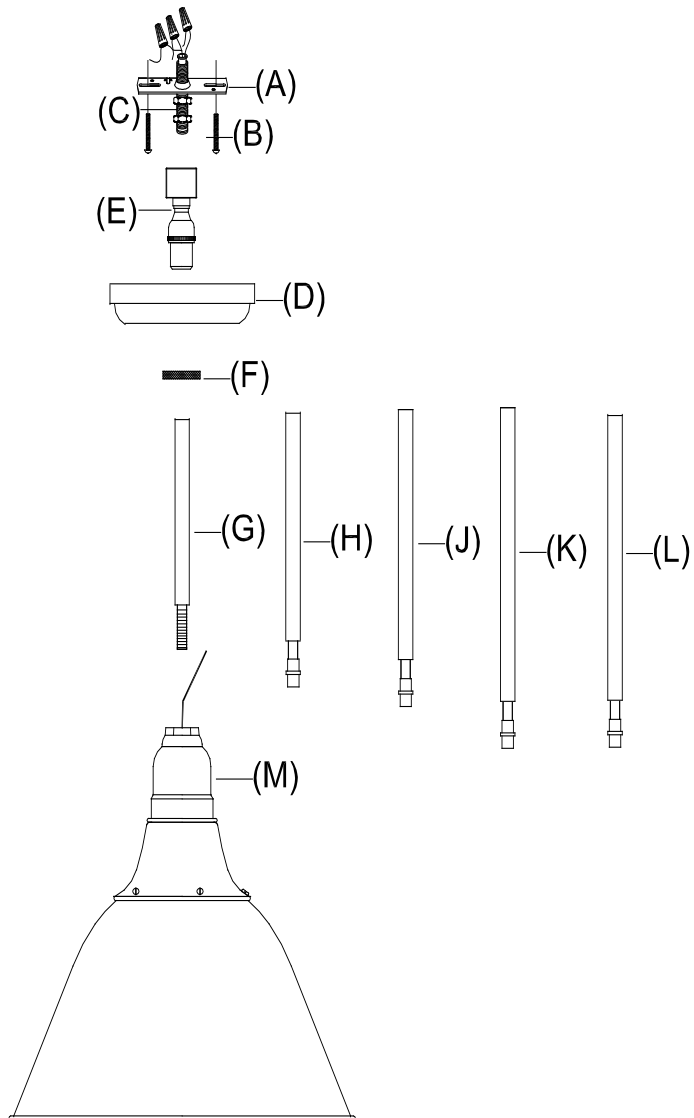

## VINTAGE FRENCH FARMHOUSE PENDANT 10"

**IMPORTANT SAFETY INSTRUCTIONS**

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 60-Watt maximum Type G19-1/2 bulb (not included) or 13-Watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.**



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

**ASSEMBLY & INSTALLATION**

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Determine the hanging length of pendant. Connect shade assembly (M) to some or all Cord Covers (G) (H) (J) (K) and (L) according to the height needed.
3. Thread Rod (E) onto the inner connection rod of the top cord cover.
4. Unscrew Canopy Ring (F) and slide Canopy Ring (F) and Canopy (D) over the cord cover.
5. Feed wires through the Cord Covers, Canopy (D), and Rod (E).
6. Place Mounting Strap (A) to ceiling outlet box with Mounting Screws (B) and insert top Threaded Nipple (C) in Mounting Strap (A).
7. Thread Rod (E) to Threaded Nipple (C).
8. Attach fixture grounding (GREEN) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
10. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
11. Raise the Canopy (D) to the ceiling and screw Canopy Ring (E) onto the Rod (E) to secure.
12. Insert the recommended bulb into socket.
13. Assembly is complete.

 
**CARE INSTRUCTIONS**

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

## VINTAGE FRENCH FARMHOUSE PENDANT 14"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Top Loop (1)
- (G) Canopy Ring (1)
- (H) Cord Cover (1)  
w/ Inner Connection Rod
- (J) Cord Cover (1)  
w/ Inner Connection Rod
- (K) Cord Cover (1)  
w/ Inner Connection Rod
- (L) Cord Cover (1)  
w/ Inner Connection Rod
- (M) Cord Cover (1)  
w/ Inner Connection Rod
- (N) Shade Assembly (1)

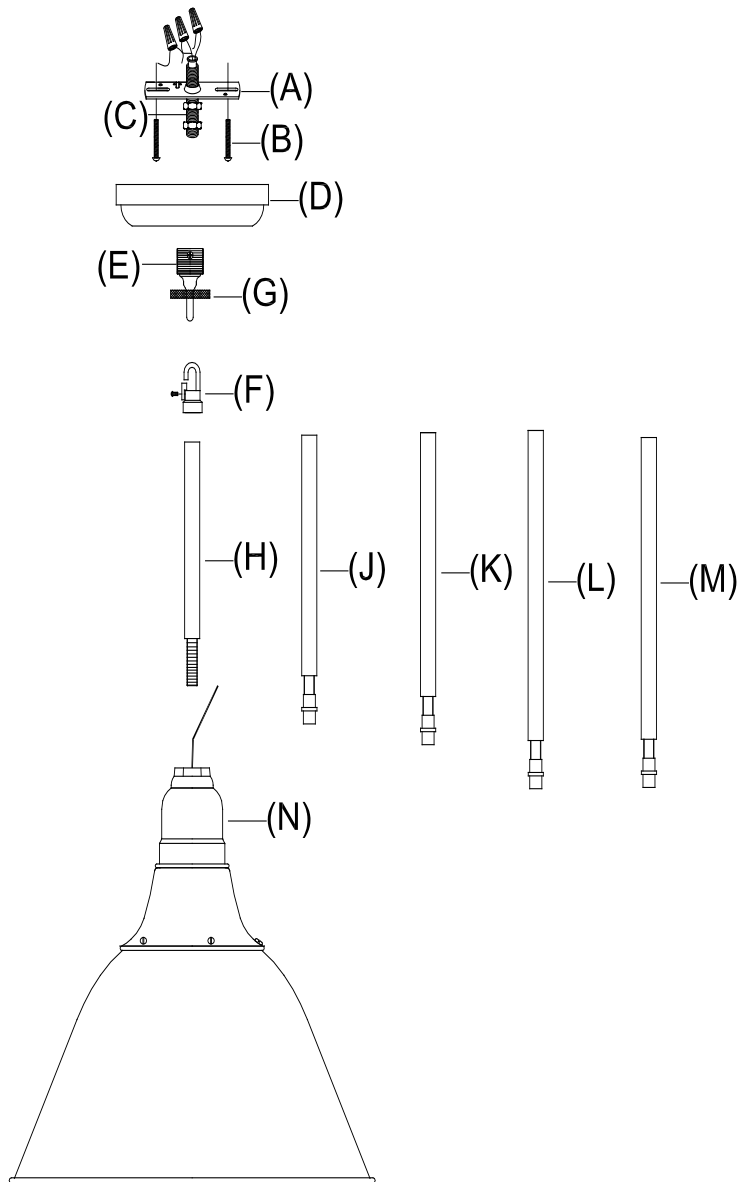

## VINTAGE FRENCH FARMHOUSE PENDANT 14"

**IMPORTANT SAFETY INSTRUCTIONS**

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 60-Watt maximum Type G19-1/2 bulb (not included) or 13-Watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.**



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

**ASSEMBLY & INSTALLATION**

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Determine the hanging length of pendant. Connect Shade Assembly (N) to some or all Cord Covers (H) (J) (K) (L) and (M) according to the height needed.
3. Thread Top Loop (F) onto the inner connection rod of the top cord cover.

**ASSEMBLY & INSTALLATION CONT.**

4. Loosen set screw on the side of Top Loop (F); remove the tab and set aside. Hook Top Loop (F) to Mounting Loop (E) and replace the tab and the set screw to lock the Mounting Loop (E) to Top Loop (F).
5. Unscrew Canopy Ring (G) and slide Canopy Ring (G) and Canopy (D) over the cord cover.
6. Feed wires through the Cord Covers, Top Loop (F), Mounting Loop (E), and Canopy (D).
7. Place Mounting Strap (A) to ceiling outlet box with Mounting Screws (B) and insert top Threaded Nipple (C) in Mounting Strap (A).
8. Attach Mounting Loop (E) to Threaded Nipple (C) and lock with the set screw at the side.
9. Attach fixture grounding (GREEN) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
11. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Raise the Canopy (D) to the ceiling and screw Canopy Ring (F) onto the Mounting Loop (E) to secure.
13. Insert the recommended bulb into socket.
14. Assembly is complete.

**CARE INSTRUCTIONS**

 
Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

# RH

## VINTAGE FRENCH FARMHOUSE PENDANT 18"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Top Loop (1)
- (G) Canopy Ring (1)
- (H) Cord Cover (1)  
w/ Inner Connection Rod
- (J) Cord Cover (1)  
w/ Inner Connection Rod
- (K) Cord Cover (1)  
w/ Inner Connection Rod
- (L) Cord Cover (1)  
w/ Inner Connection Rod
- (M) Cord Cover (1)  
w/ Inner Connection Rod
- (N) Shade Assembly (1)

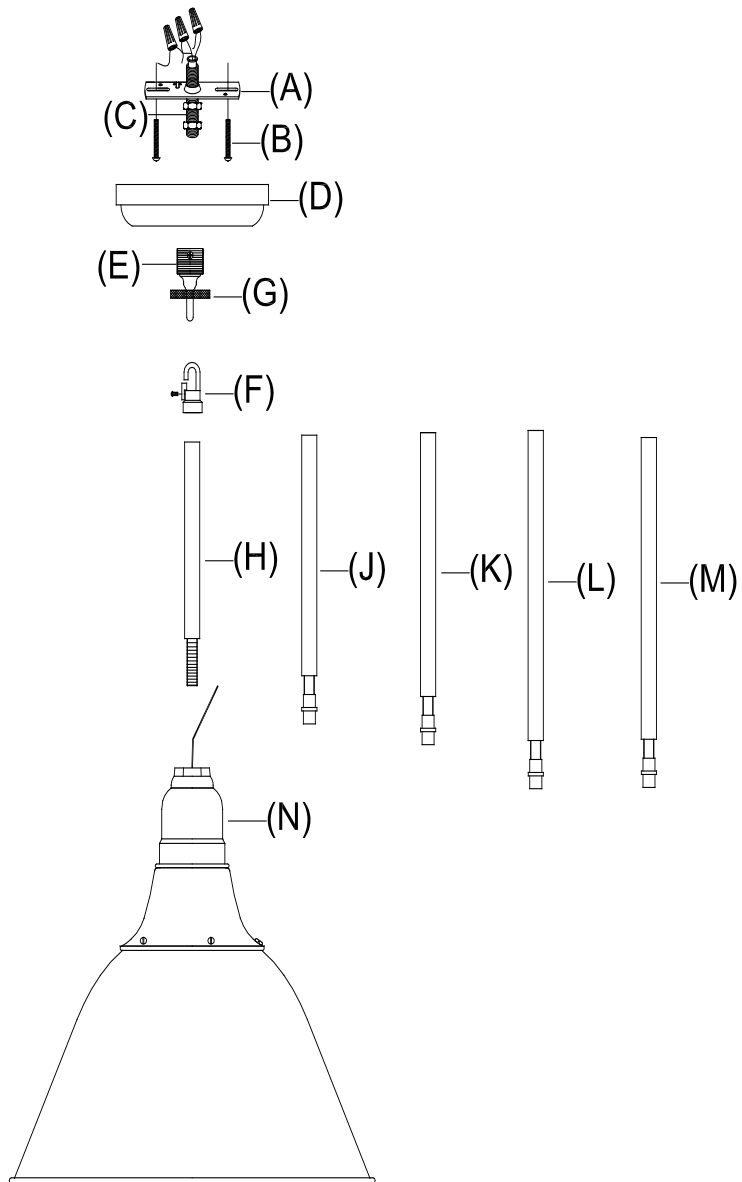

## VINTAGE FRENCH FARMHOUSE PENDANT 18"

**IMPORTANT SAFETY INSTRUCTIONS**

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 100-Watt maximum Type G30 (not included) or 23-Watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.**



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

**ASSEMBLY & INSTALLATION**

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Determine the hanging length of pendant. Connect Shade Assembly (N) to some or all Cord Covers (H) (J) (K) (L) and (M) according to the height needed.
3. Thread Top Loop (F) onto the inner connection rod of the top cord cover.

**ASSEMBLY & INSTALLATION CONT.**

4. Loosen set screw on the side of Top Loop (F); remove the tab and set aside. Hook Top Loop (F) to Mounting Loop (E) and replace the tab and the set screw to lock the Mounting Loop (E) to Top Loop (F).
5. Unscrew Canopy Ring (G) and slide Canopy Ring (G) and Canopy (D) over the cord cover.
6. Feed wires through the Cord Covers, Top Loop (F), Mounting Loop (E), and Canopy (D).
7. Place Mounting Strap (A) to ceiling outlet box with Mounting Screws (B) and insert top Threaded Nipple (C) in Mounting Strap (A).
8. Attach Mounting Loop (E) to Threaded Nipple (C) and lock with the set screw at the side.
9. Attach fixture grounding (GREEN) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
11. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Raise the Canopy (D) to the ceiling and screw Canopy Ring (F) onto the Mounting Loop (E) to secure.
13. Insert the recommended bulb into socket.
14. Assembly is complete.

**CARE INSTRUCTIONS**

 
Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

# RH

## VINTAGE FRENCH FARMHOUSE PENDANT 22"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Top Loop (1)
- (G) Canopy Ring (1)
- (H) Cord Cover (1)  
w/ Inner Connection Rod
- (J) Cord Cover (1)  
w/ Inner Connection Rod
- (K) Cord Cover (1)  
w/ Inner Connection Rod
- (L) Cord Cover (1)  
w/ Inner Connection Rod
- (M) Cord Cover (1)  
w/ Inner Connection Rod
- (N) Shade Assembly (1)

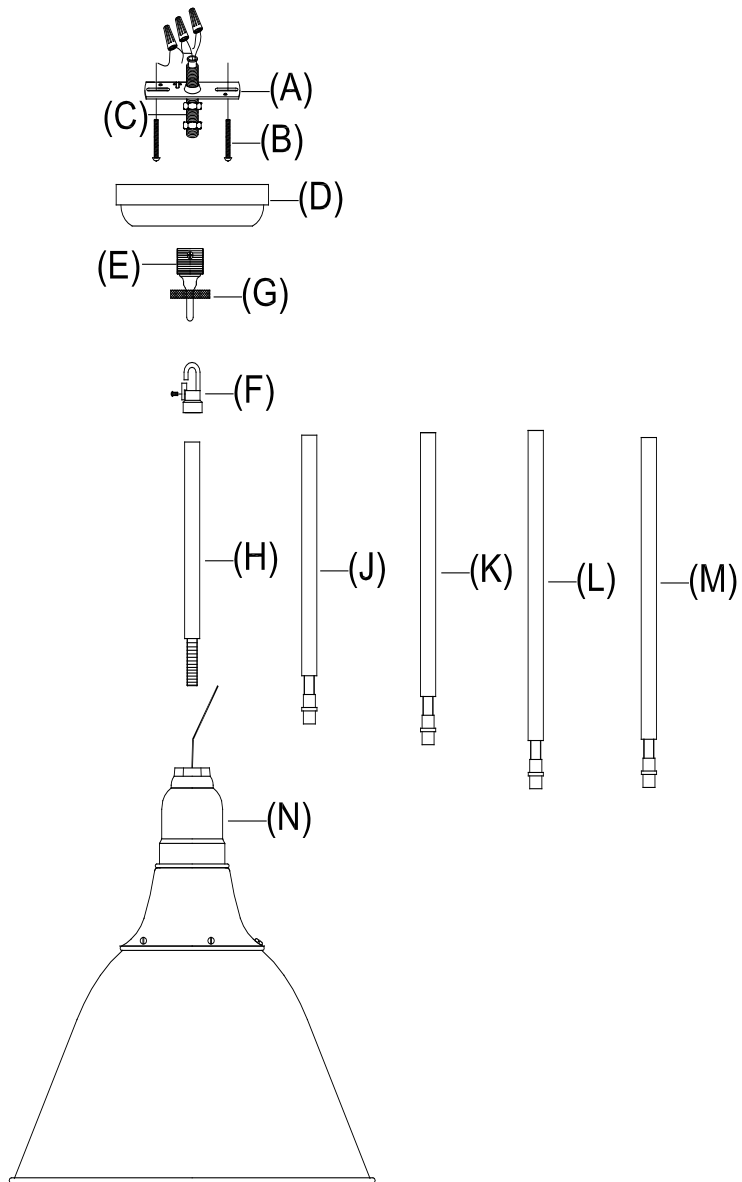

## VINTAGE FRENCH FARMHOUSE PENDANT 22"

**IMPORTANT SAFETY INSTRUCTIONS**

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 100-Watt maximum Type G30 (not included) or 23-Watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.**



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

**ASSEMBLY & INSTALLATION**

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Determine the hanging length of pendant. Connect Shade Assembly (N) to some or all Cord Covers (H) (J) (K) (L) and (M) according to the height needed.
3. Thread Top Loop (F) onto the inner connection rod of the top cord cover.

**ASSEMBLY & INSTALLATION CONT.**

4. Loosen set screw on the side of Top Loop (F); remove the tab and set aside. Hook Top Loop (F) to Mounting Loop (E) and replace the tab and the set screw to lock the Mounting Loop (E) to Top Loop (F).
5. Unscrew Canopy Ring (G) and slide Canopy Ring (G) and Canopy (D) over the cord cover.
6. Feed wires through the Cord Covers, Top Loop (F), Mounting Loop (E), and Canopy (D).
7. Place Mounting Strap (A) to ceiling outlet box with Mounting Screws (B) and insert top Threaded Nipple (C) in Mounting Strap (A).
8. Attach Mounting Loop (E) to Threaded Nipple (C) and lock with the set screw at the side.
9. Attach fixture grounding (GREEN) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
11. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Raise the Canopy (D) to the ceiling and screw Canopy Ring (F) onto the Mounting Loop (E) to secure.
13. Insert the recommended bulb into socket.
14. Assembly is complete.

**CARE INSTRUCTIONS**

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

 


# RH

## VINTAGE FRENCH FARMHOUSE PENDANT 26"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Top Loop (1)
- (G) Canopy Ring (1)
- (H) Cord Cover (1)  
w/Inner Connection Rod
- (J) Cord Cover (1)  
w/Inner Connection Rod
- (K) Cord Cover (1)  
w/Inner Connection Rod
- (L) Cord Cover (1)  
w/Inner Connection Rod
- (M) Cord Cover (1)  
w/Inner Connection Rod
- (N) Shade Assembly (1)

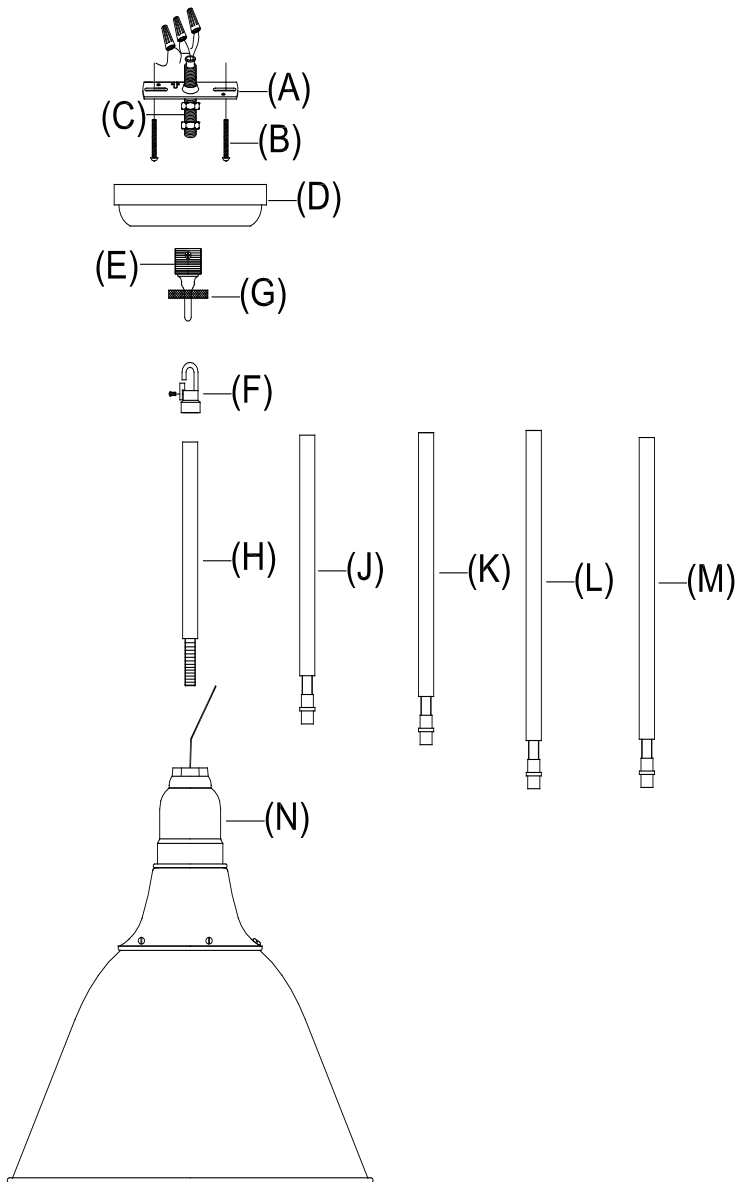

## VINTAGE FRENCH FARMHOUSE PENDANT 26"

**IMPORTANT SAFETY INSTRUCTIONS**

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 150-Watt maximum Type G30 (not included) or 42-Watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.**



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

**ASSEMBLY & INSTALLATION**

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic covering.
- Determine the hanging length of pendant. Connect Shade Assembly (N) to some or all Cord Covers (H) (J) (K) (L) and (M) according to the height needed.
- Thread Top Loop (F) onto the inner connection rod of the top cord cover.

**ASSEMBLY & INSTALLATION CONT.**

- Loosen set screw on the side of Top Loop (F); remove the tab and set aside. Hook Top Loop (F) to Mounting Loop (E) and replace the tab and the set screw to lock the Mounting Loop (E) to Top Loop (F).
- Unscrew Canopy Ring (G) and slide Canopy Ring (G) and Canopy (D) over the cord cover.
- Feed wires through the Cord Covers, Top Loop (F) Mounting Loop (E) and Canopy (D).
- Place Mounting Strap (A) to ceiling outlet box with Mounting Screws (B) and insert top Threaded Nipple (C) in Mounting Strap (A).
- Attach Mounting Loop (E) to Threaded Nipple (C) and lock with the set screw at the side.
- Attach fixture grounding (GREEN) and house grounding wire with to back plate the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
- Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
- Raise the Canopy (D) to the ceiling and screw Canopy Ring (F) onto the Mounting Loop (E) to secure.
- Insert the recommended bulb into socket.
- Assembly is complete.

**CARE INSTRUCTIONS**

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.