 
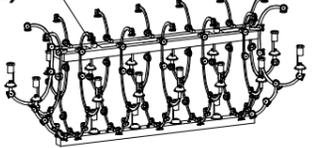


RESTORATION HARDWARE

19TH C. ROCOCO IRON & CLEAR CRYSTAL RECTANGULAR CHANDELIER 40IN

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Junction Box (Not included) 50LB. MIN.FIXTURE RATED	1
(B)		Mounting Screws (Not included)	8 Sets
(C1)		Ceiling Plate	1
(C2)		Ceiling Box	1
(C3)		Hang Straight	2
(C4)		Screw Cap	4
(D1)		Quick Link	2
(D2)		Chain	
(D3)		Quick link	
(E)		Wire Nut	3
(F)		Bulb+ Spare	18+6
(G)		Candle Sleeve	18
(H)		Body	1
(H1)		Hang Straight	

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for 18 x 25-watt maximum E12 standard bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light.
For this light at least a ceiling capacity of 69kg (151.8LB)is required.
5. The manufacturer and distributor accepts no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

Warnings:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Glass & Iron
 Height: 49.0 cm(19.2IN)
 Width: 41.0 cm(16.1IN)
 Length: 100.0 cm(40IN)
 Weight: 13.3 kg(29.2LB)
 Grounded / Hardwired

TO ASSEMBLE:




1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the screw cap (C4) from ceiling box (C2) and remove ceiling plate (C1) from ceiling box (C2).
4. Unlock quick link (D3) to attach the hang straight (H1) on the body (H).
5. Unlock quick link (D1) to attach the hang straight (C3) on the ceiling box (C2).
6. Attach the ceiling plate (C1) to the ceiling with mounting screws (B).
7. Connect the ground wire from the fixture to the ground junction box wire (Usually the green or bare wire) with a wire nut (E) and wrap the connection with electrical tape. Connect the hot wire to the hot junction box wire (Usually black or smooth) with a plastic wire nut (E) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (Usually white or ribbed) with a plastic wire nut (E) and wrap the connection with electrical tape.
8. Fix the ceiling box (C2) to the ceiling plate (C1) by fasten the screw cap (C4).
9. Position glass dishes (9) and candle sleeves (G), and hang the crystals as per drawing on left.
10. Fasten lightbulbs (F) to the lampholders.
11. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.

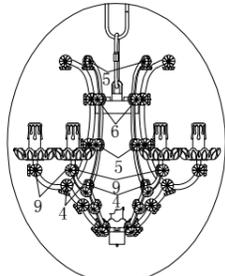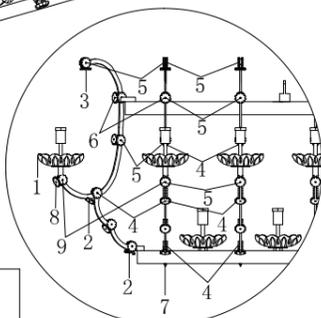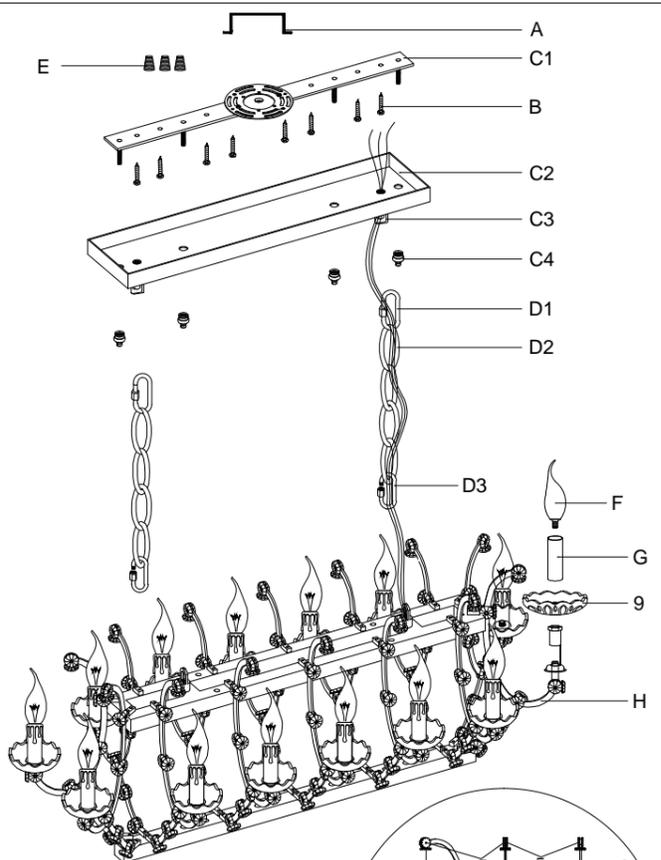

1 14mmx1 pcs  50x38mm 56pcs	2 14mmx2 pcs  63x43mm 28pcs	3  63x43mm 14pcs	4 14mmx9 pcs  63x43mm 34pcs	10  Ø85x23mm 18pcs
5 14mmx7 pcs  63x43mm 32pcs	6 14mmx5 pcs  63x43mm 6pcs	7 14mmx3 pcs  63x43mm Double Side 5pcs	8 14mmx1 pcs  63x43mm 14pcs	9 14mmx1 pcs  63x43mm 6pcs