


# RESTORATION HARDWARE

## FRENCH CINEMA SINGLE FLOOR LAMP

### PARTS ENCLOSED

- |                       |                       |
|-----------------------|-----------------------|
| (A) Light fixture (1) | (G) Lamp base (1)     |
| (B) Mesh cover (2)    | (H) Hex head bolt (1) |
| (C) Thumbscrews (5)   | (J) Allen Wrench (1)  |
| (D) Inner pole (1)    | (K) Felt paper (1)    |
| (E) Rod wrench (1)    | (L) Light bulb (8)    |
| (F) Outer pole (1)    |                       |

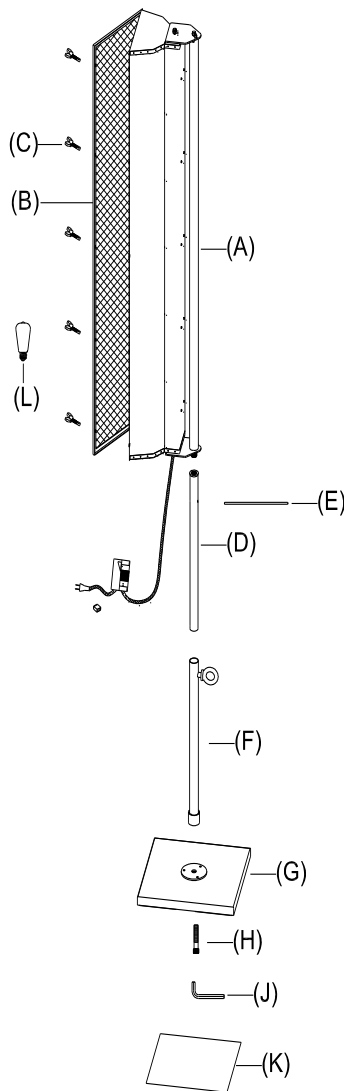

### IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for eight (8) 40-watt maximum TYPE A standard bulb (L) (included) OR eight (8) 13W Compact Fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

### TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Thread inner pole (D) to the bottom nipple of light fixture (A), tighten with rod wrench (E).
3. Slide out pole (F) to inner pole (D).
4. Insert out pole (F) with inner pole (D) into center hole of lamp base (G), secure by inserting Allen bolt (H) to the bottom opening of inner pole (D) and tighten with Allen Wrench (J) provided.
5. Remove backing sheet from felt paper (K), and affix the felt paper (K) underneath the lamp base (G).
6. Open mesh cover (B) by removing thumbscrews (C) from light fixture (A).
7. Insert the recommended bulb into threaded socket.
8. Close mesh cover (B) by tighten thumbscrews (C).
9. Plug into proper electrical outlet and test fixture.
10. Assembly is complete.

### CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.