 
# **RESTORATION HARDWARE**

## DIRECTOIRE COLUMN FLOOR LAMP

#### PARTS ENCLOSED

A) FINIAL B) RISER

C) 23 WATT CFL BULB 2 PCS



#### IMPORTANT SAFTY INSTRUCTION:

For safety purposes, this lamp is equipped with a polarized plug (one blade wider than the other). If the plug does not fit securely into outlet, do not force it, contact a professional electrician. Use the plug with an extension cord, only if it can be fully inserted into the cord's socket. Never alter the plug in any way. This fixture has been rated for up to (1) 100 - watt maximum TYPE A bulb or CFL bulb To avoid the risk of fire, do not exceed the recommended wattage.

### **WARNINGS:**

- 1. All wires are connected.
- 2. Do not remove the lamp from the packaging by pulling on the power cord, as a bad connection may result.
- 3. Do not connect electricity until your lamp is fully assembled.
- 4. To reduce the risk of fire, electical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- 5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
- 6. Keep flammable materials away from lit bulb.

#### TO ASSEMBLE:

- 1. Carefully unpack all the contents from the box & remove all wrapping on all parts.
- 2. Insert the recomended bulb into the threaded socket
- 3. Place the riser (B) on the top of the lamp center (D) and tight it in clockwise direction.
- 4. Remove the finial (A) from the riser by unscrewing in anty clockwise direction.
- 5. Place the shade (not included) on of the riser (B)
- 6. Reattach the finial (A) and tighten to secure the shade by screwing in clockwise direction.
- 7. Plug into proper electrical outlet and test fixture.
- 8. Lamp is now ready for consumer use.

#### **CARE INSTRUCTIONS:**

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints,wipe gently with a soft, clean cloth.