

RESTORATION HARDWARE

1970s ITALIAN TENSION POLE FLOOR LAMP

PARTS ENCLOSED:

- (A) BOTTOM STEM
- (B) BOTTOM PLATE
- (C) UPPER STEM
- (D) UPPER PLATE
- (E) SHADE LARGE
- (F) SHADE SMALL
- (G) ADJUSTABLE ARM
- (H) NOTCH 'A' & 'B'
- (I) RING LOCK
- (J) ELECTRICAL CORD
- (K) CFL - 13W + EDISON FROST BULB 60W
- (L) FINIAL
- (M) VIEW SMALL SHADE REMOVED
- (N) SCREWS
- (O) SHADE FIXING HANDLE

TOOLS REQUIRED:

- Screw driver
- Drill
- Hammer
- Wall anchors

IMPORTANT SAFETY INSTRUCTIONS:

- These instructions are provided for your safety. It is very important that they are read carefully before beginning the installation of your fixture.
- For your safety, it is strongly recommended, that two people are present to assemble the lamp.
- This fixture has been rated up to (3) 60W max type A bulbs or (3) 13W CFL.
- To avoid the risk of fire, do not exceed the recommended wattage.
- If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. Requirement.
- If there are any questions, contact a licensed electrical contractor.

WARNINGS:

- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is on. Do not look directly at lit bulb.
- Keep flammable material away from lit bulb.
- This lamp has spring loaded stem. Please take extra care while fixing.
- Please take extra care while assembling.

TO ASSEMBLE:

1. Unpack all the parts and keep on a soft surface.
2. Insert (C) Upper stem into (A) Bottom stem. Unscrew the (L) Finial remove (F) Shade small. Install (K) CFL / Bulbs three numbers and fix the back the (F) Shade small screw back with (L) Finial.
3. Measure the height of the ceiling where the lamp to be fixed. Minimum height required to fix the lamp is 107" and maximum height is 125". Adjust the height by turning clockwise for decreasing and counterclockwise for increasing the height. If the height of ceiling is 115" then adjust the stem to the length 120" (add 5" for the spring tension)
4. Hold the lamp and place the (D) Upper plate to ceiling and lift the (A) Bottom stem and push the lamp to stand straight.
5. Mark the holes in the (D) Upper plate and (B) Bottom plate to drill the holes for (N) Screws. Customer should use appropriate anchors as per their requirement.
6. Lift the lamp and remove it from ceiling and place it on the soft surface.
7. Drill the holes in the ceiling and floor to fix the lamp. Instal the fasteners.
8. Loosen the (H) Notch A & B and insert the (C) Upper Stem through the (H) Notch A & B of (G) Adjustable Arm and Tighten back. Attach (A) Bottom Stem to (C) Upper Stem.
9. Remove (O) Shade fixing Handle and fix the Shades with arm (as shown).
10. Adjust the height of (G) Adjustable arm by loosening of the (H) Notch A & B tighten back at the desired height.
11. Fix the (I) Ring Lock under the (H) Notch A & B and tighten the screws for additional safety.
12. Adjust the direction of the (G) Adjustable arm by loosening (H) Notch A & B and tighten back at the desired direction.
13. The length of the (G) Adjustable arm can be extended/reduced by pulling/pushing the inner pipe outward/inward. Ensure that the (J) Electrical cord should be pushed/pulled while extending/reducing the length of Adjustable arm
14. The direction of shade also can be set by loosening the (O) Shade Fixing Handle and tighten back after getting desired direction.
15. Insert the plug of Electrical cord to electrical socket.

CARE INSTRUCTIONS:

1. To clean, use soft cloth only. Do not use any chemical or abrasive cleaners.



Steps for fixing shade with arm

