

RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) CROSS BAR
- (B) MOUNTING PLATE
- (C) ALLEN SCREW
- (D) ALLEN KEY
- (E) KNOB
- (F) LAMP ARM
- (G) POWER CORD
- (H) IN LINE SWITCH

IMPORTANT SAFETY INSTRUCTIONS :

- These instructions are provided for your safety. It is very important that they are properly read **completely** before beginning the installation of your fixture.

WARNINGS :

1. For safety purpose this lamp is equipped with a polarized plug (one blade is wider than the other).
2. If the plug does not fit securely into the outlet into the outlet, do not force it – contact a professional electrician.
3. Use the plug with an extension cord only if it can be fully inserted into the cord socket. Never alter the plug in anyway.
4. This fixture is rated for max wattage of 40W, Type CA Incandescent Bulb.
5. Turn off power before replacing the bulb, making sure, the bulb had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.


JULIAN SWING ARM SCONCE

TO ASSEMBLE :

1. Shut off electrical supply at main fuse box / circuit breaker.
2. Remove all parts from carton. Do not throw away any parts.
3. Affix both **Cross Bars (A)** directly to the Wall by using screws provided.
4. Fix both **Mounting Plates (B)** on both the **Cross Bars (A)** by tightening the **Allen Screws (C)** after matching the holes of **Mounting Plates (B)** over the **Cross Bars (A)**.
5. Place the shade (not included) onto the lamp holder.
6. To adjust the lamp height loosen the **Knob (E)** and move up and down the **Lamp Arm (F)** and tight the **Knob (E)** at desired height.
7. Insert a 40-watt Type CA bulb (not included) into Threaded socket.
8. Adjust the shade position by swinging the **Lamp arm (F)** if needed.
9. Plug the **Power Cord (G)** into proper electrical outlet and ON the **In Line Switch (H)** and test the fixture.
10. Assembly is complete.

SHADE INSTRUCTIONS :

To reduce the risk of fire, use maximum 40W Type CA Bulb Incandescent bulb.

1. Use Open Top, Open Bottom type of shade and dimensions of the shade is as specified.
 - Top Dia – 3.50 inch
 - Bottom Dia – 10.0 inch
 - Slant Height – 4.70 inch
2. Do not use the shade in this position. 

Shade is made of Fiber.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.

