


RH

ATELIER WALL LAMP

PARTS ENCLOSED:

- (A) Mounting Plate (1)
- (B) Backplate (1)
- (C) Backplate Screws (3)
- (D) Mounting Screws (2)
- (E) Shade (1)
- (F) Adjustment Key (3)
- (G) Wire Nuts (3)

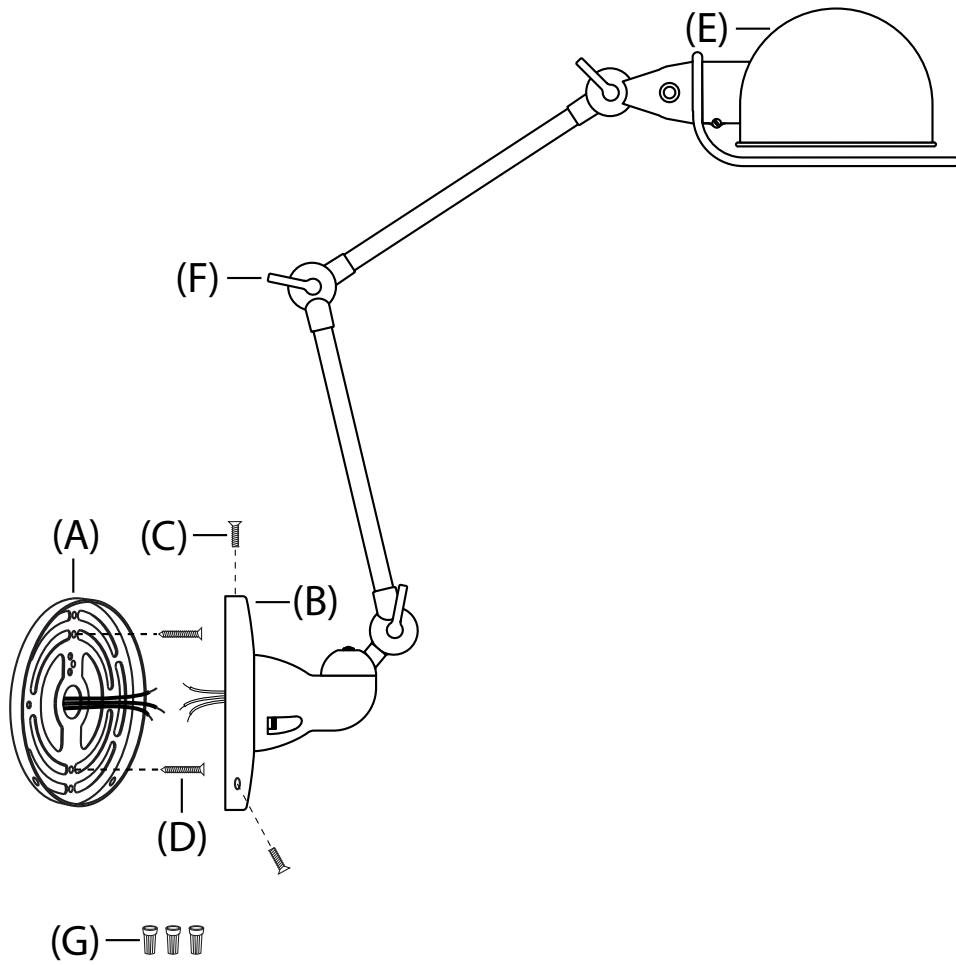

IMPORTANT PLEASE READ**WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.****SAFETY INSTRUCTIONS:**

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.


This fixture has been rated for up to one (1) 40-watt maximum G16.5 candelabra base bulb or one (1) 4.7-watt LED candelabra base bulb. To avoid risk of fire, do not exceed the recommended wattage.

If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.


WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from the lit bulb.

This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning, or otherwise touching this light fixture.

 **WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

 **WARNING: STRANGULATION HAZARD**
Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION:

1. SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.
2. Remove mounting plate (A) from backplate (B) by removing screws (C). Set screws (C) aside.
3. Carefully pull the wiring from wall outlet box. Thread the wires through the center hole in mounting plate (A).
4. Affix mounting plate (A) to wall outlet box with mounting screws (D) provided.
5. Make proper electrical connections, as described in steps 6 - 8. A LICENSED ELECTRICIAN IS RECOMMENDED.
6. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (G) and tightly wrap the connection with electrical tape.
7. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (G) and tightly wrap the connection with electrical tape.
8. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (G) and tightly wrap connection with electrical tape.
9. Slide backplate (B) over mounting plate (A). Thread screws (C) into vacant holes at the top and bottom of backplate (B) to secure the fixture to the mounting surface.
10. Insert one (1) 40-watt maximum G16.5 candelabra base bulb or one (1) 4.7-watt LED candelabra base bulb into socket, located inside shade (E).
11. Reconnect main electrical supply at the fuse box/circuit breaker and test the fixture.
12. To adjust the position of the lamp, loosen adjustment key (F) and carefully move the parts to the desired location. Tighten adjustment key (F) to secure the position of the lamp. Repeat as necessary.

CARE INSTRUCTIONS:

Wipe clean with a soft, dry cloth or static duster. Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.