


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Inner Threaded Pole (1)
- (D) Canopy (1)
- (E) (F) (G) Cord Cover (3)
- (H) Fixture base (1)
- (J) Socket Housings (2)
- (K) Thumbscrews (6)
- (L) Glass Shades (2)

1950s FACTORY SCISSOR PENDANT

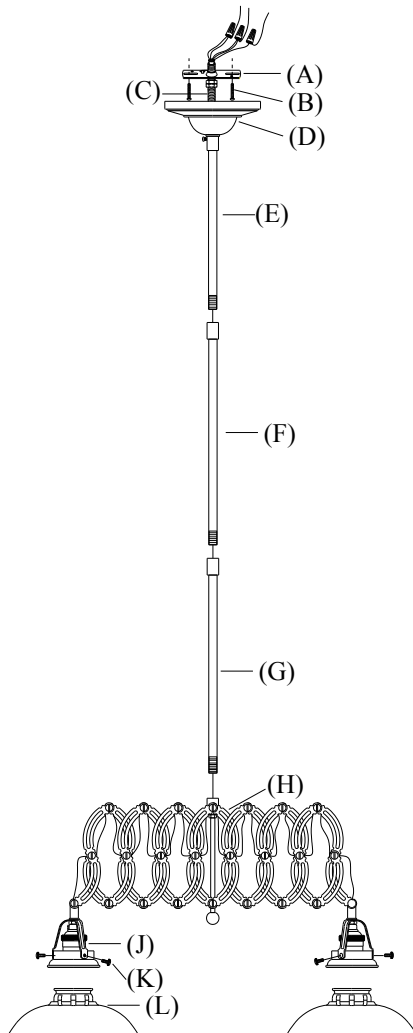

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to one (2) 40-watt maximum Type G light bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb.
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the pendant will be installed.
3. Attach cord cover (E) with canopy (D) into top of cord cover (F) by turning (E) in counter-clockwise direction.
4. Attach cord cover (F) into top of (G) by turning (F) in counter-clockwise direction, and attach cord cover (G) into top opening of fixture base (H) by turning (G) in counter-clockwise direction.
5. Attach mounting strap (A) to mounting outlet box with mounting screws (B).
6. Loosen set screw at side, slid canopy (D) and cord cover (E) onto inner threaded pole (C).
7. Insert inner threaded pole (C) with the whole fixture in mounting strap (A).
8. Attach the fixture ground wire and house ground wire (usually green or bare wire) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
10. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
11. Tuck these wire connections neatly into the ceiling outlet box.
12. Carefully attach the canopy (D) with cord cover (E) to the ceiling outlet box and secure with set screw at side.
13. Loosen the thumbscrews (K), place the glass shades (L) to socket housings (J) and secure with thumbscrews (K). **DO NOT OVER-TIGHTEN OTHERWISE THE SHADE WILL BREAK.**
14. Insert the recommended bulbs into sockets.
15. Assembly is complete.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.