


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED

- | | |
|------------------------|----------------------|
| (A) Mounting Strap (1) | (I) Upper pole |
| (B) Mounting Screw (2) | (J) Lower pole |
| (C) Nipple (1) | (K) Fixture Base (1) |
| (D) Canopy (1) | (L) Support rods (6) |
| (E) Mounting Loop (1) | (M) Glass Shade (2) |
| (F) Canopy Ring (1) | (N) Ring (2) |
| (G) Washer (1) | (O) Cap Nut (6) |
| (H) Side Screw (1) | |

KEYNES PRISM DOUBLE PENDANT

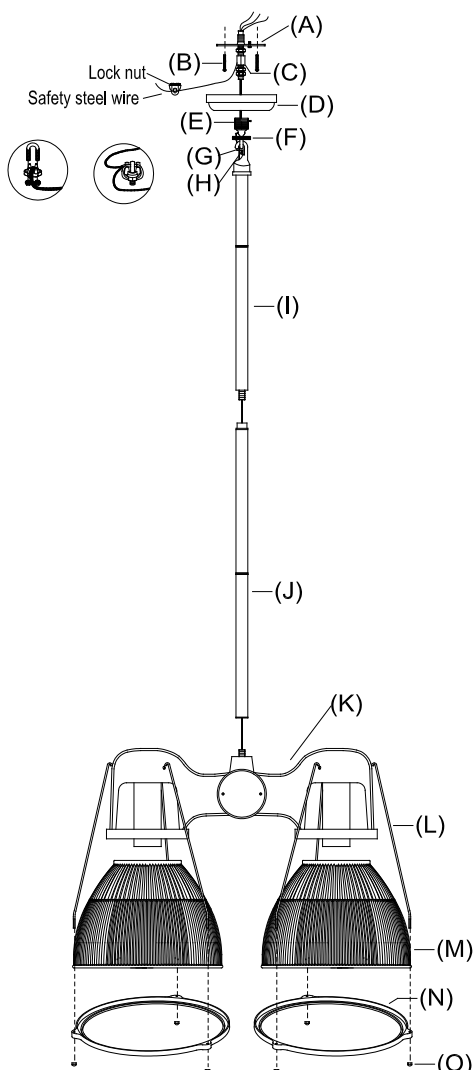

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to one (1) 100-watt maximum Type A bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.

IMPORTANT: For a safe and secure installation, please ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.

TO ASSEMBLE:

1. Turn off the breaker to the junction box where the fixture will be installed.
2. Carefully remove all parts from the box and remove all plastic covering.
3. Attach first glass shade (M) to the ring (N) carefully, letting three support rods (L) pass through the holes on edge of ring (N) and secure with cap nuts (Q). Repeat for 2nd shade.
4. Letting socket pass through the hole on top of 1st glass shade (M), attach support rods (L) to the holes on fixture base (K) to raise glass shade. Repeat for 2nd shade assembly.
5. Attach lower pole (J) to threaded nipple on top of fixture base (K) by turning in counter-clockwise direction.
6. Attach upper pole (I) into top opening of (J) by turning (I) in counter-clockwise direction.
7. Slip canopy ring (F) and canopy (D) over the upper end of the chain mounting loop (E),
8. Attach upper pole (I) to the hook of mounting loop (E), and insert side screw (H) followed with washer (G)
9. Attach mounting strap (A) to mounting outlet box with mounting screws (B) and insert top thread nipple (C) in mounting strap (A).
10. Attach mounting loop (E) to thread nipple (C) and tighten the set screw.
11. Wrap both fixture safety cable and ceiling safety cable to lock nut and secure with nuts as shown.
12. Attach the fixture ground wire and house ground wire (usually green or bare wire) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
13. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED**
14. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
15. Tuck these wire connections neatly into the ceiling outlet box.
16. Raise the canopy (D) to the ceiling and screw canopy ring (F) onto the mounting loop (E) to secure.
17. Insert the recommended bulb into the socket.
18. Restore power to the junction box and test the pendant fixture.
19. Assembly is complete.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.