


RESTORATION HARDWARE

JASPER FLOOR LAMP

PARTS:

- | | |
|-----------------------------|-----------------------|
| (A) Finial | (E) Pull Chains |
| (B) Shade (sold separately) | (F) Polarized Plug |
| (C) Shade Riser | (G) Plug Cover |
| (D) Socket Housing | (H) 23W CFL bulb (X2) |

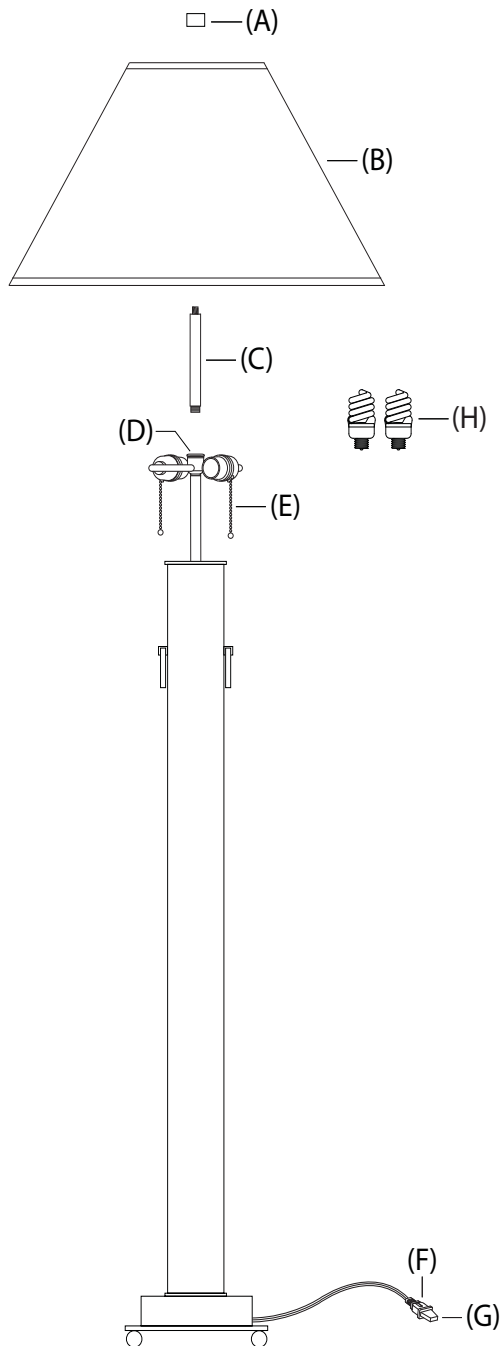

IMPORTANT SAFETY INSTRUCTIONS:

1. These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
2. This lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into the outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
3. This fixture has been rated for up to two (2) 100-watt maximum TYPE A, medium base light bulbs or two (2) 23-watt, medium base CFL bulbs (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulbs.
2. Do not touch bulbs when fixture is turned on. Do not look directly at lit bulbs.
3. Keep flammable materials away from lit bulbs.

TO ASSEMBLE:

NOTE: Do not connect the electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials. Place lamp base on a level surface.
2. Remove finial (A) from the top of shade riser (C).
3. Thread the bottom of shade riser (C) onto socket housing (D).
4. Place shade (B) onto shade riser (C).
5. Thread finial (A) onto shade riser (C) to secure shade (B) to lamp.
6. Install two (2) 23-watt maximum medium base CFL bulbs (H) into sockets.
7. Remove plug cover (G) from polarized plug (F).
8. Insert polarized plug (F) into wall outlet.
9. Control power to the fixture using pull chains (E).

CARE INSTRUCTIONS:

1. Wipe clean with a soft, dry cloth or static duster.
2. Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.