


RESTORATION HARDWARE

SHERMAN FLOOR LAMP

PARTS ENCLOSED

- (A) Threaded Ring
- (B) Shade
- (C) Metal Ring
- (D) Plug Cover

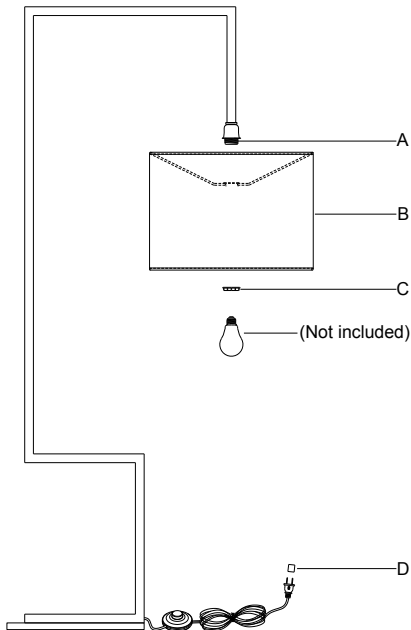

IMPORTANT SAFETY INSTRUCTIONS

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to one (1) E26 100-WATT MAX. TYPE A BULB (not included) OR 23W CFL bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

1. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.
3. Do not touch bulb when fixture is turned on or look directly at lit bulb.
4. Keep flammable materials away from lit bulb.
5. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!

1. Carefully remove all parts from the box and remove all plastic covering.
2. Insert shade (B) to threaded ring (A) and secure by metal ring(C).
3. Insert bulb (not included) into socket.
4. Remove red protective plug cover (D) from plug.
5. Plug into proper electrical outlet and test fixture.
6. Assembly is complete.

CARE INSTRUCTIONS

Wipe all surfaces with a soft dry cloth. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.