


# BISTRO SCONCE ASSEMBLY INSTRUCTIONS

RESTORATION  
HARDWARE

## Important Safety Instructions:

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture. We strongly recommend that a professional electrician install all direct wire fixtures.

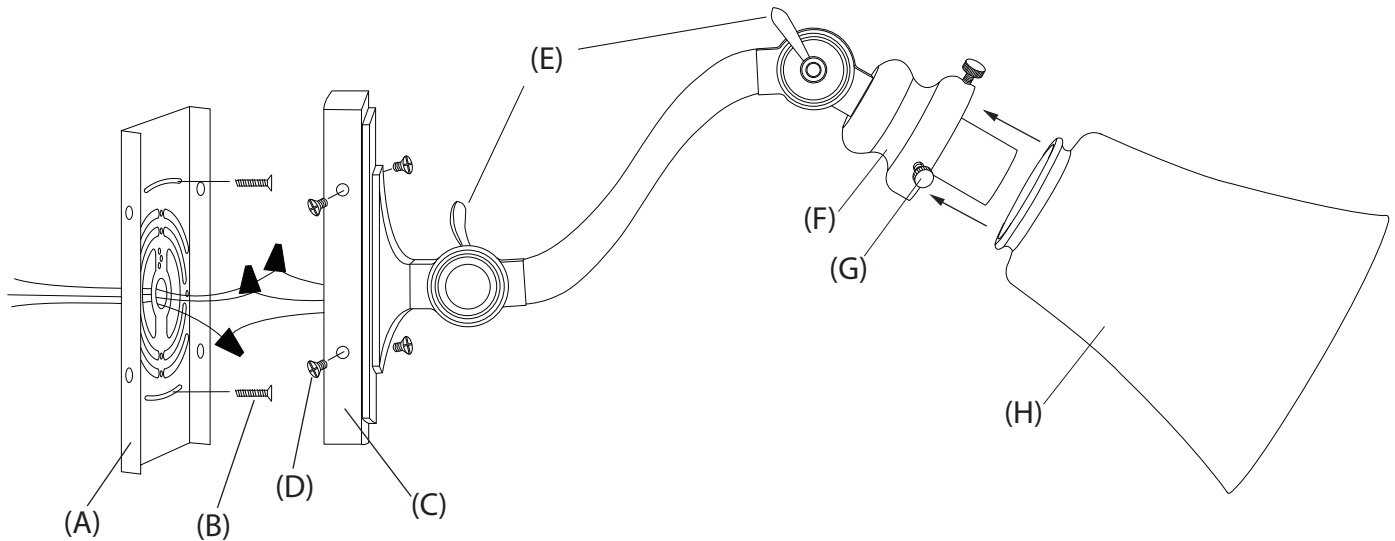

## Installation Instructions:

- 1) **SHUT OFF MAIN ELECTRICAL SUPPLY AT THE BREAKER ON THE WALL.**
- 2) Remove the mounting plate (A) from the base of the lighting fixture (C) by removing the base screws (D).
- 3) Gently pull the wiring from the wall outlet box and allow the wires to hang. Thread the wires through the center hole of the mounting plate (A).
- 4) Affix the mounting plate to the wall outlet box with the mounting plate screws provided (B).
- 5) To connect wires, remove the plastic protector. Connect the ground wire (GREEN) of the fixture to the green ground wire from the outlet box (usually green) and tighten with a screwdriver. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 6) Connect the neutral (WHITE) fixture wire from the lamp fixture base to the neutral (usually white) outlet wire. Fasten the 2 wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
- 7) Repeat this procedure with the hot (BLACK) wires. Always make sure that no wire strands are left outside the connectors. **DO NOT REVERSE THE HOT AND THE NEUTRAL CONNECTIONS OR ELSE SAFETY WILL BE COMPROMISED!**
- 8) Attach the lighting fixture base (C) to the affixed mounting plate by aligning the holes and inserting the base screws (D). Tighten with a screwdriver.
- 9) Loosen shade holding screws (G) and insert the neck of the glass shade (H) into socket cup (F) and tighten with shade holding screws (G). Make sure that the groove of the glass neck is locked in evenly by the screws.
- 10) Insert light bulb Type A 60W Max into socket.

## Adjustment Instructions:

- 1) Loosen the adjustment keys (E) by turning counter - clockwise.
- 2) Adjust height by swinging lamp arm to the desired position.
- 3) Secure by turning adjustment keys (E) clockwise to tighten.